



Logitech Harmony Touch Screen Replacement

If you find that your remote control...

Written By: Nicholas Townsend



INTRODUCTION


If you find that your remote control touchscreen has stopped working correctly or has been damaged, you may need to replace it in order to continue using the device. This guide will help you to access the touchscreen of the Logitech Harmony remote universal.

TOOLS:


[Outil pour ouvrir iFixit](#) (1)

[Tournevis cruciforme #00](#) (1)

Step 1 — Screen


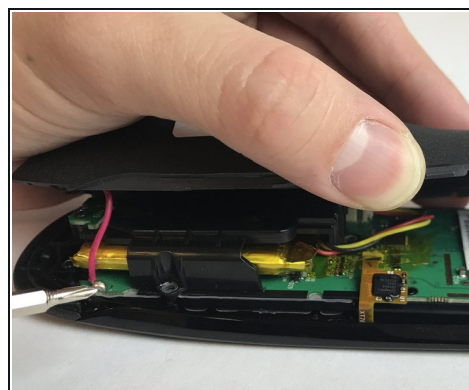


- Open the latch that accesses the charging port.
- Remove the black sticker and remove the screw with the indicated screw driver.
- Take the plastic opening tool and run it down the side of the remote to pop the case open.

 While doing this step there are three wires that connect the two pieces, be sure not to rip them out.



- Detach the white clamp to partially disconnect the case from the motherboard.

Step 2

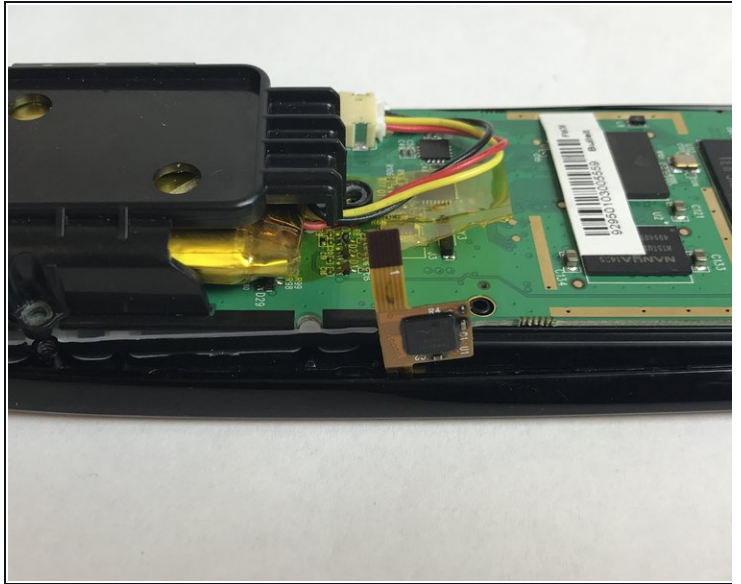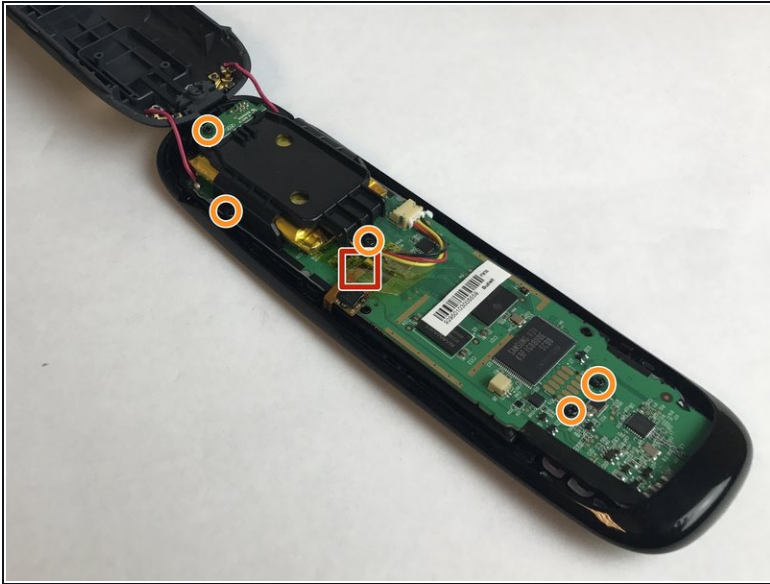


- Peel back thin yellow plastic film and detach the clip found underneath.
- Use a Phillips #00 to remove the screws that connect the motherboard to the case.

Step 3

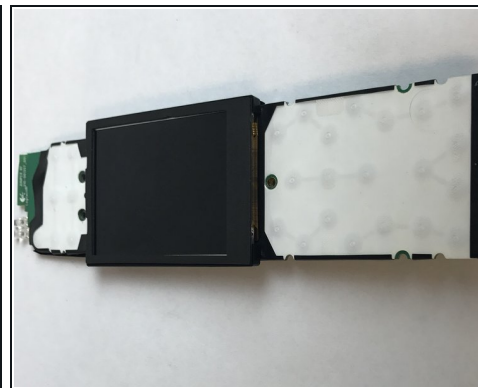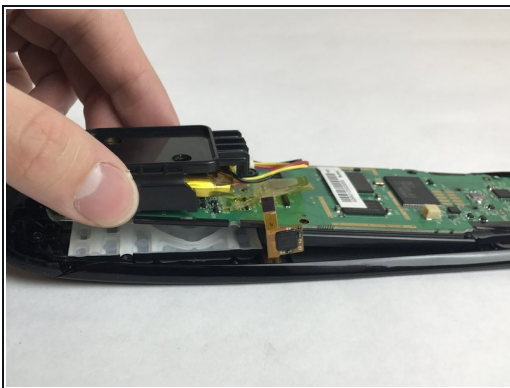

- Carefully remove the motherboard from the top piece of the case.
 - ⓘ The motherboard is connected to the bottom part of the case.
 - ⓘ You should be able to access the screen which is located on the back of the motherboard.

Step 4

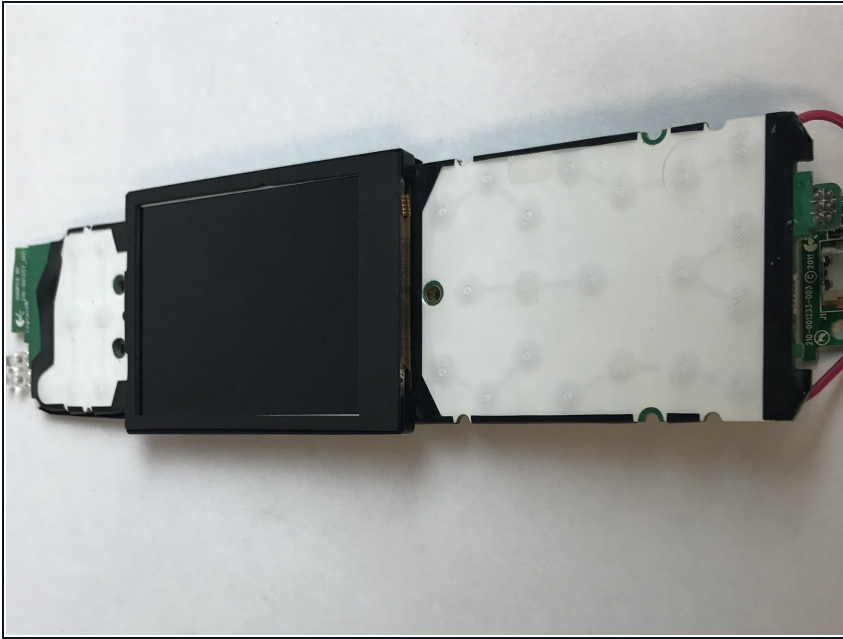

- Separate the screen from the motherboard.

To reassemble your device, follow these instructions in reverse order.