



# HP G62-340US Hard Drive Replacement

A brief guide on how to remove the hard drive from an HP G62-340.

Written By: Yun Yang



---

## INTRODUCTION


A brief guide on how to remove the hard drive from an HP G62-340.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Hard Drive

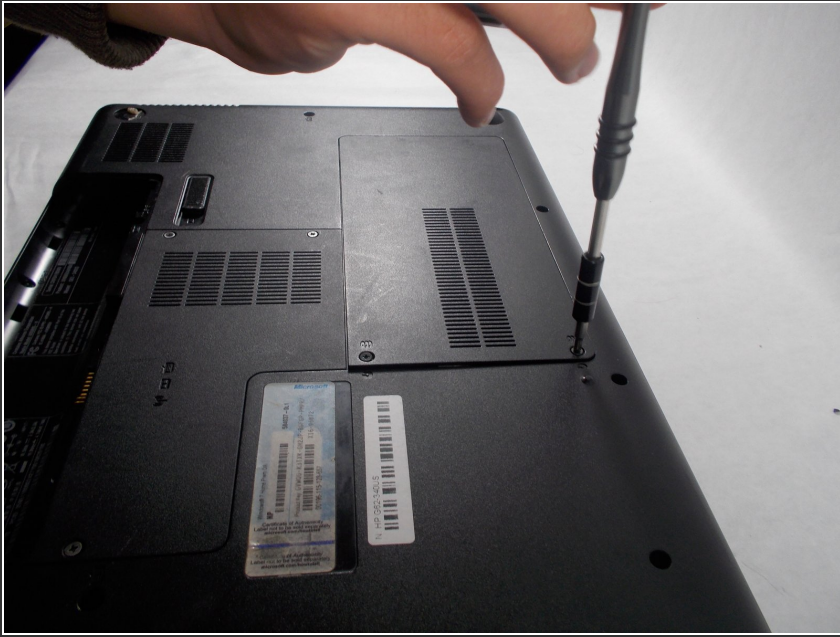



- Turn off the computer and disconnect the charging cable from the computer.
- Turn your laptop over and locate the hard drive module compartment.

## Step 2




- Use a screwdriver to loosen the two Phillips PM2.5x6.0 captive screws on the hard drive cover.
- Lift the left side of the hard drive cover and remove the cover.

## Step 3

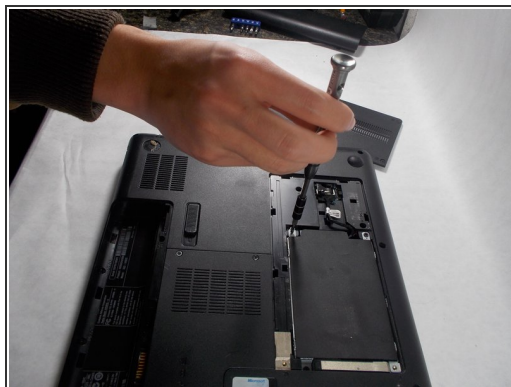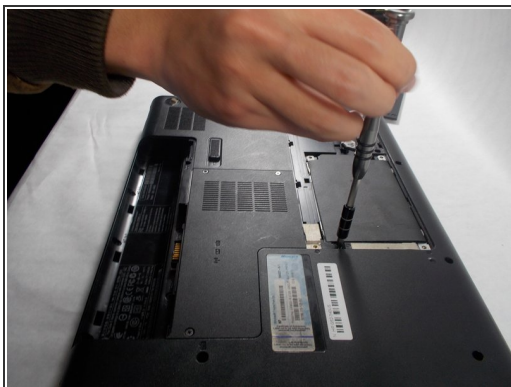

- Use a screwdriver to remove the three Phillips PM3.0x4.0 screws on the hard drive.


## Step 4

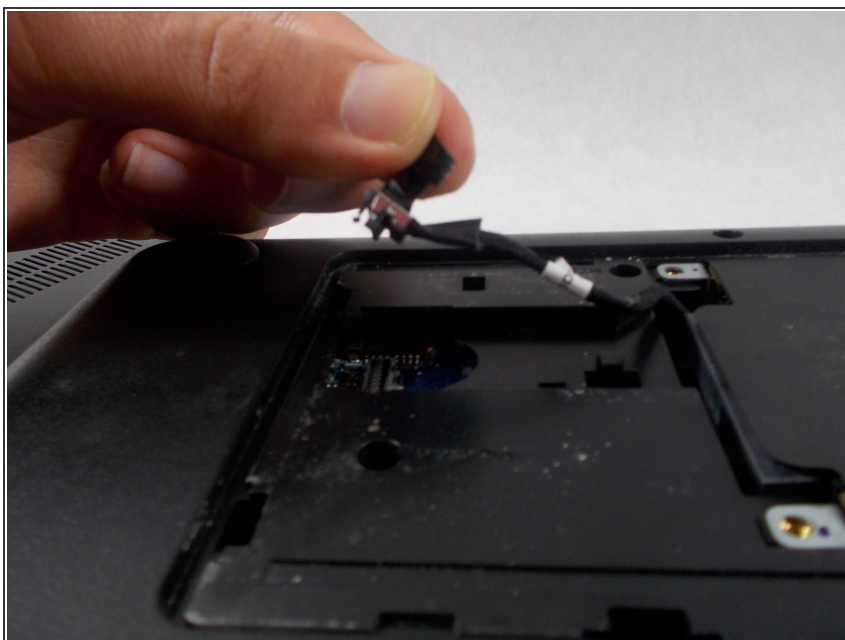

- Disconnect the hard drive cable from the system board and gently remove the hard drive.



## Step 5

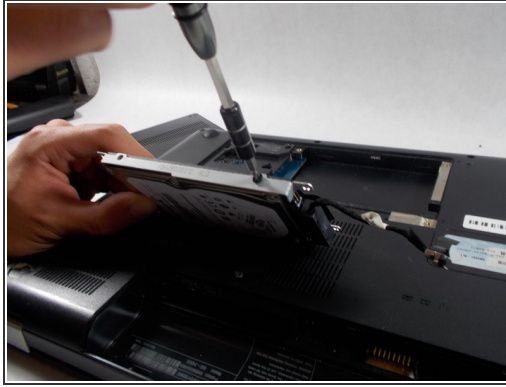

- Remove the 4 screws from the hard drive bracket and separate it from the hard drive.

To reassemble your device, follow these instructions in reverse order.