



HP G60 RAM Replacement

Upgrade your RAM for boost the speed of your computer

Written By: jimenezser






PARTS:

- [PC2-5300 2 GB RAM Chip](#) (1)
-

Step 1 — Battery

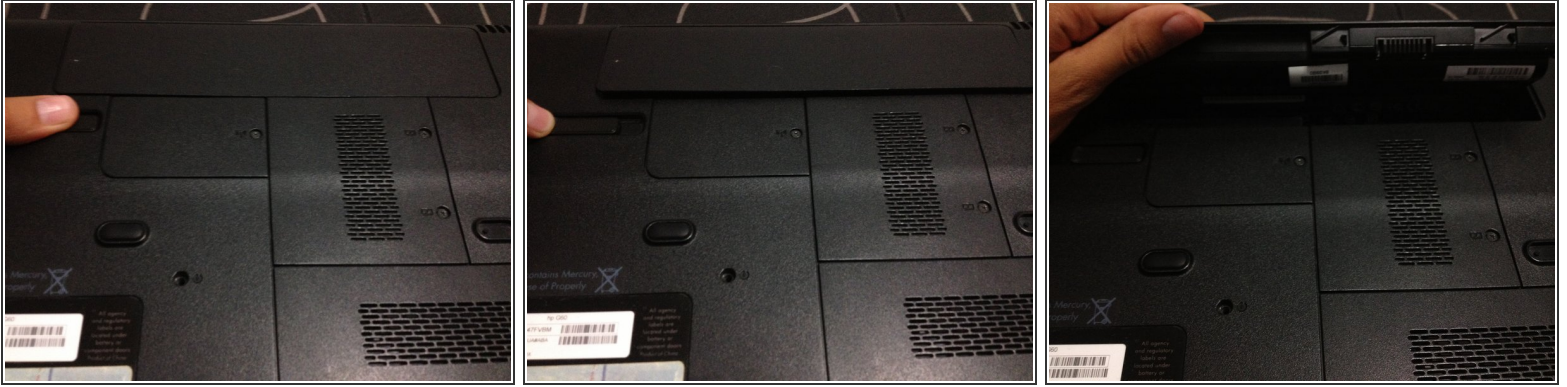




- First, you should to remove the battery to avoid electric shocks
- Slide and unlock the battery, then, lift it

Step 2 — RAM cover




- Remove the two screws with a not too large screwdriver
- Now lift the cover, the screws are part of the cover

Step 3 — Eject RAM

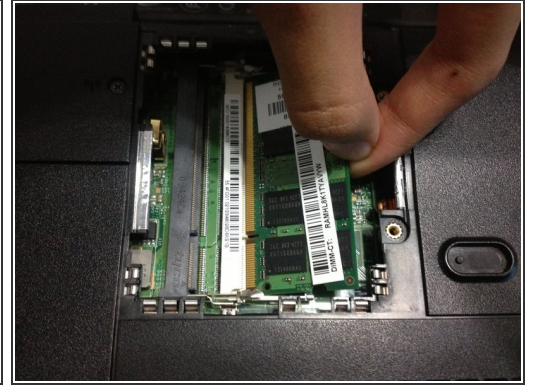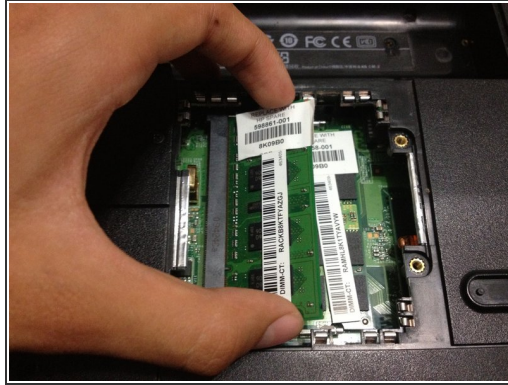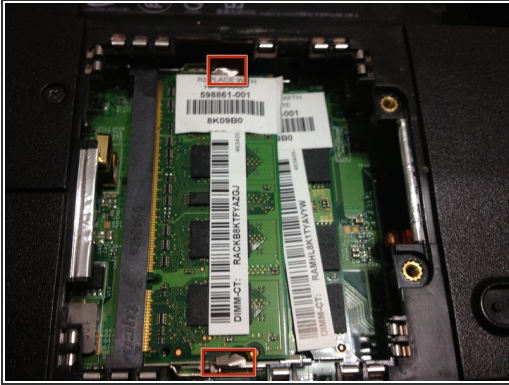


- Push the little aluminum locks at the top and the bottom of the ram
- The memory will lift, then pull it
- Make this with the another RAM slot

Step 4 — New RAM

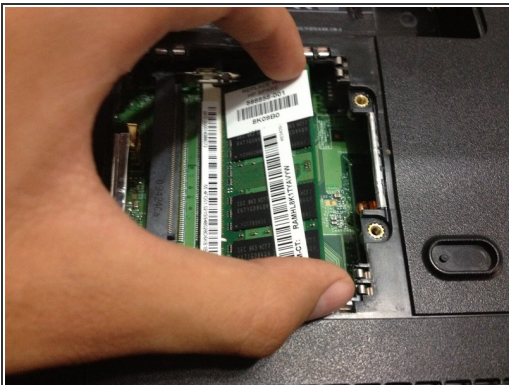

- The new RAM memory should to be insert in a 45 degrees angle
- Then, push it and the memory will lock by itself
- Make this with the second memory

Step 5 — RAM cover (Again)

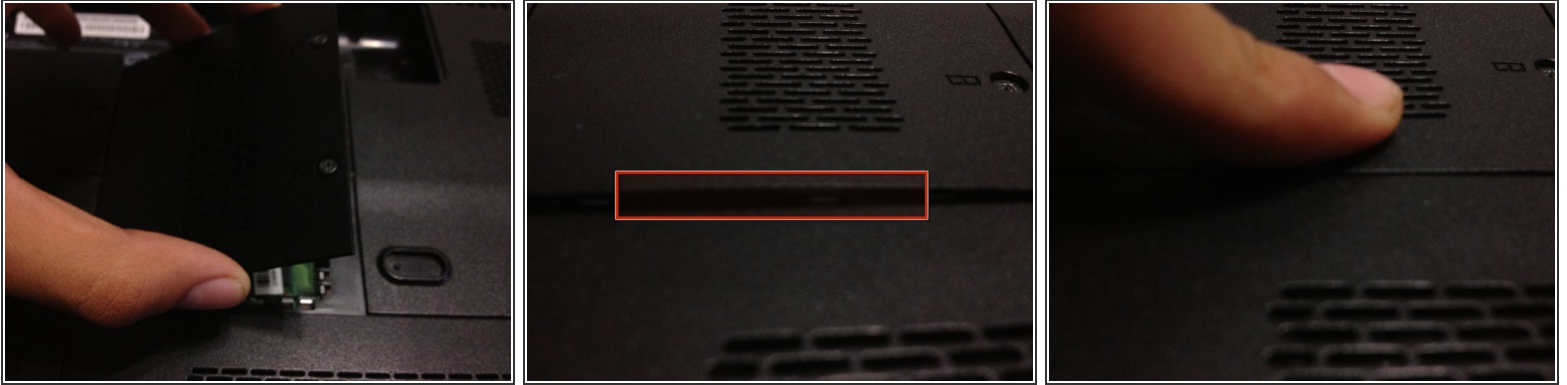

- Insert the cover from right to left, then, screw it
- If cover is lifted, press it softly and secure it