



Acer Aspire V5-571-6891 RAM Replacement

The RAM (Random Access Memory) is located on the bottom of the computer and is responsible for the loading of programs.

Written By: Lakbira Sheffield




INTRODUCTION

The RAM may be responsible for slow or non-existent memory. This guide shows how to replace the RAM.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

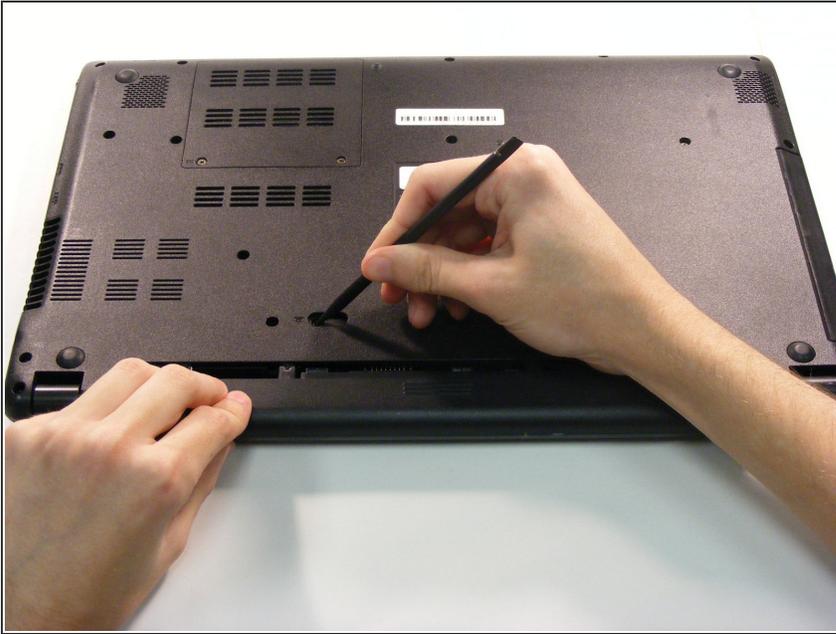

- Use the pointed end of the spudger to slide the battery lock until the battery pops loose.

Step 2



- Slide the battery out of the battery slot.

Step 3 — RAM




- Unscrew the two RAM 6mm cover screws.
- Use a PH1 screw bit.

Step 4



- Pop the RAM cover off.
- Use the plastic opening tool.

Step 5

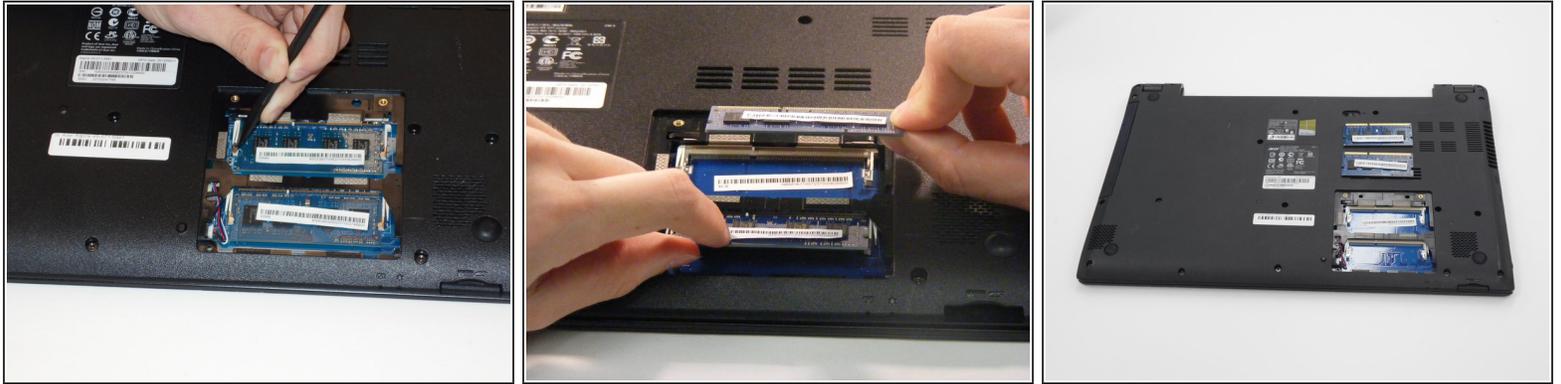

- Use either the spudger or your fingers to pinch the clips away from the RAM chip on either side of each chip.
 - The chip should pop up.
- ⚠ The clips break easily.
- Slide the RAM memory chips out of the slots.

To reassemble your device, follow these instructions in reverse order.