



HP Envy x360 15-u473cl Touch Screen Replacement

Replace the cracked or broken display of your HP Envy x360 laptop.

Written By: Maximillian McDonald



INTRODUCTION

The touch screen can be damage or wear out over time. This guide will show how to replace the touch screen of your device.



TOOLS:


- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [HP ENVY TouchSmart \(m7-j020dx\) LCD](#) (1)

Step 1 — Touch Screen

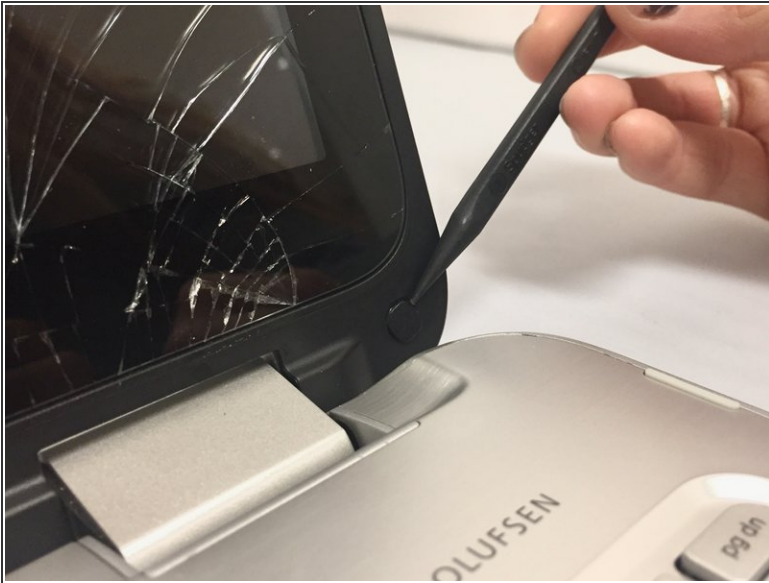

- Remove the two anti-tamper covers from the bottom corners of the screen using the spudger which will reveal two screws.
- Remove the two 3mm screws using the J00 Phillips screwdriver.


Step 2



- Move the plastic opening tool along the seam while prying up to separate the display housing from the laptop cover.



⚠ If the touch screen housing is cracked, it may splinter or shatter while separating.

Step 3

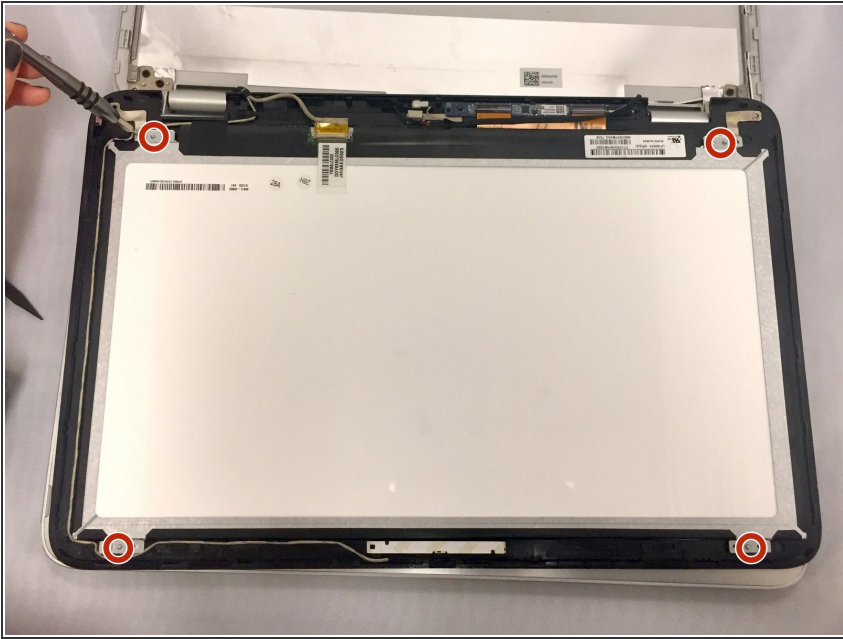

- Remove the four 3mm screws using the Phillips #00 screwdriver.

Step 4

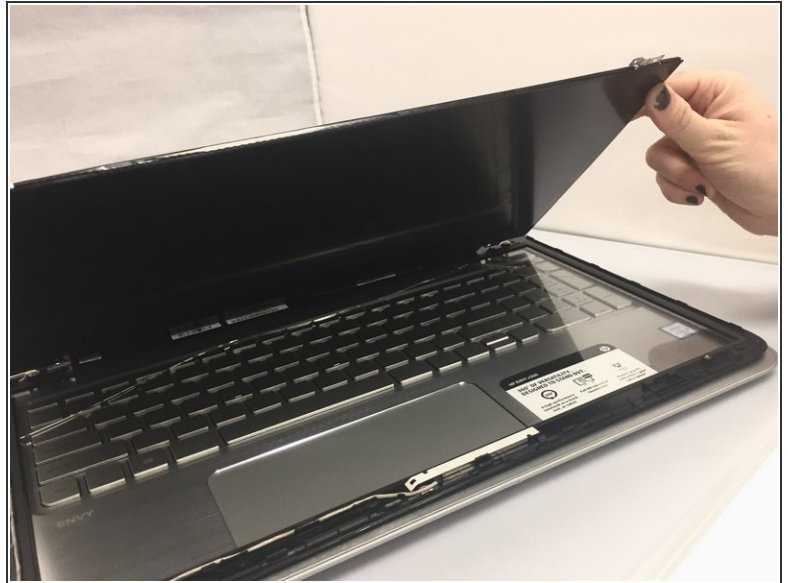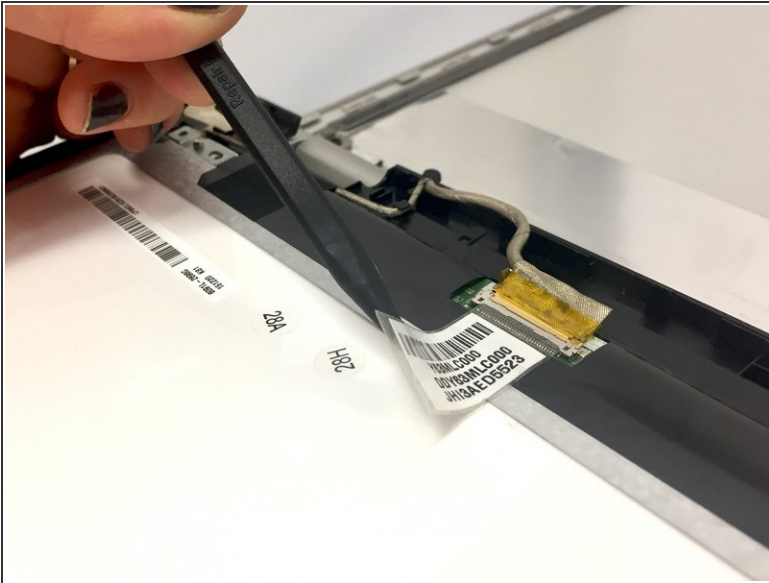

- Lift the white UPC tape using the spudger, and disconnect the the golden connector from the screen.
- There may be a piece of black tape connecting a bundle of wires to the screen. Remove the piece of black tape if present.
- Remove the touch screen.

To reassemble your device, follow these instructions in reverse order.