

HTC Rezound SD Card Replacement

This guide will explain step by step how to remove and replace the devices SD card.

Written By: Bridgette Mellon





• iFixit Opening Tools (1)



• HTC Rezound SD Card (1)

Step 1 — Battery



 Use a plastic opening tool or your fingers to get into the groove between the cover and case.
Remove the back covering so that the red battery is visible.

Step 2




Remove the red battery to replace.

Step 3 — SD Card





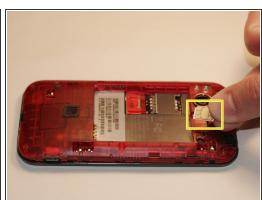

- Take out SD card from slot above battery alcove.
- Place new SD card in same slot.

To reassemble your device, follow these instructions in reverse order.