



Sony Vaio Fit SVF15N26CXB RAM Replacement

Replace the Sony Vaio Fit SVF15N26CXB RAM memory chip to speed up application processing or improve memory capability of device.

Written By: Althea McDavid



INTRODUCTION

The RAM is a small memory chip located within the device. This guide will show the user how to properly remove the Sony Vaio Fit SVF15N26CXB RAM memory chip. Use the project mat to keep the screws organized.



TOOLS:


- [Anti-Static Wrist Strap](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery




- Remove the following ten screws from the bottom case of the laptop:
 - Two 6.5mm Phillips #00 Phillips screws.
 - Four 8.95mm Phillips #00 screws.
 - Four 6.25mm Phillips #00 screws.
- ⓘ The screws may be hidden underneath a rubber foot that can be removed with a spudger.

Step 2

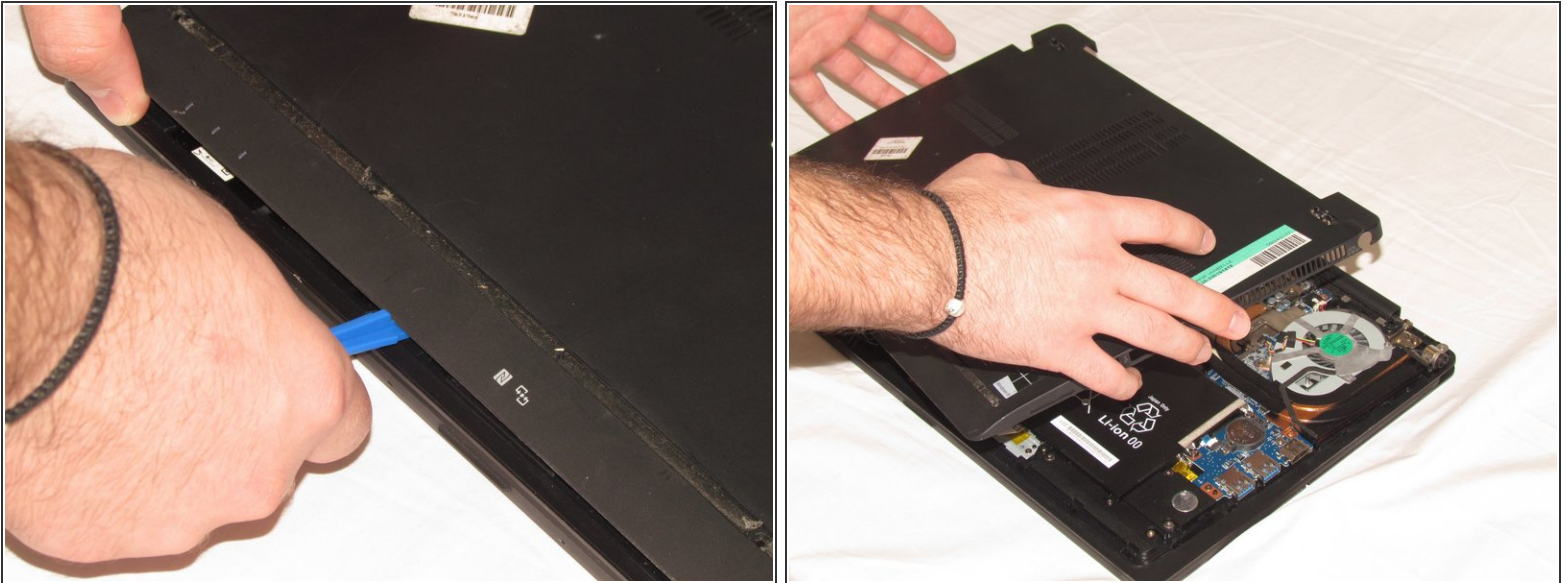

- Use a plastic opening tool to separate the bottom cover from the laptop.
- Lift the lower cover and pull away from the laptop.

Step 3

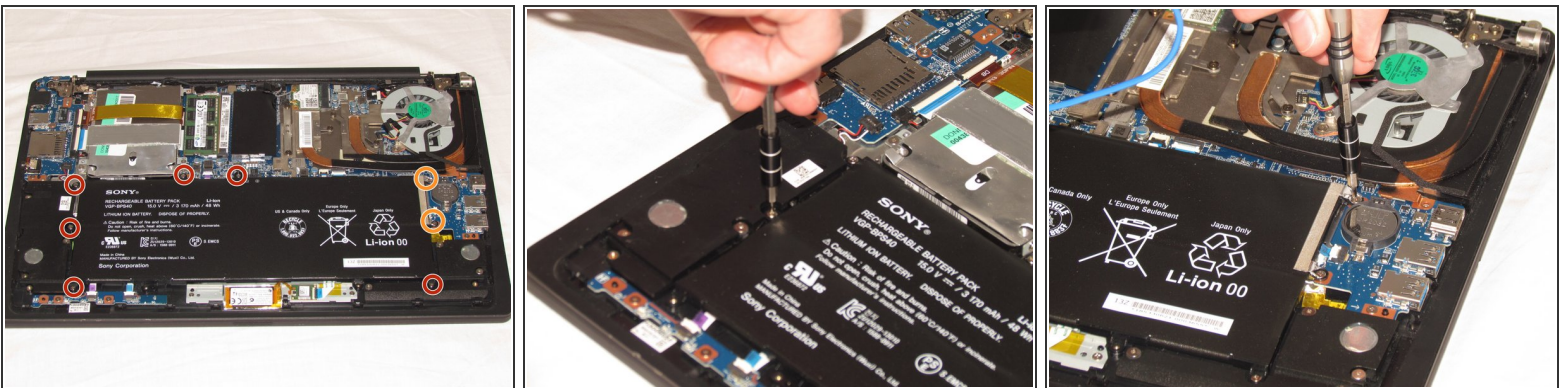



- Remove the eight Phillips #00 screws from the battery:
 - Six 4.65mm screws.
 - Two 4.65mm screws.

Step 4



- Lift the battery up and pull it out of the laptop.

Step 5 — RAM

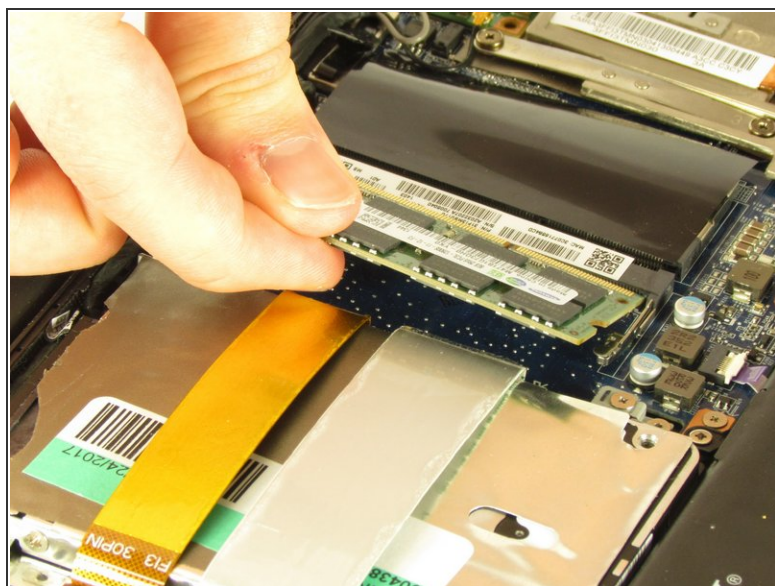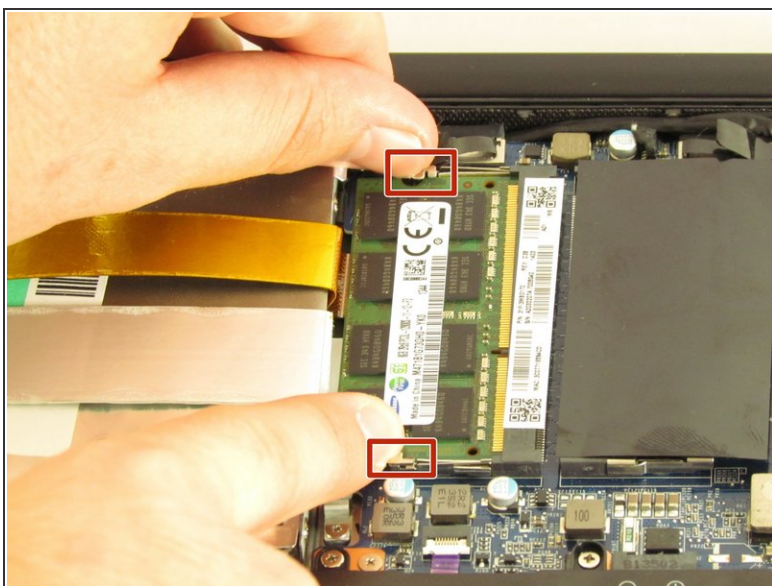

- Gently push the silver heads outwards on either side of the RAM chip to release it from the slot.
- Pull the RAM chip gently out of the slot.

To reassemble your device, follow these instructions in reverse order.