

Toshiba Satellite C55-B5200 Optical Disk Drive Replacement

A guide on how to replace the optical disk...

Written By: Pablo Andrade




INTRODUCTION

A guide on how to replace the optical disk drive on a Toshiba Satellite C55-B5200 laptop.

TOOLS:

Phillips #0 Screwdriver (1) iFixit Opening Tool (1)

Step 1 — Battery

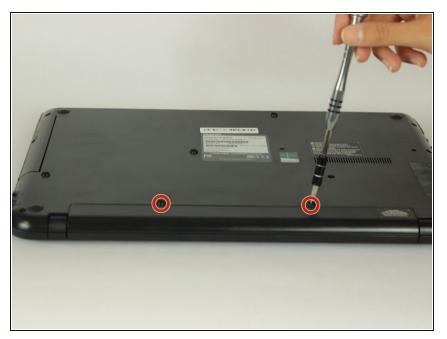

- Turn the laptop off and remove all sources of power.
- Flip the laptop over so that way the bottom is facing towards you.
- Remove the two 6.6mm Phillips #0 screws from the battery.

Step 2



• Pull the battery out of the laptop.

Step 3 — Optical Disk Drive



 Make sure device is turned off and unplugged

Failure to do so could result in electric shock

 Use J0 Philips Head Screwdrivers to remove 13, 6.6 mm screws on back of device

Step 4



- Remove the remaining two, 6.6 mm screws to remove the battery
- Use a plastic opening tool to lift and open the back

Step 5



• Lift and pull out disk drive

To reassemble your device, follow these instructions in reverse order.