

Dell Latitude E4310 Mini Card Door Replacement

Removal of the Mini Card Door on Dell Latitude E4310 laptop.

Written By: Brice Brosig



This document was generated on 2020-11-28 06:36:43 AM (MST).

INTRODUCTION

This guide walks through the removal of the Mini Card Door for access to the Mini Card itself, and for removal of further parts in the device.

TOOLS:

۶

- Phillips #1 Screwdriver (1)
- Spudger (1)

This document was generated on 2020-11-28 06:36:43 AM (MST).

Step 1 — Mini Card Door



• Remove the single Phillips #1 screw.

(i) This screw will not necessarily come off of the panel.

• Lift up and remove with your fingernail, or a spudger, from the side of the door with the screw.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:36:43 AM (MST).