



Dell Chromebook 11 CB1C13 DC Jack Cable Replacement

Removing the DC Jack Cable in a Dell Chromebook 11 Model cb1c13.

Written By: EmreTech



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Dell Chromebook 11 DC Power Input Jack With Cable - PHXNX](#) (1)
Part Number: PHXNX

Step 1 — Removing the bottom case cover



- Get your trusty Phillips screwdriver and unscrew the Phillips Screws and put them somewhere safe.
- Then pry open and remove bottom case cover.

Step 2 — Removing the battery



- Now what you want to do is find two screws protecting the battery. Unscrew them and put them somewhere safe.
- Remove the cable from the battery and put it somewhere safe.

Step 3 — Removing and replacing the DC Jack Cable



- Now, find the DC Jack Cable. It should be in the top right corner.
- To remove the DC Jack Cable, use your fingernails and try to remove it. Once out, put it somewhere safe.
- To put in a new one, insert it with a lot of pressure and it should be secure.

To reassemble your device, follow steps 1 and 2 in reverse order.