


Huawei P9 Display Assembly with Frame Replacement

Replace the display assembly including the frame in your Huawei P9 smartphone.

Written By: Dominik Schnabelrauch

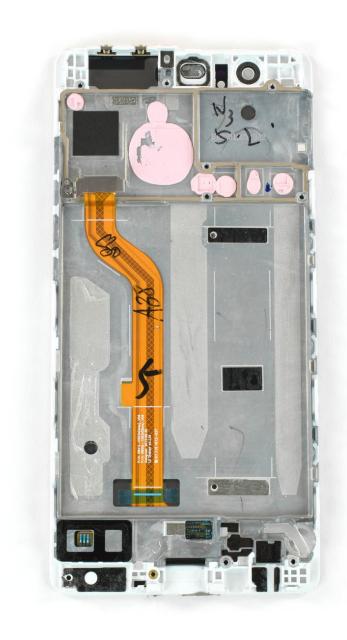

INTRODUCTION

Use this guide to replace the display assembly including the frame of your Huawei P9.

Before disassembling your phone, discharge the battery below 25%. The battery can catch fire and/or explode if accidentally punctured, but the chances of that happening are much lower if discharged.



TOOLS:

- SIM Card Eject Tool (1)
- Suction Handle (1)
- iFixit Opening Picks set of 6 (1)
- Spudger (1)
- Phillips #00 Screwdriver (1)
- Tweezers (1)
- P2 Pentalobe Screwdriver iPhone (1)



PARTS:

Huawei P9 Screen (1)

Step 1 — Back Cover








- First switch off your phone and remove the SIM card tray.
- Unscrew the two Pentalobe P2 screws located at the bottom next to the device's USB C port.
- (i) If the screen is cracked you might want to use some tape to protect your eyes from glass shreds and get a better grip to open the phone.






- Avoid to lift only the display instead of the whole phone assembly as doing so may cause damage to the screen.
- Use an iSclack or a suction handle to separate the phone assembly from the rear panel.
 - in case you can't manage to lift the phone assembly out of the rear panel you can insert the pointed end of a spudger in the headphone jack opening and press the phone assembly upwards until you create a gap between assembly and rear panel. Then use the spudger to lever the phone assembly out of the panel.
- On't remove the rear panel completely yet. There is a cable connected to it! It is running from the finger print sensor to the display unit.

Step 3 — Fingerprint sensor

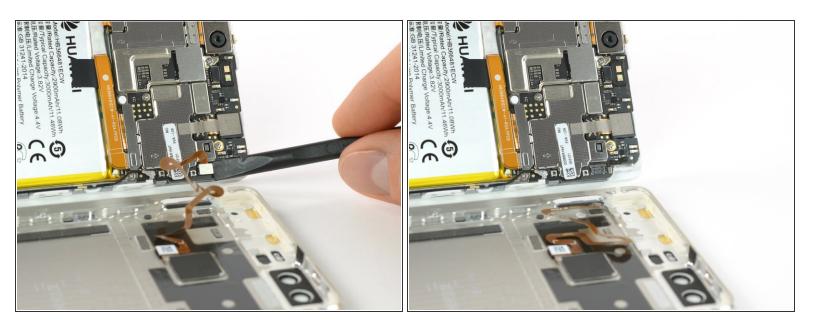

Disconnect the fingerprint sensor using a spudger.

Step 4 — Battery

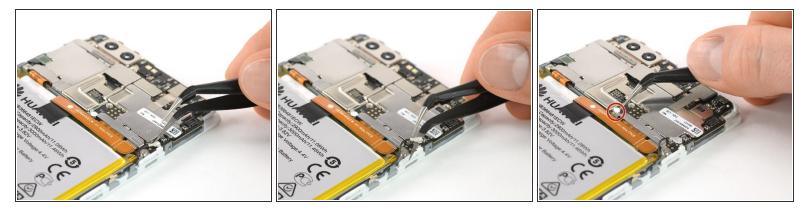

- Unplug the antenna cable.
- Remove the sticker that sits on top of the screw.



- Unscrew the two Phillips #00 screws that hold the metal plate in place.
- The plate, which is covering the battery connector, has two little hooks on each side. Use a tweezer to free them and unhinge the plate by carefully moving it upwards.





- Now you can unplug the battery connector and bend it aside.
- The EVA-L09 model has an NFC antenna adhered onto the battery.
 - if you are just removing the battery to get to the display, you can leave the NFC on the battery.
 - Mark its place on the battery with a felt pen for reassembly. Carefully peel it off and make sure not to rip or crease the antenna.
 - For reassembly, place the NFC antenna on the battery where it was before so its contacts align with their counterparts.





Free the ends of the adhesive pull tabs to get a good grip on them.










- The battery is secured with three pieces of adhesive, a removable pull-tab in the center, and on the SIM tray side. A third piece of adhesive on the button side has no pull-tab.
- Pull the adhesive tabs in a slow constant movement to free the battery.
 - (i) Should those adhesive tabs snap, you might want to use an iOpener to heat and soften them a little bit so you can pry out the battery with a spudger.
 - There are two cables running directly underneath the battery. Take care not to damage them when prying with a spudger! You can see their position in the last picture.
- Slowly lift the battery toward the button side and free it from the remaining hidden piece of adhesive.
- When reassembling your phone, replace old adhesive with <u>stretch release adhesive strips</u>, <u>double-sided tape</u>, or <u>pre-cut adhesive strips</u>.


Step 9 — Display Assembly with Frame

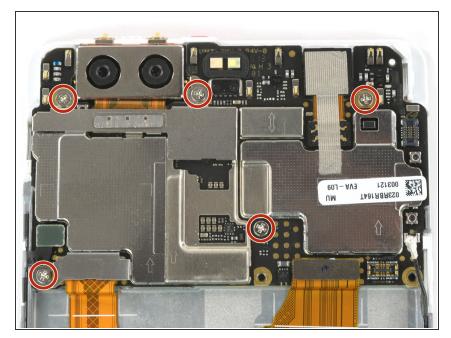


 Remove the other five Phillips #00 screws from the motherboard.

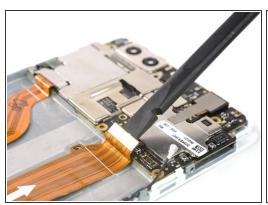


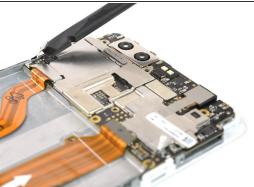

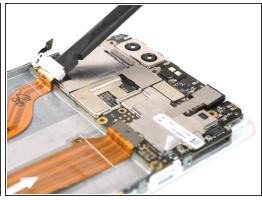



- Disconnect the motherboard flex cable as well as the power and volume button cable.
- Unplug the LCD screen flex cable.

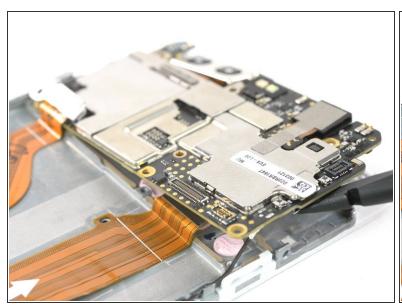

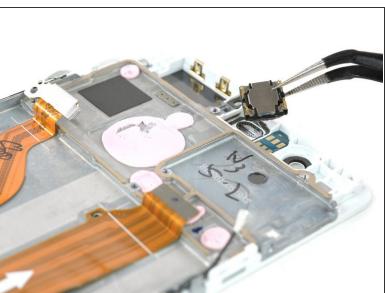


- Remove the motherboard assembly.
- Remove the earpiece speaker (mind adhesive underneath).

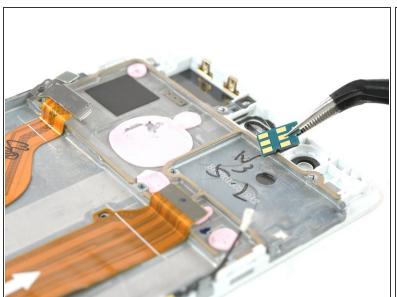

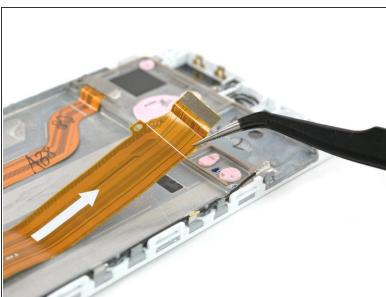

- Remove the proximity sensor module from its bracket.
 - if the new display unit does not have the rubber gasket of the proximity sensor already installed you have to transfer it from the old one.
- Carefully peel off the motherboard flex cable.

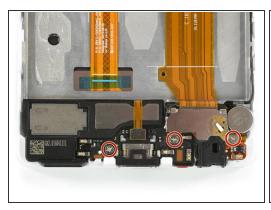





- Remove the three Phillips #00 screws from the daughterboard.
- Carefully remove the metal bracket. The headphone jack connector might stick to it.
- Unplug the motherboard flex connector and put the cable aside.





- Disconnect the headphone jack flex connector.
- Unplug the antenna cable.









- Unplug the connector of the loudspeaker.
- Remove the daughterboard.
- Pry the speaker off of the adhesive holding it to the display assembly.





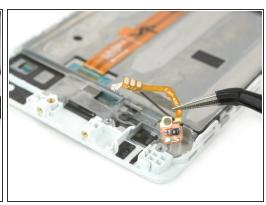

- Remove the headphone jack out of its recess.
- Pry the vibration motor out of its adhered recess in the display assembly.
- Carefully remove the fragile contact cable from the adhesive holding it to the frame.

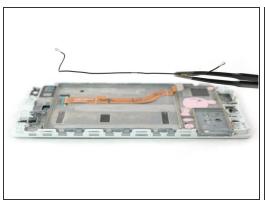





- Remove the antenna cable and the power and volume bottom cable on either side.
- Inspect the new part carefully and compare it to the old one. There might be some small parts that have to be transferred.
- On the back of the motherboard there are thermal pads (pink rubber-like gobs) for heat dissipation. If these thermal pads broke, are too dried out or stick to the old display assembly you might need to <u>apply new thermal pads</u> to the new display assembly or the motherboard.

To reassemble your device, follow these instructions in reverse order.