


UTStarcom CDM8945vw Logic Board Replacement

Replacing the logic board.

Written By: Bilal

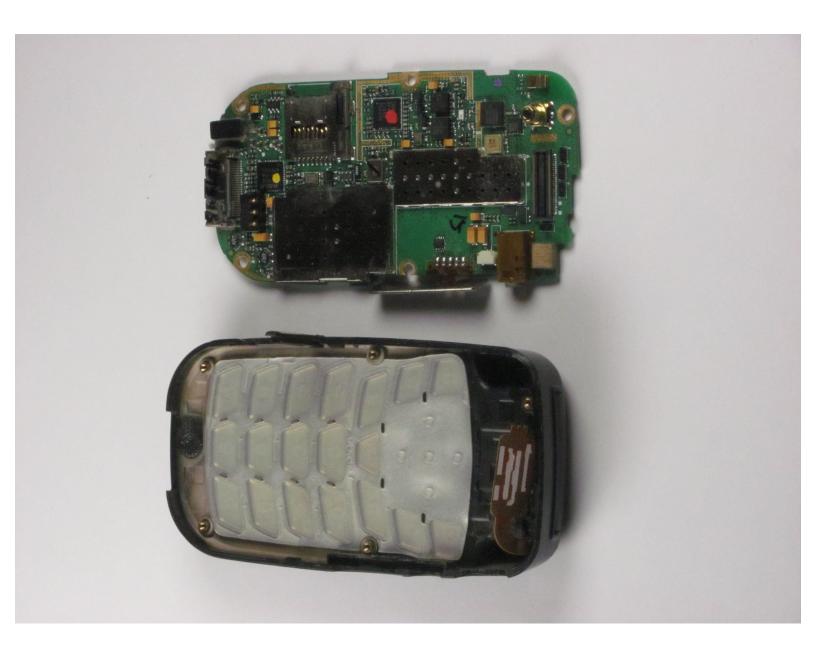

INTRODUCTION

Follow this guide to properly replace the logic board.



TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tool (1)
- Tweezers (1)

Step 1 — Battery




 Push the highlighted button in the direction in which the antenna is pointing. The battery will release and pop up.

Step 2



Remove the battery.

Step 3 — Antenna

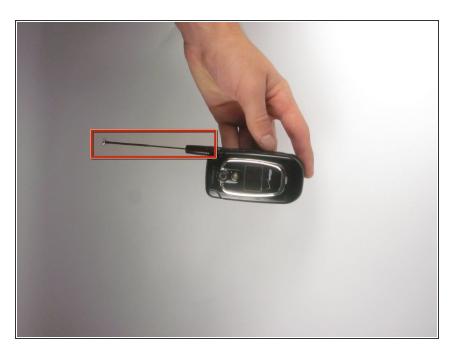

 Identify the antenna. It is the extendable plastic component pictured here.

Step 4



 Twist the base in a counterclockwise motion to unscrew the antenna.





The antenna should slide right out of the phone when finished.

Step 6 — Speaker



 Remove the small rubber grommet using the plastic opening tool.



 Remove five screws using a Phillips #00 screwdriver.

Step 8



- Use the plastic opening tool to separate the two pieces that form the outer case of the phone.
- Prying the two pieces apart may be difficult. Carefully apply a moderate amount of pressure when attempting to separate the two pieces or else you will risk breaking them.




 Remove the back piece of the outer case.

Step 10



- Remove the speaker using a plastic opening tool.
- Apply a small amount of force when removing the broken speaker from the motherboard. If you apply a large amount of force, you may rip out the wires and damage the motherboard.

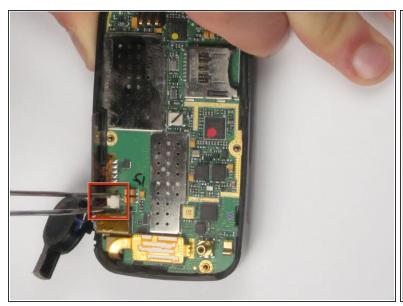




Remove the wire attached to the speaker from the motherboard using tweezers.

Apply a small amount of force when removing the wire from the motherboard. If you apply a large amount of force, you may rip out the wires and damage the motherboard.

Step 12 — Logic Board

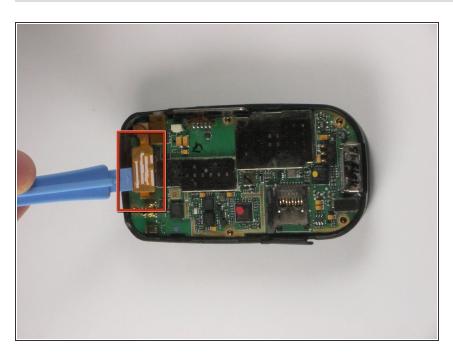

 Detach the highlighted piece from the logic board using a plastic opening tool.





Remove the logic board from the anterior piece of the outer case using the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.