




# HP 15-f004dx Battery Replacement

This guide will take you through removing and replacing the battery of the HP 15-f004dx

Written By: Emily Erskine

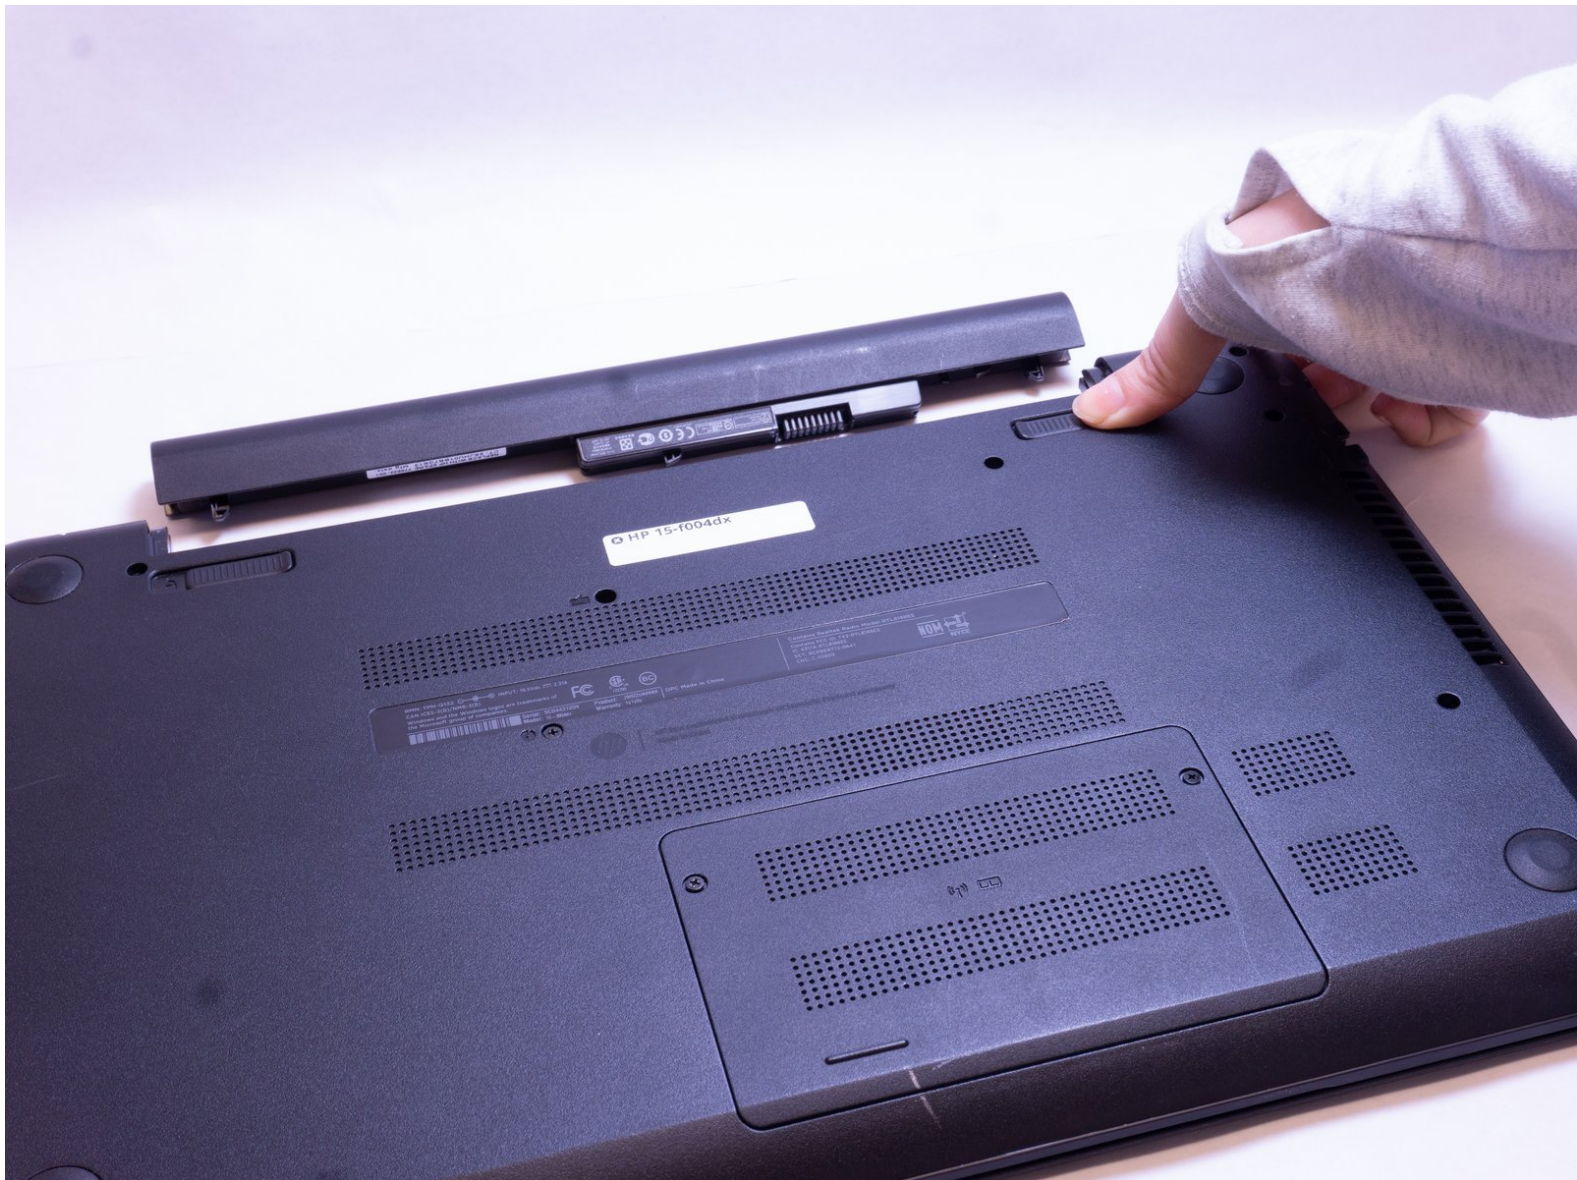

---

## INTRODUCTION

Here is a step by step way to remove and replace your battery for the HP 15-f004dx. Please make sure that you have tested the battery following the instructions listed [here](#) under **Testing the Battery**.

If your battery fails the tests and needs to be replaced, you are able to purchase a new battery [here](#) once you are able to identify the correct battery for your specific computer model.



### TOOLS:

- [Fingers](#) (1)
-

## Step 1 — Battery




- After testing the battery and discovering that it needs to be replaced, you will begin by placing the computer upside-down on a flat surface.

## Step 2



- Locate a switch in the upper left corner with a lock symbol next to it.
- Slide the switch to the right until you see an unlocked symbol on the opposite side.

## Step 3

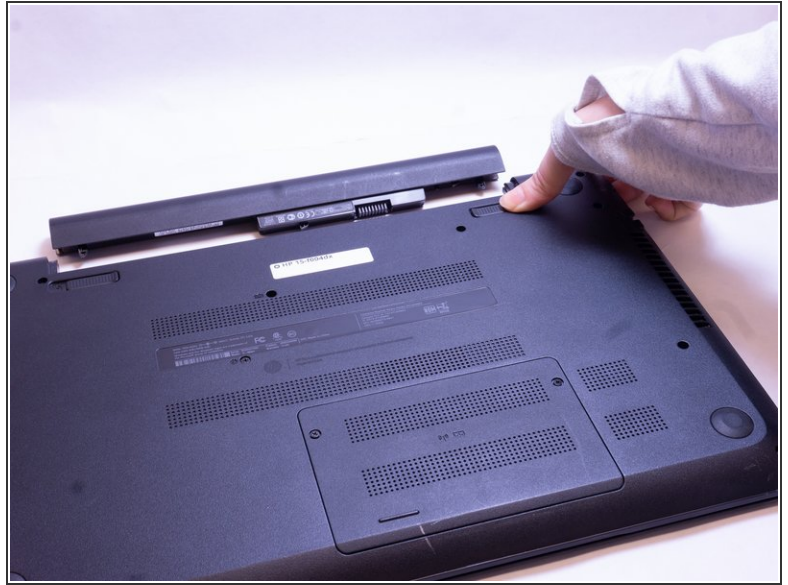

- There is another switch on the opposite side of the computer with a battery symbol next to it.
  - Slide this switch to the left and the battery should detach from the computer.
  - To completely remove the battery, simply pull the battery away from the computer.

To reassemble your device, follow these instructions in reverse order.