

Shark Flex DuoClean LED Headlight Replacement

How to replace the LED headlights on the Shark Flex DuoClean Vacuum.

Written By: Samantha Mickelson



This document was generated on 2020-11-28 06:58:13 AM (MST).

INTRODUCTION

You may need to replace the LED lights if they do not flash when the device is turned on. To remove the motor, soldering skills are required. See <u>this guide</u> for soldering instructions.



TOOLS:

- T10 Torx Screwdriver (1)
- Metal Spudger Set (1)
- iFixit Opening Tools (1)
- Solder (1)
- Soldering Iron (1)
- Desoldering Braid (1)
- Flush Wire Cutters (1)
- Wire Stripping/Crimping Tool (1)

Step 1 — Garage Door





- Open the garage door by sliding both of the release buttons away from you.
- Lift off the garage door.

Step 2 — Side Component





 Remove the plastic screw covering using a metal spudger by pushing the sharp side into the crevice and prying the cover out.





Turn the T10 Security Torx screwdriver counterclockwise to remove the 15mm screw.

Step 4



 Use the iFixit Opening Tool to pry the side of the vacuum open.




 Remove the side component with your hands.

Step 6 — LED Headlight



 Turn the T10 Security Torx screwdriver counterclockwise to remove the 15mm screw.

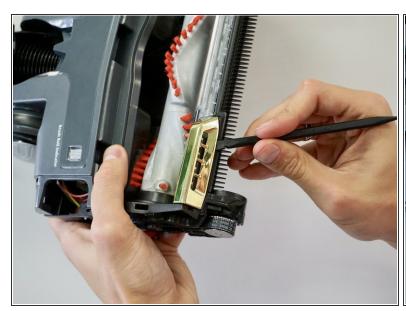




Use the nylon spudger to pry the gold, plastic cover off of the headlights.


Prying off the cover too aggressively may cause it to break.

Step 8



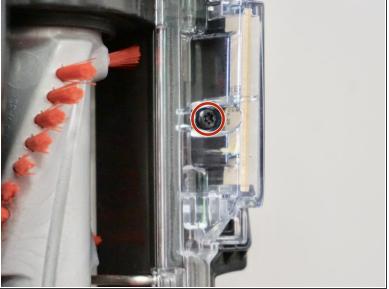

Turn the T10 Security Torx screwdriver counterclockwise to remove the 15mm screw.

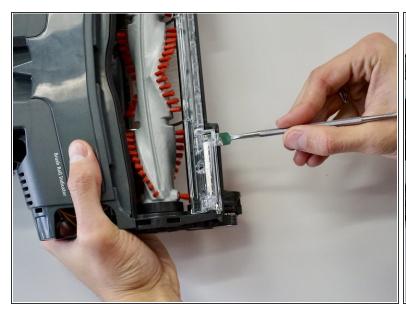




Use the metal spudger to pry off the clear, plastic cover on the LEDs.

Prying the cover off too aggressively may cause it to break.

Step 10

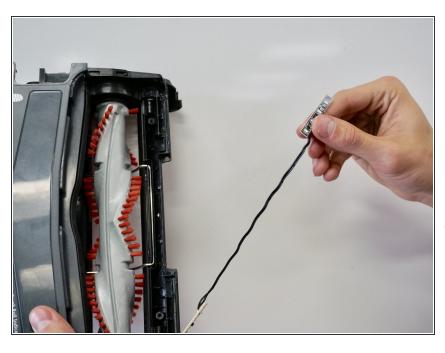

- Use wire cutters to detach the black cables from the LEDs on both sides.
- Strip 1 cm off the ends of the wires, using a wire stripper.
- Solder the exposed wires to the new LEDs.
- (i) Use the soldering guide in the Introduction.

To reassemble your device, follow these instructions in reverse order.