




Casio CTK-501 Buttons Replacement

If your Casio CTK-501 has a malfunction with...

Written By: Jimmy Winne

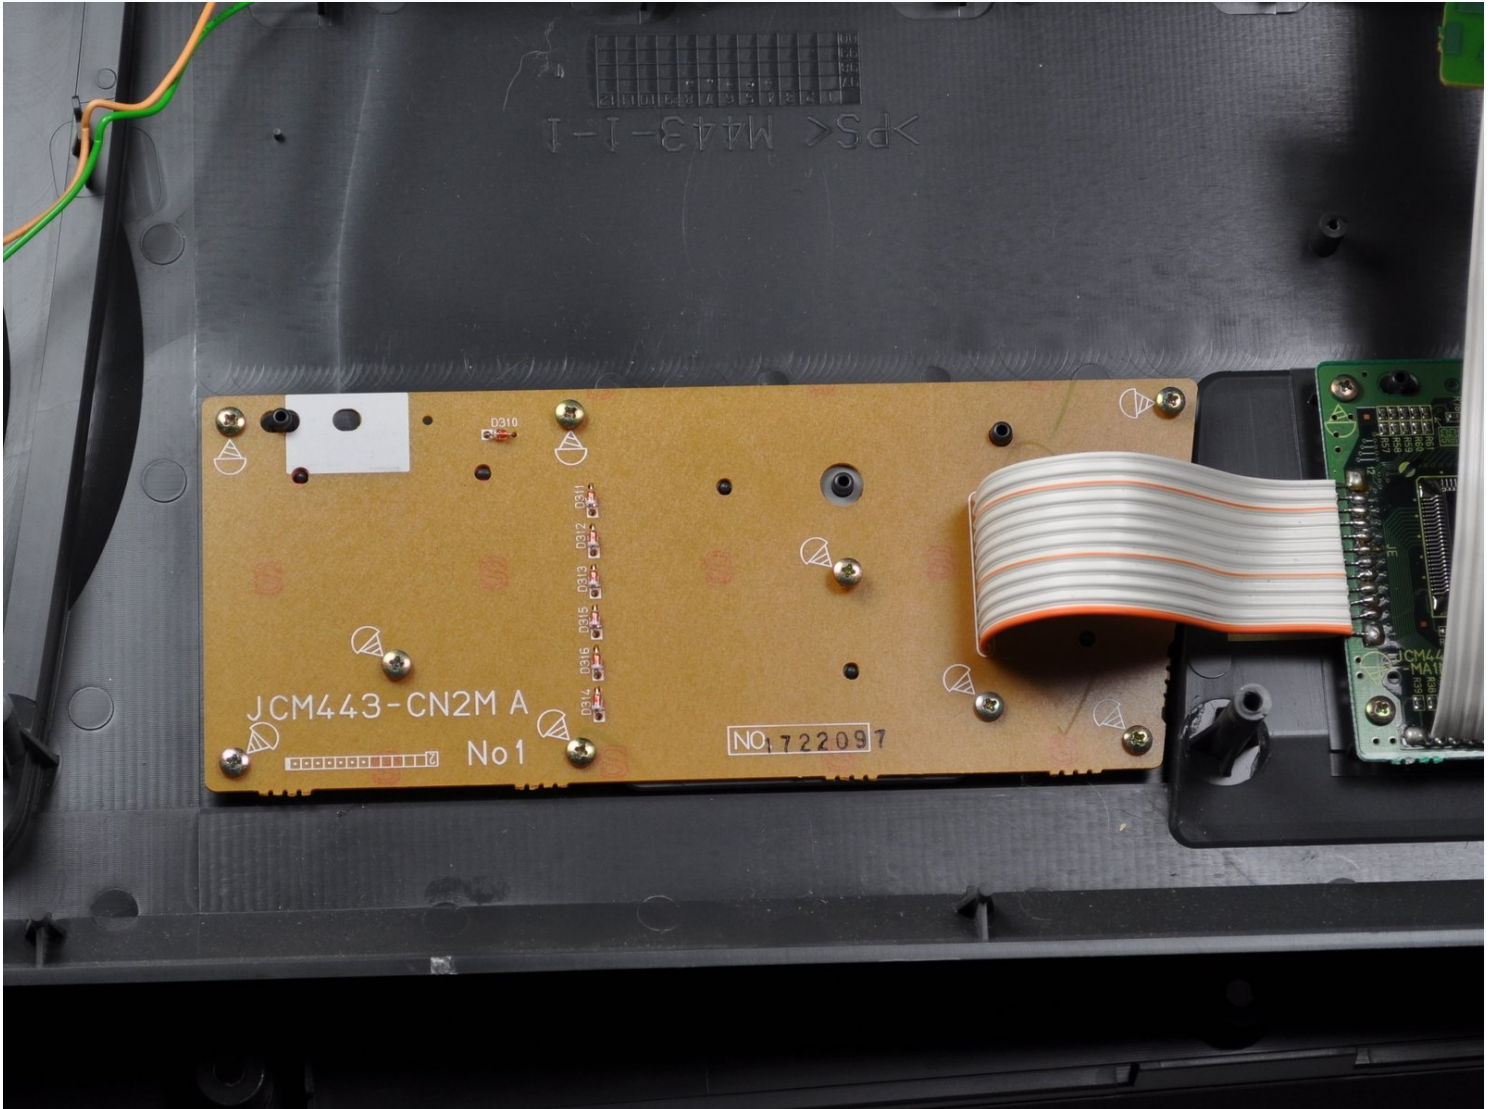

INTRODUCTION

If your Casio CTK-501 has a malfunction with the buttons, then this guide will teach you how to replace a button.

The button will allow for better quality sound to perform. The functions of the Casio CTK-501 buttons are to play/pause, stop, rewind, fast forward, and be on with the right or left side. It also helps in the rhythm and tone of the music with also being able to control the volume. Not having one of these buttons functioning can get in the way of playing music on your keyboard.

Before reading this guide make sure that the buttons are the cause of an issue to your Casio CTK-501. Before you start, make sure you unplug the power cord. At the end of this guide, you will have your Casio CTK-501 working better than ever!

TOOLS:

Phillips #0 Screwdriver (1)

Phillips #2 Screwdriver (1)

Step 1 — Bottom Panel




- Flip the keyboard over so that the bottom is facing up.
- Remove the twenty-seven 12 mm screws from the dark-grey panel using a Phillips #2 screwdriver.

Step 2



- Remove the bottom panel by lifting and pulling it towards yourself.


Step 3

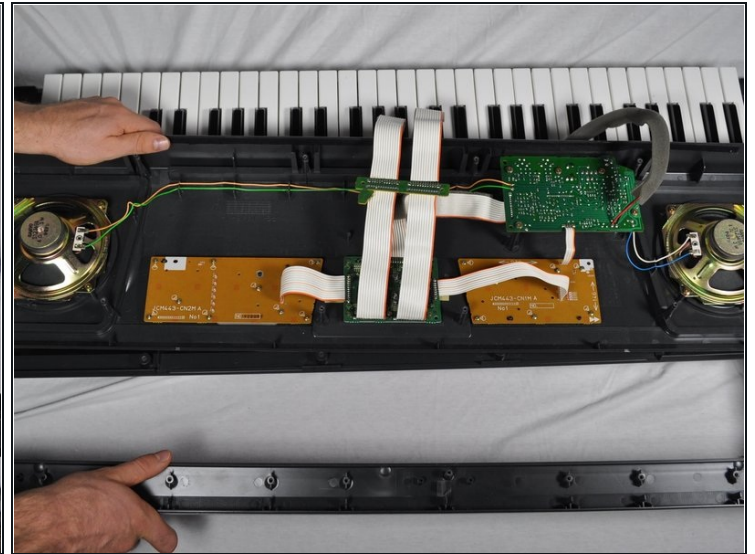

- Flip open the top half of the keyboard.
- Set the keyboard onto the bottom half with the internal parts facing up.


⚠ Be careful not to let the bottom drop.

Step 4 — Buttons

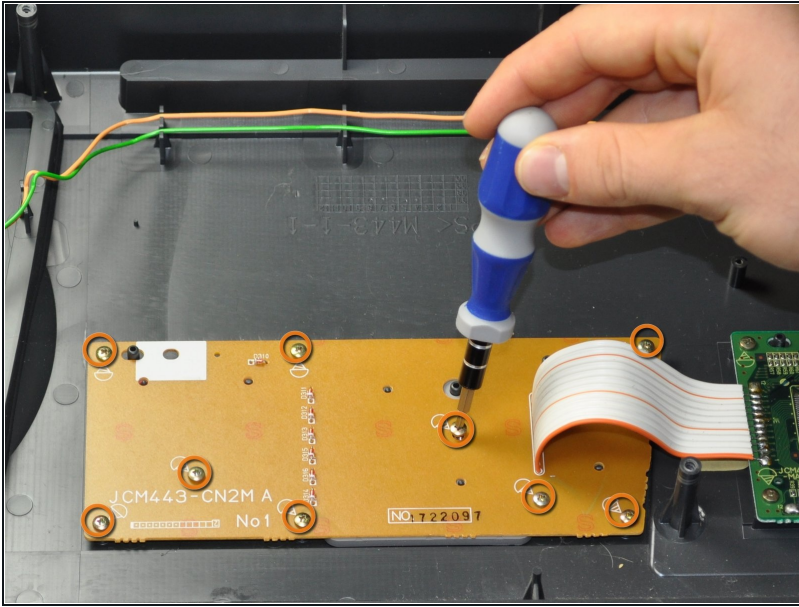


- Remove the nine screws from the brown circuit board that has an attached ribbon, with a #0 Phillips.

Step 5

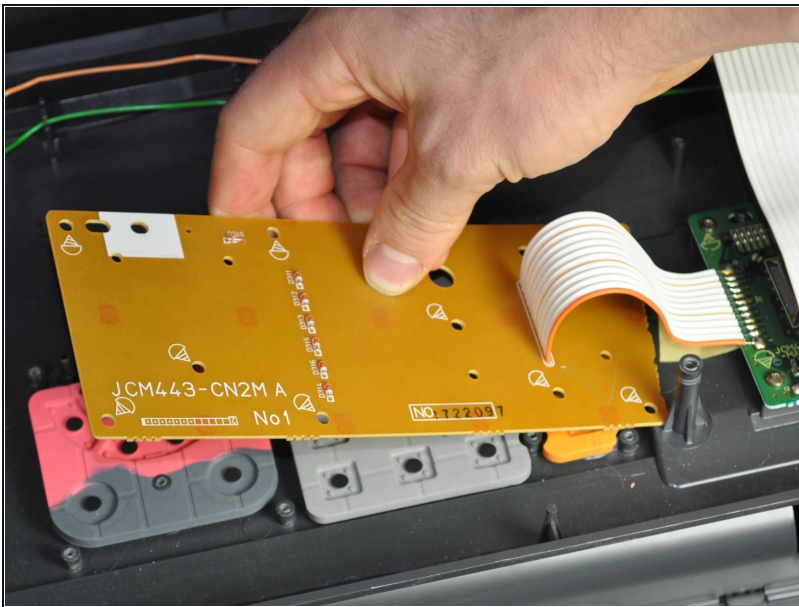


- Remove the circuit board, by pulling upwards.

Step 6

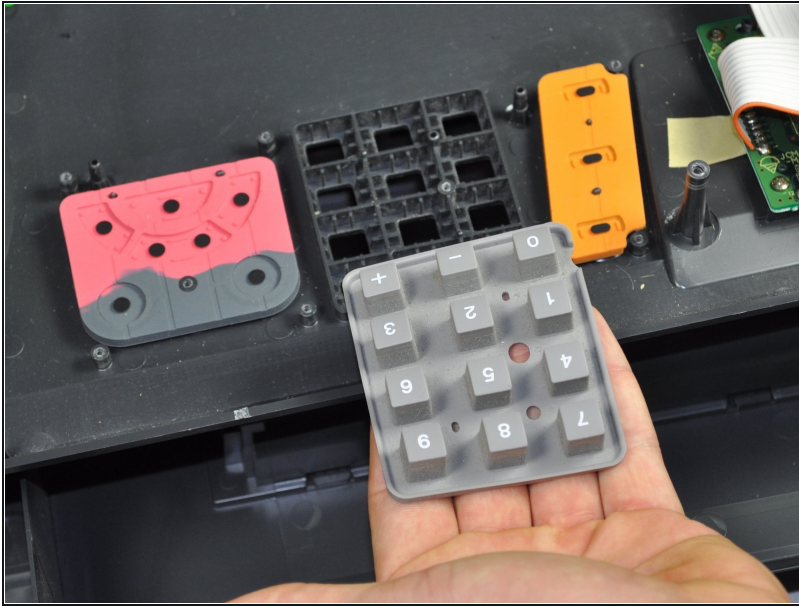

- Remove the buttons.

Step 7

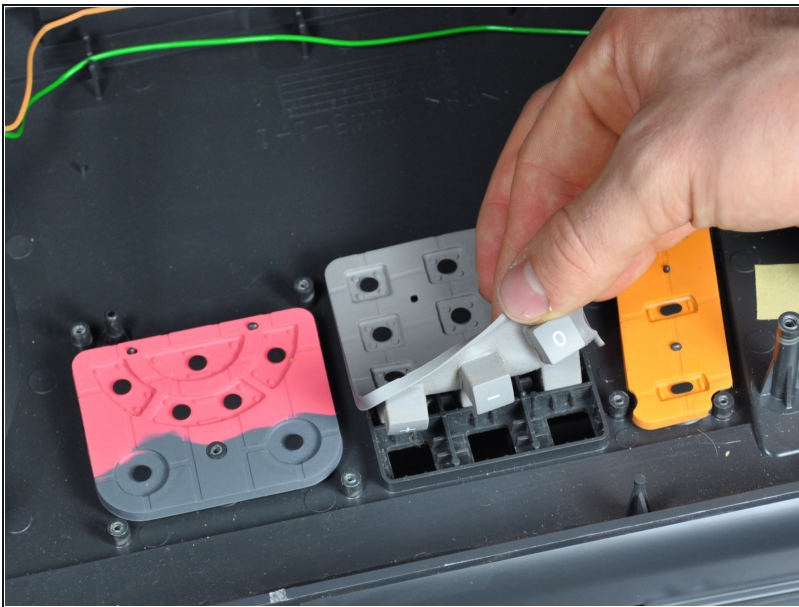

- Place the new buttons into the slot, and push downward in the slot.

To reassemble your device, follow these instructions in reverse order.