




Samsung ATIV Book 9 Speaker Replacement

A step-by-step replacement guide for the Samsung ATIV Book 9 Lite's speakers.

Written By: Phat Tran

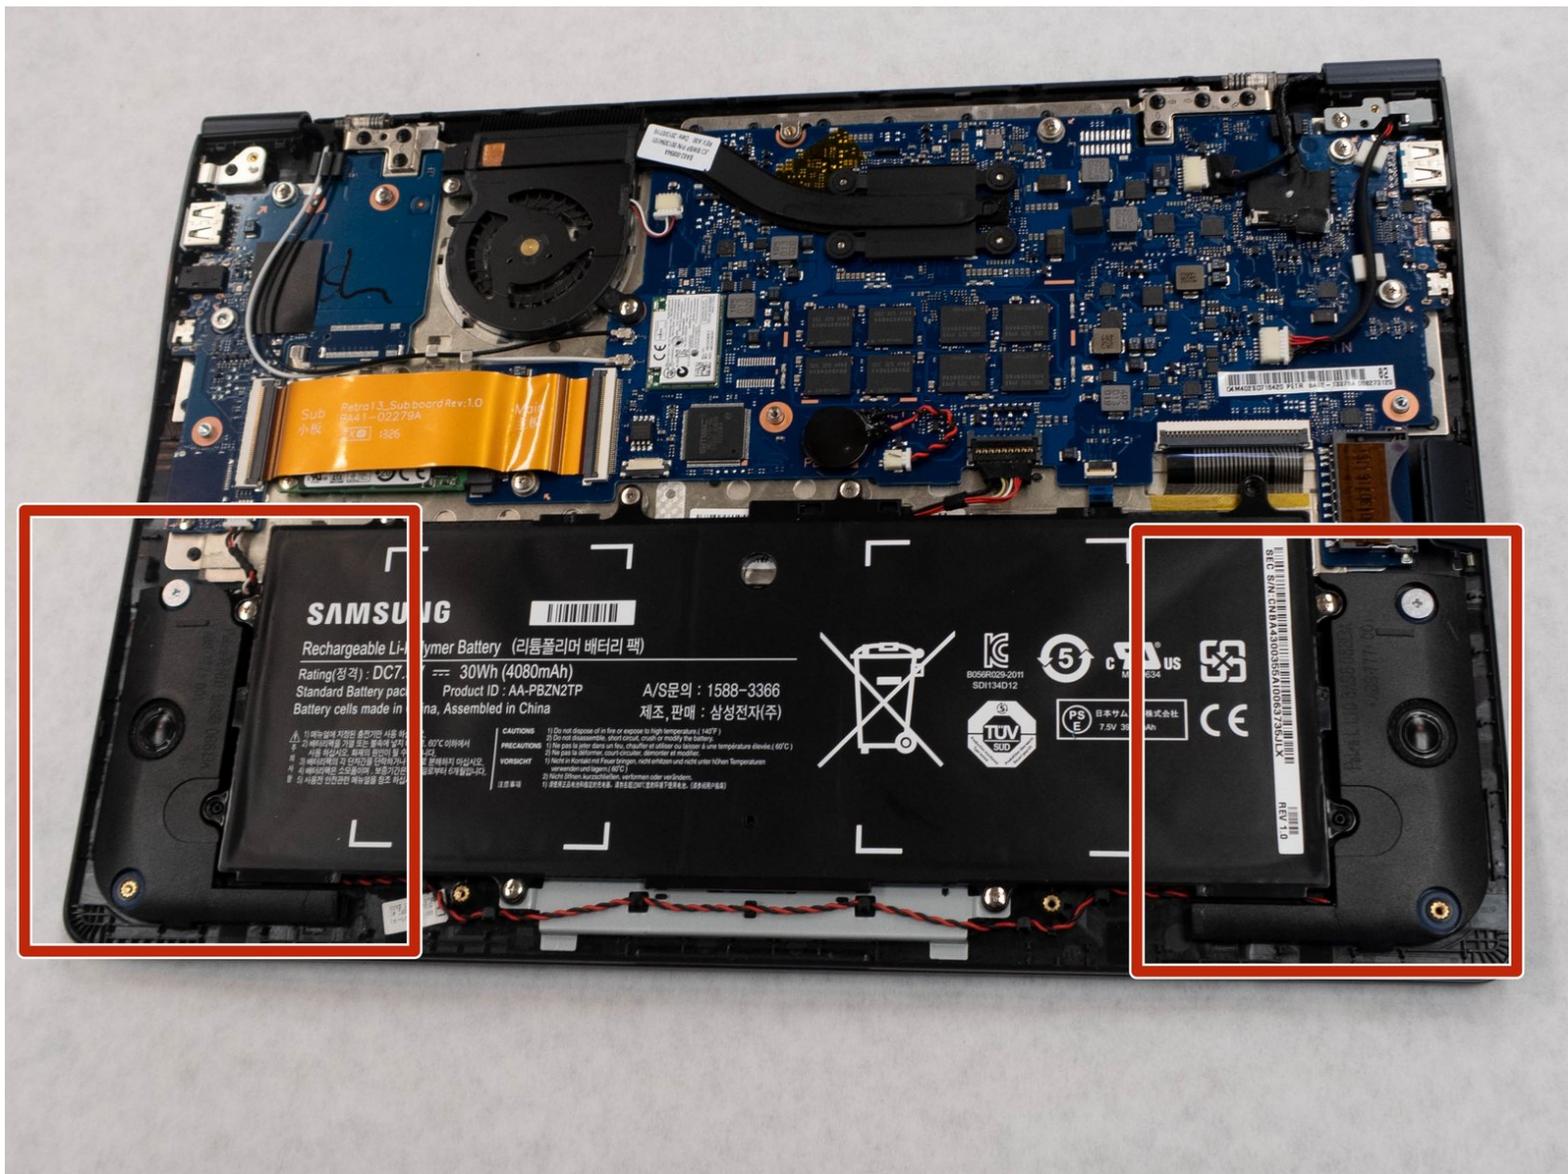

SAMSUNG

Rechargeable Li-Ion Polymer Battery (리튬폴리머 배터리 팩)

Rating(정격) : DC7.2V 4.8Ah
 Standard Battery pack Capacity : 30Wh (4080mAh)

Battery cells made in China, Assembled in China

Product ID : AA-PBZN2TP A/S문의 : 1588-3366
 제조, 판매 : 삼성전자(주)

CAUTIONS
 1) Do not dispose of in fire or expose to high temperature (> 140°F)
 2) Do not disassemble, bend, crush, pierce or modify the battery.
 PRECAUTIONS
 1) Do not use the battery pack in the presence of fire, or in the presence of high temperature (> 60°C)
 2) Do not use the battery pack in the presence of fire, or in the presence of high temperature (> 60°C)
 VORSICHT
 1) Nicht in der Nähe von Feuer, oder in der Nähe von hoher Temperatur verwenden (über 60°C)
 2) Nicht öffnen, zerlegen, verformen oder modifizieren.
 3) Nicht in der Nähe von Feuer, oder in der Nähe von hoher Temperatur verwenden (über 60°C)

5 B056R020-2011 SDH134D12
 TÜV SÜD
 PS E
 CE


INTRODUCTION

This guide may be used to remove the internal speakers from the Samsung ATIV Book 9 Lite. Have a Phillips screw driver ready. Be sure to keep track of all screws and where they belong. While removing the speakers, be sure not to damage any cords connecting the speakers to the laptop. Lastly, be sure to dispose of the broken speakers properly.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker

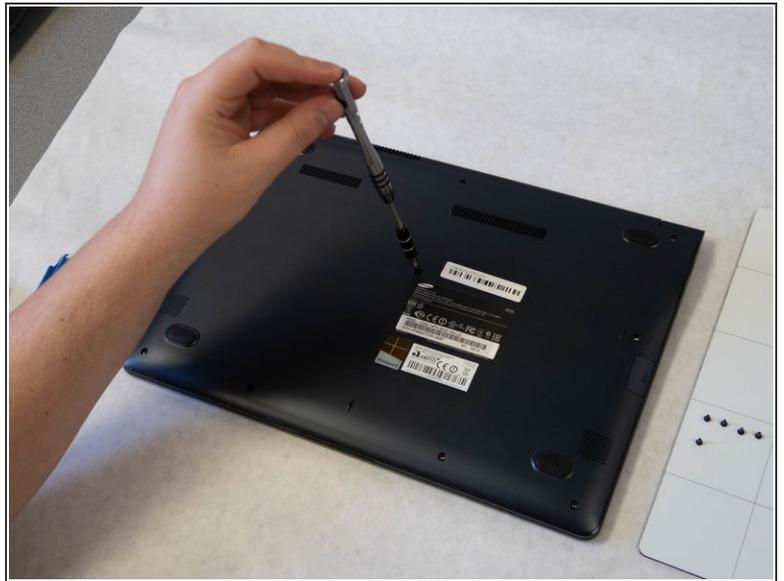

- ⚠ Put a protective lining such as a piece of cloth in between the screen and the keyboard when closed to protect your screen when performing this replacement.
- Turn the laptop upside down to show the screws holding the back cover on.
- Using the Phillips #0, remove the ten 4mm screws located around the edges and one central.

Step 2




- Use two plastic opening tools to separate the back cover from the laptop.
- ⓘ This may take some force because the back cover is snapped into place before the screws are used to keep it in place.

Step 3



- Using the Phillips #0, remove the seven 5mm screws highlighted in the image.
- Using your hands, disconnect the battery's main cord from the main motherboard.
- Using your hands, remove the battery from the computer.

Step 4

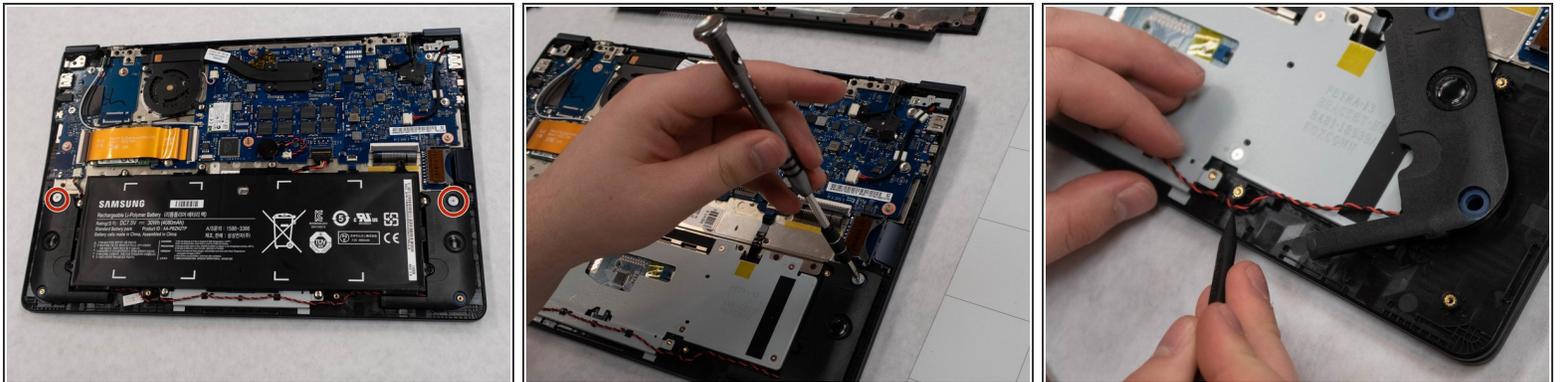

- Using a Phillips #1, remove the two 3mm screws, one per speaker.
- Using the nylon spudger, release the black and red wires that connect the two speakers.

Step 5



- Using your hands, remove the cord that connects the speakers to the board you are removing.
- ⚠ Do not pull on the cord as that might damage it; remove it by pulling on the white wire head.
- Using your hands remove the speakers from the computer. This may require some force as they are held in place partially by double sided tape.

To reassemble your device, follow these instructions in reverse order.