


Apple TV 4K Remote Battery/Charging Port Replacement

A guide to replace the battery/charging port in an Apple TV 4K's remote.

Written By: Keenan Barber

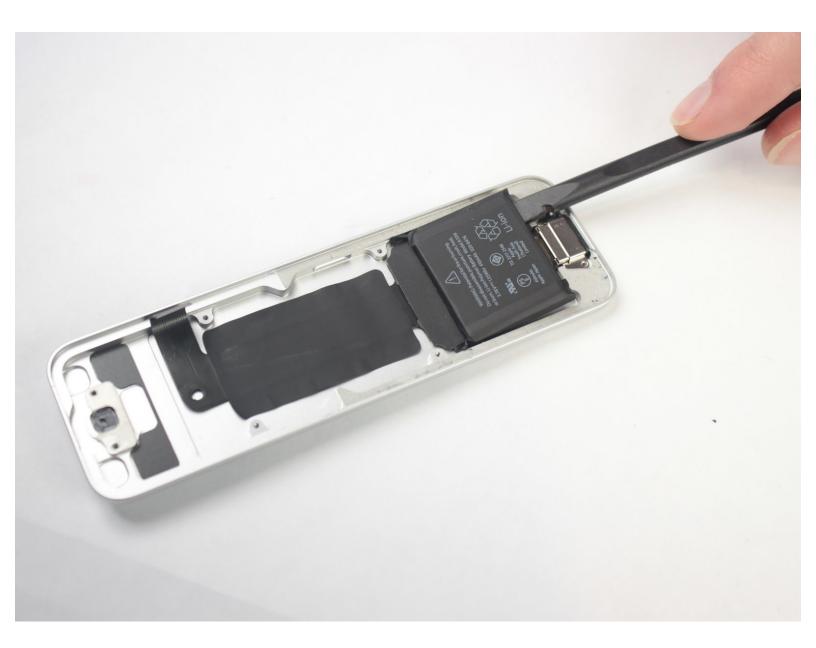

INTRODUCTION

This guide will show you how to access the battery and charging port in your Apple TV 4K remote for replacement.

TOOLS:


- T3 Torx Screwdriver (1)
- Spudger (1)
- Tweezers (1)
- iOpener (1)

Step 1 — Remote Battery, Charging Port




- Heat iOpener according to manufacturer's instructions.
- Place over the face of the remote to soften the adhesive under the glass.

Step 2

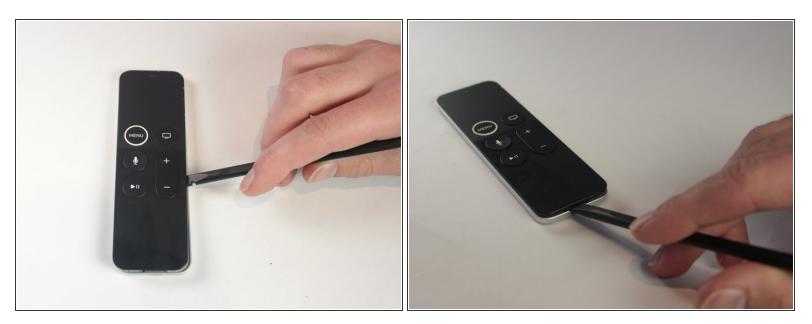

 Using a spudger, gently lift the face of the remote. Starting from the bottom and working your way to the top.

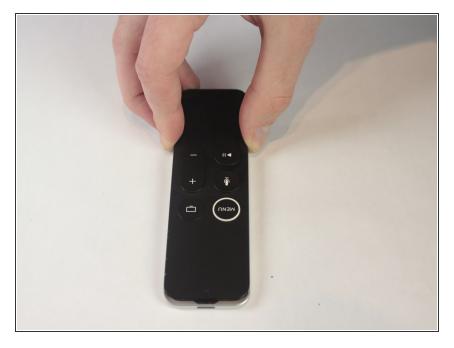

 Push front face forward to disengage plastic clips at the top of the remote.

Step 4




• Unlatch the connector that binds the touch screen and logic board.




• Use tweezers to pull off the connector that binds the touch screen to the logic board.

Step 6

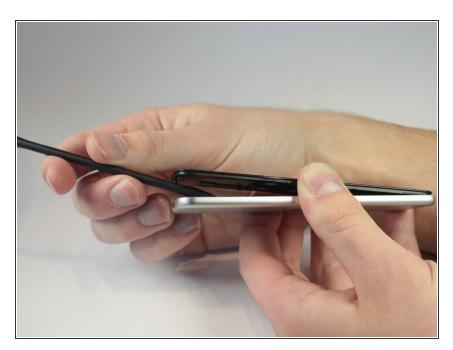


• Lift the face from the body of the remote.

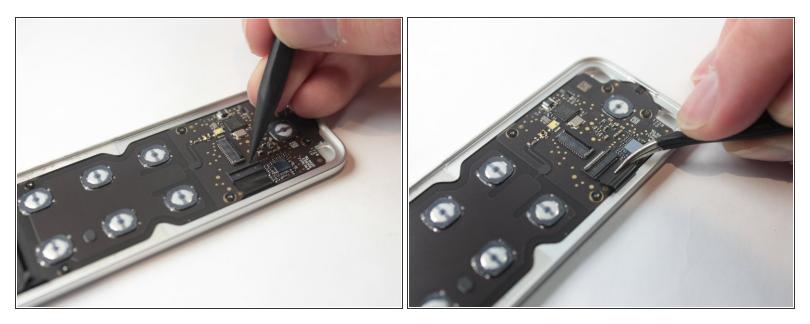


- Lift the latch holding back the connector to the battery.
- Use tweezers to disconnect the battery connector.

Step 8

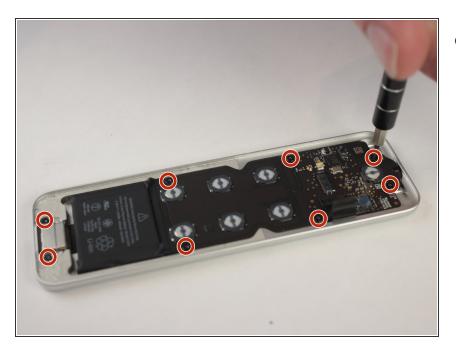


- Remove the following screws using a T3 Torx screwdriver:
 - Eight 2mm screws

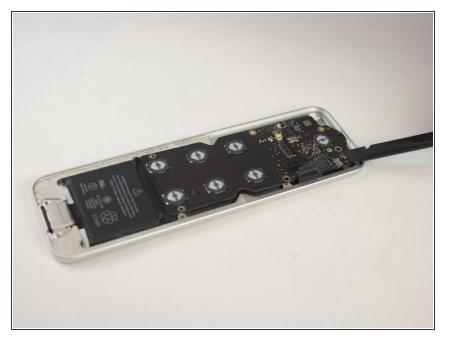

 Using a plastic spudger, gently remove the logic board from the case of the remote.

Step 10

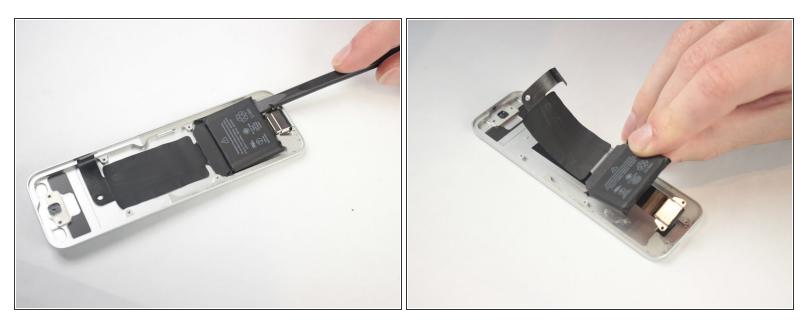

- Gently dislodge the battery from the remote case, making sure to avoid damaging the battery itself.
- The battery should be fully removed now.

To reassemble your device, follow these instructions in reverse order.