



Apple TV 4K Power Connector Replacement

This guide will show you how to disassemble and...

Written By: Brian Gehring



INTRODUCTION

This guide will show you how to disassemble and replace the power connector on your Apple TV 4K.

TOOLS:

- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [TR7 Torx Security Screwdriver](#) (1)
-

Step 1 — Logic Board



- Use a spudger to pry the bottom panel off from the body. It is held on with clips on the inside, so you will need to make sure those are undone while opening.
- ⓘ The panel is held onto the device tightly, so you may need to be a bit forceful to remove it.

Step 2




- Remove the following screws using a T6 Torx screwdriver holding the heat sink assembly in.
 - Four 10 mm screws
- Lift and remove the heat sink assembly from the device.

Step 3



- Use plastic spudger to pull up on all three antenna connectors to remove them.
- Remove rubber piece from front side of device.

Step 4

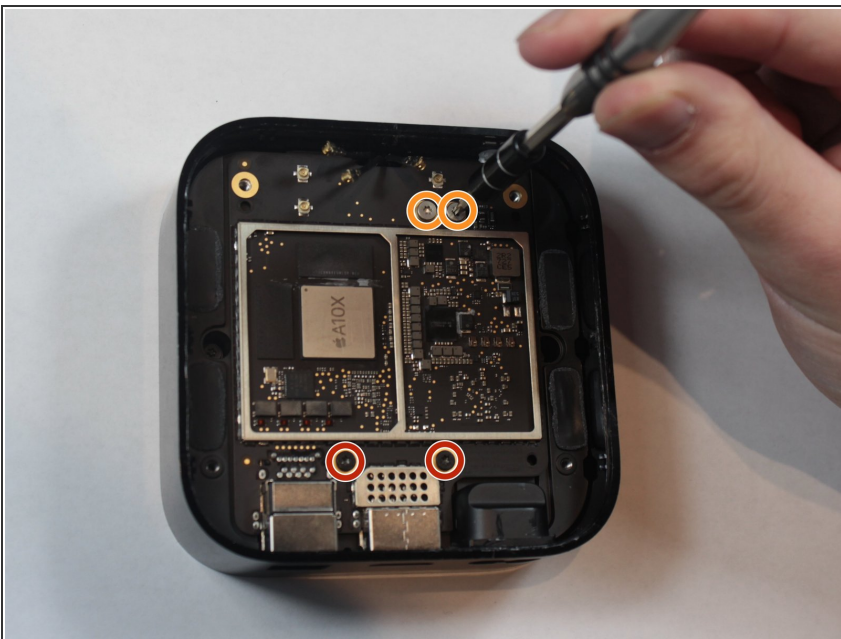

- Unscrew the following screws holding the logic board in place using the T7 Torx:
 - Two black 3 mm screws
 - Two silver 4 mm screws

Step 5




- Use a spudger to pry up logic board. Try lifting it up from the front side.
- Remove logic board and set aside.

Step 6 — Power Connector



- Use a T7 Torx to remove the screws:
 - Five 5mm screws
- Carefully flip the device upside down to remove the logic board/power supply mount.

Step 7

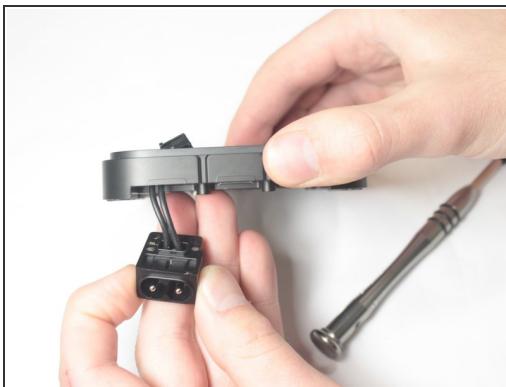

- Disconnect the latch connecting the power connector to the power supply.
- Feed the wire through the logic board/power supply mount. After this, remove the power connector from the device.

To reassemble your device, follow these instructions in reverse order.