



# Acer Aspire E1-470P-6659 Battery Replacement

How to replace the battery in an Acer Aspire E1-470P-6659

Written By: Faith Lobaton



## INTRODUCTION

If you have battery problems or need to remove your battery before replacing other parts of the laptop, use this guide to remove and replace your battery.



### TOOLS:

- [Spudger](#) (1)



### PARTS:

- [Acer AL12A32 Replacement Battery](#) (1)

## Step 1 — Battery




- Turn off the laptop and disconnect all device cords.

## Step 2



- Flip the laptop over so the bottom is facing you.

## Step 3

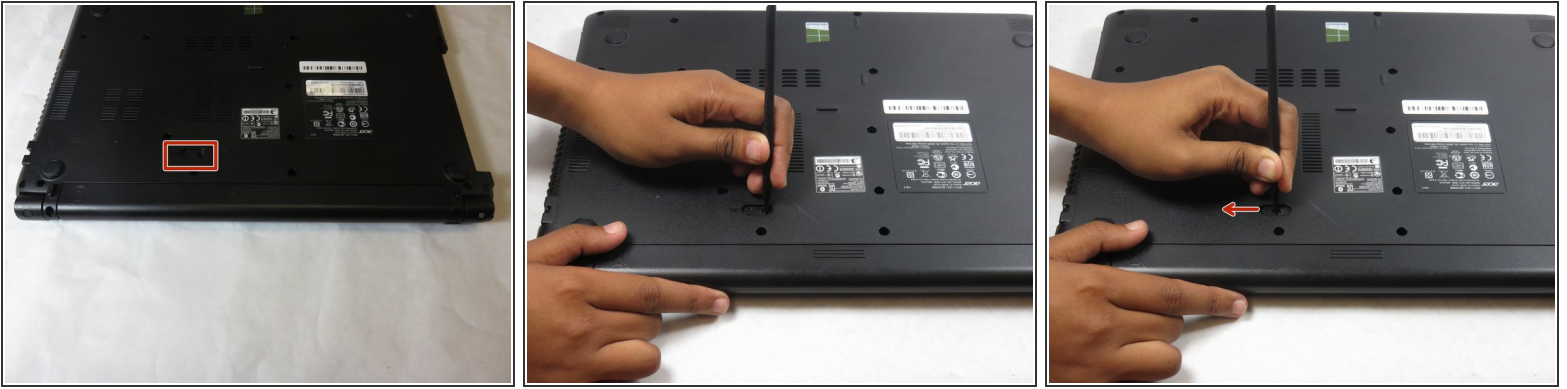

- Use your finger or a spudger to pull the battery release switch.

## Step 4



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.