



# Acer Aspire E5-571-58CG Battery Replacement

This guide will show you how to remove and replace your Acer Aspire E5-571-58CG's battery.

Written By: Daniel Mello



---

## INTRODUCTION

If the battery life is shortened, you may need to replace the laptop's battery. This guide will help you through this process.


---

### **TOOLS:**

- [Spudger](#) (1)
-



## Step 1 — Battery



 Make sure the laptop is powered off.

- Flip the laptop over and locate the battery release switch.
- Insert the pointed end of the spudger into the battery release switch.
- Push the battery release switch to the right.

## Step 2

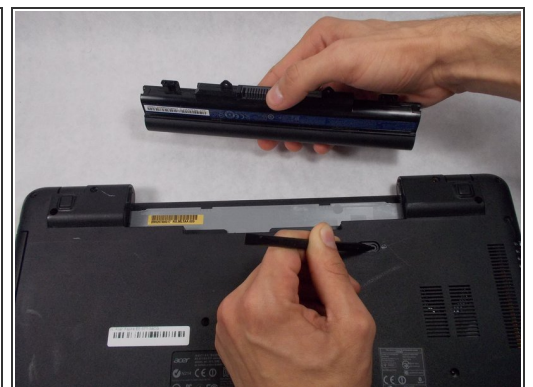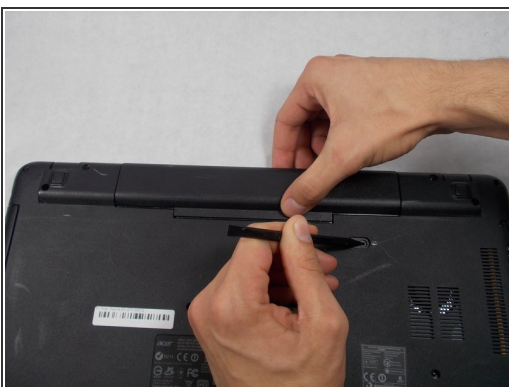

- While the battery release switch is pushed to the right, carefully slide the battery out of its socket.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:07:24 AM (MST).

