


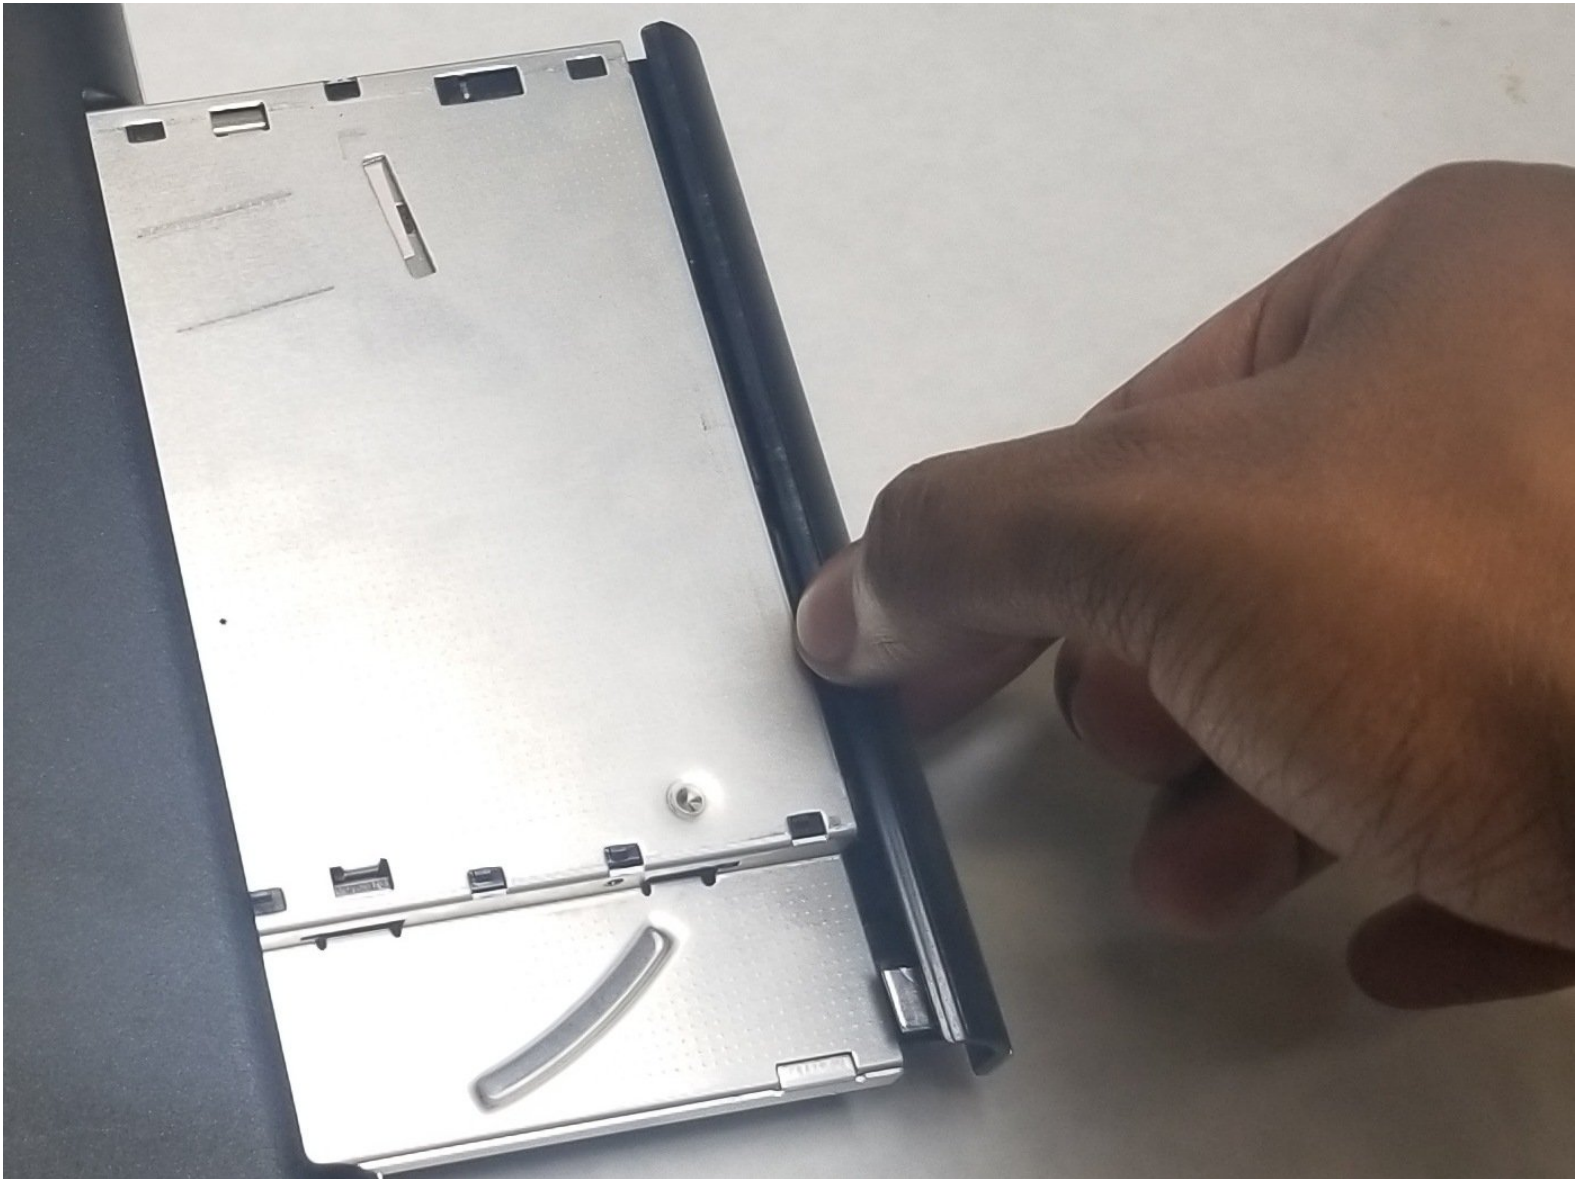

# ASUS N56JR-MH71 Optical Drive Replacement

This guide will show you how to remove the optical drive from the ASUS N56JR-MH71 laptop.

Written By: Ruben Lopez



---

## INTRODUCTION

If your optical drive is damaged or if you wish to upgrade it, this guide will show you how to replace the optical drive. A metal spudger will be a tool used for this guide.

---

### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Battery



- Push the battery latch.

## Step 2



- Keep the battery latch held while you remove the battery.




## Step 3 — Optical Drive




- Remove the one screw above the battery port.
- ⓘ This device was missing its screws on the back cover when we received the device. As a result, we do not know what head type the screws are, along with their lengths.

## Step 4

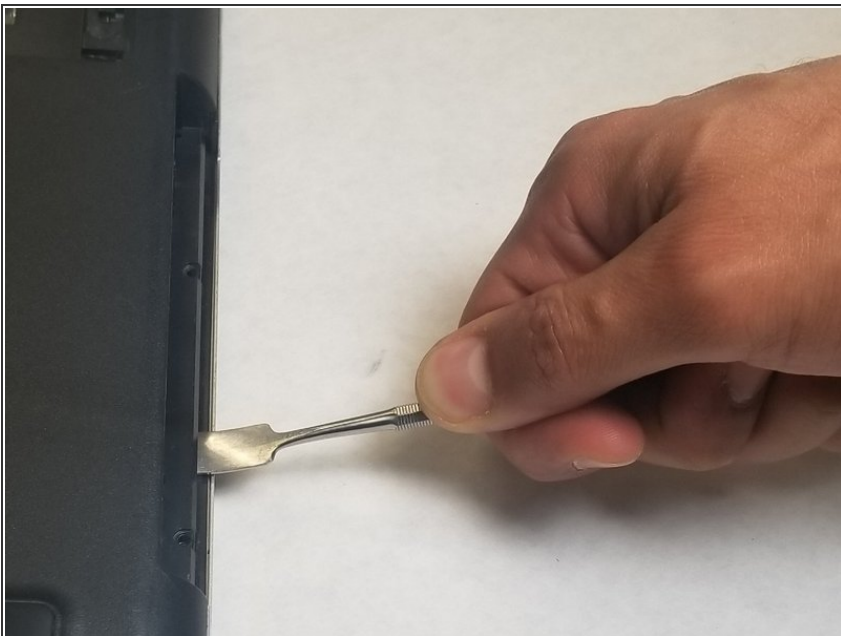

- Use a metal spudger to dislodge the optical drive from the connector.

## Step 5

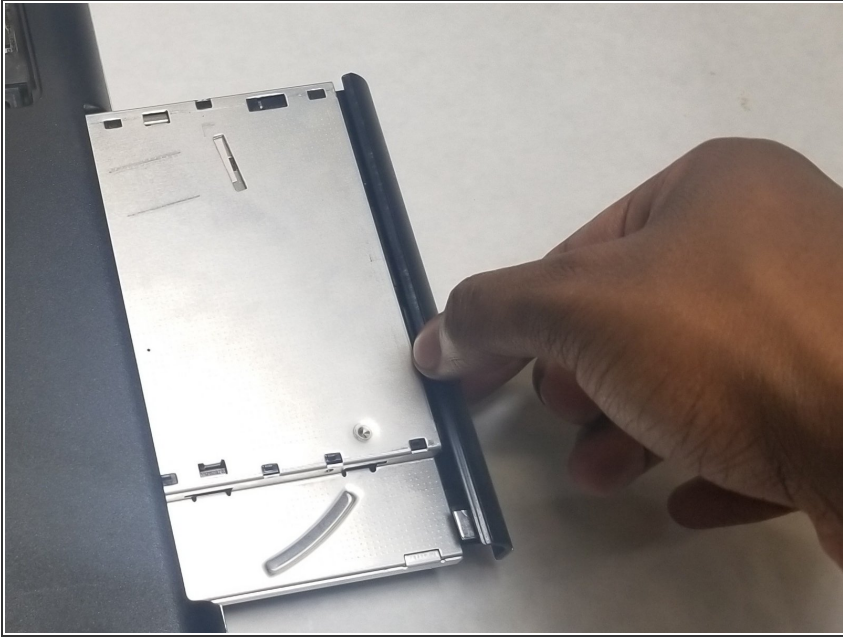

- Pull out the optical drive.

To reassemble your device, follow these instructions in reverse order.