



HP Pavilion g6-2228tx RAM Replacement

Replacing a faulty ram stick will allow laptop to function properly in your HP Pavilion g6-2228tx.

Written By: Hai Lin



INTRODUCTION



The ram stick helps the laptop process and stores data. It is the laptops working memory, therefore, a faulty ram stick will slow down laptop functions.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

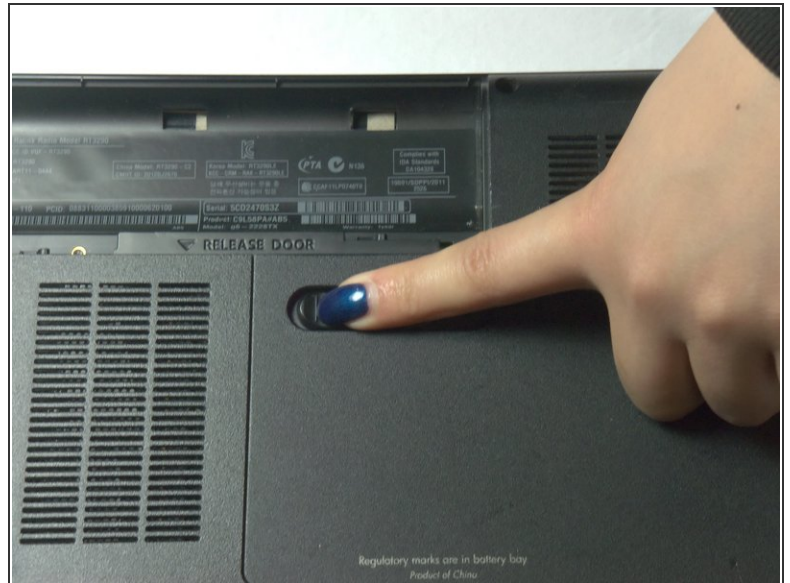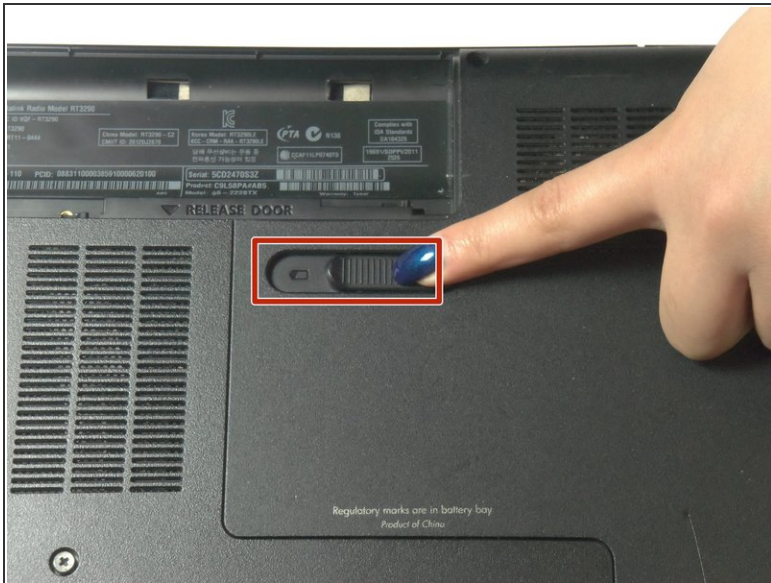

- Push the battery latch to the left to release the battery.

- ❗ Remove the battery from the device.

Step 2 — Hard Drive




- Use a Phillips #0 screw driver to loosen the screw. The screw will not detach from the cover.

Step 3




- Place your hand on the cover and slide the cover down.
- Use your hand to lift the cover from the bottom right and slide the cover to the right to remove the cover.

Step 4

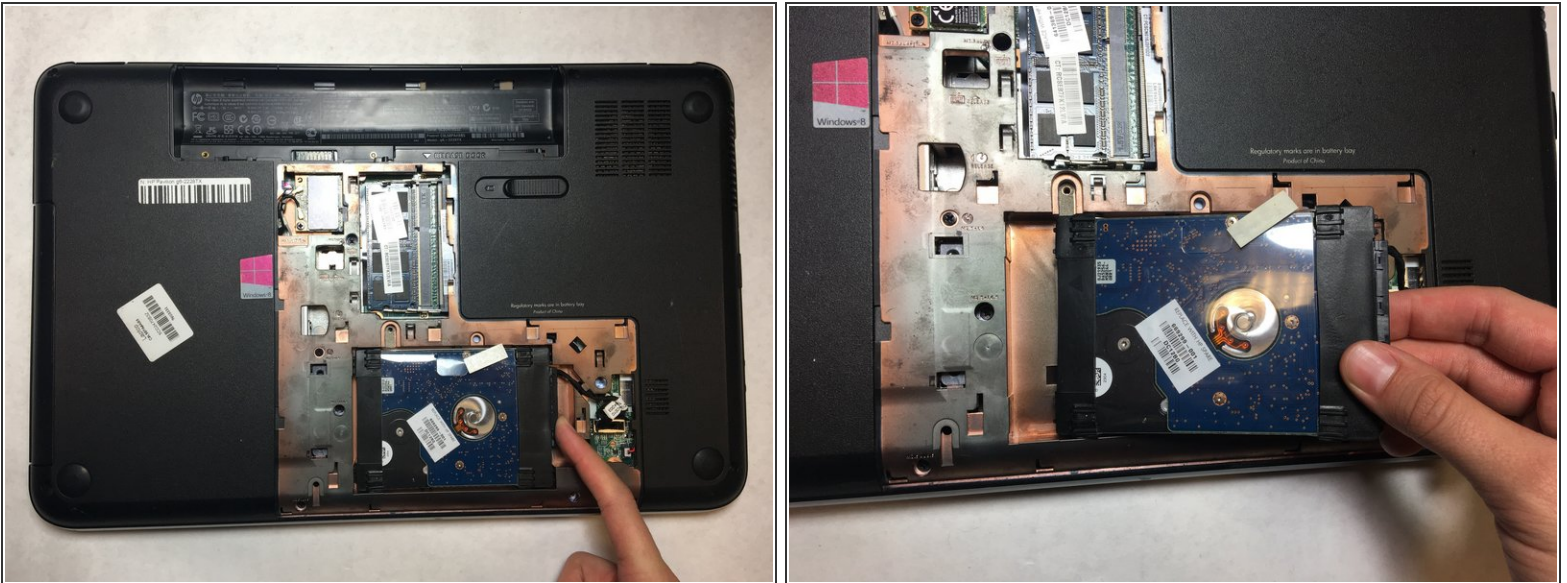

- Place one finger on the right side of the hard drive.
- Push the hard drive to the left and lift the hard drive up to remove it from the device.

Step 5

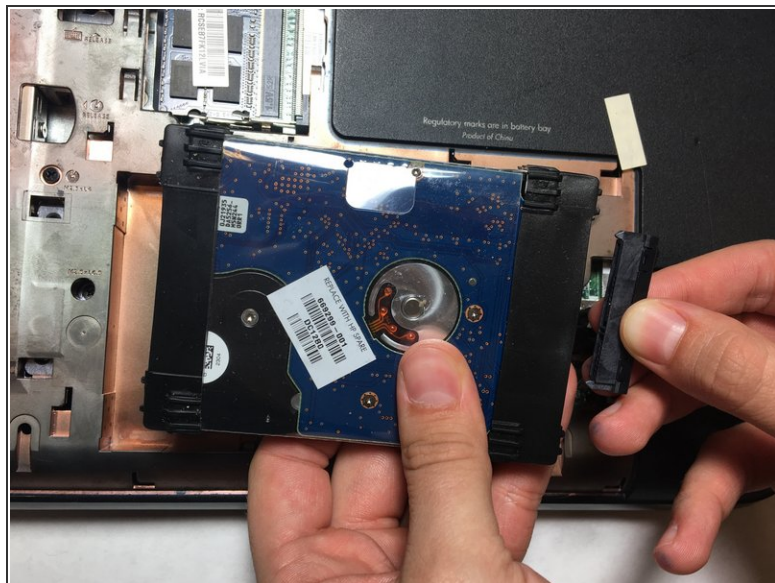



- Disconnect the connecting part by pulling the part to the right.
- Remove the hard drive from the device.

Step 6 — RAM



- The silver hinges holds the RAM in place.

Step 7

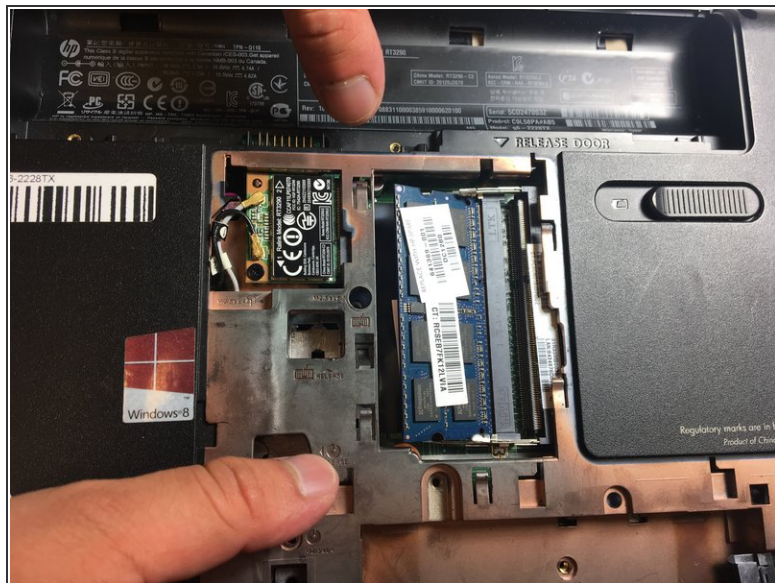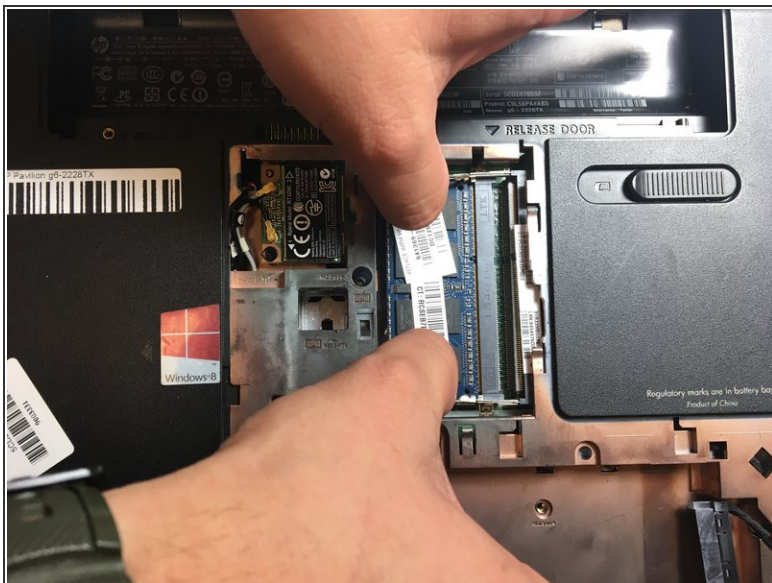

- Use two fingers to push both silver hinges outward to release the RAM.

i The released RAM will pop up.

Step 8



- Pull the RAM stick to the left and remove it from the device.

To reassemble your device, follow these instructions in reverse order.