


Toshiba CB35-C3300 Heat Sink Replacement

This replacement will show you how to safely replace your heat sink.

Written By: Gabriel Bryan

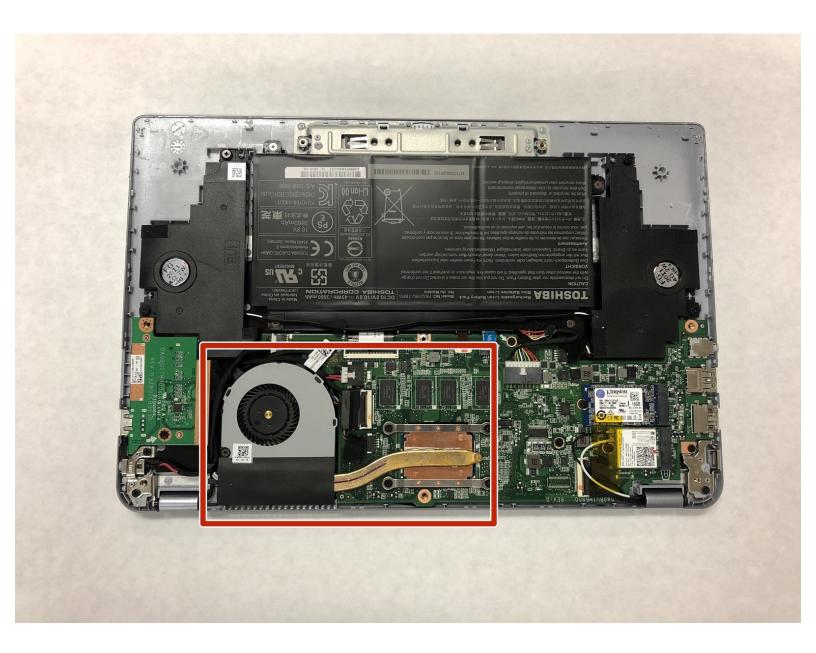

INTRODUCTION


This guide will show you how to correctly replace your heat sink. This is a fairly straight forward replacement and does not require advanced knowledge or training.



TOOLS:


• Essential Electronics Toolkit (1)

Step 1 — Heat Sink

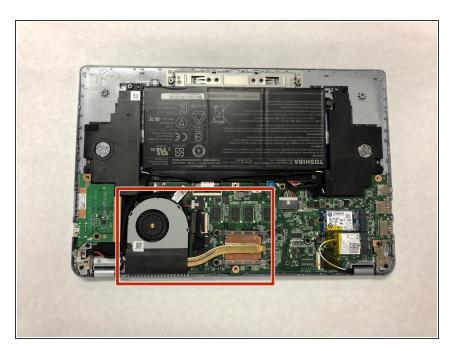


 Remove the back cover of the Chromebook and locate the Heat sink and connected fan.

Step 2

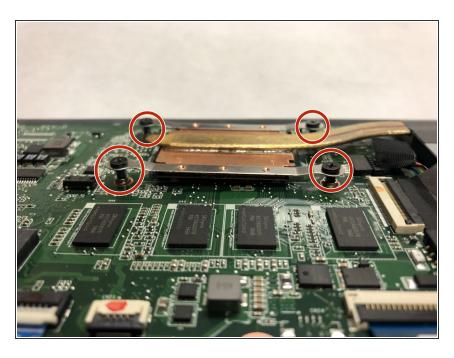

 Unscrew the 4 screws connecting the Heat Sink to the motherboard.

Step 3

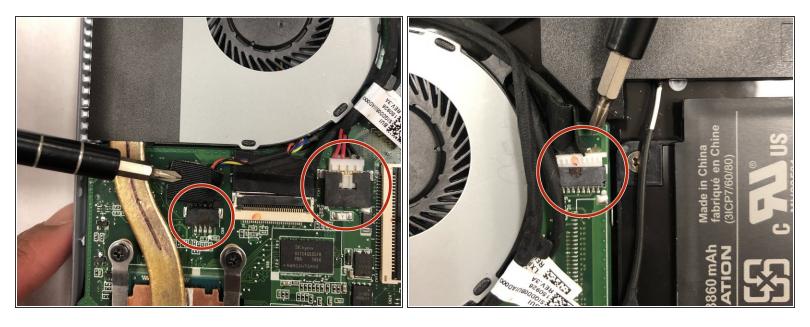

Unplug the three primary wires attached to the fan from the motherboard.

Step 4



Ensure that all cables are detached.

Step 5



 Carefully remove the Heat sink and fan and set aside.

To reassemble your device, follow these instructions in reverse order.