



# PSP Go Trigger buttons Replacement

Written By: Walter Galan



## INTRODUCTION

This guide shows you how to remove the PSP Go's trigger buttons.

**Note:** The procedure is exactly the same for the both left and right trigger buttons.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Sony PSP Go Left Trigger Button](#) (1)
- [Sony PSP Go Right Trigger Button](#) (1)

## Step 1 — Back Cover



- Unscrew the four Phillips screws on the back of the PSP Go.
- Rotate the PSP so you can see the top of the device.
- Unscrew the two Phillips screws next to the volume buttons.

## Step 2



- Use a plastic opening tool around the perimeter of the back cover to loosen it on all sides.
  - Open the back cover by gently lifting the right side, and rotating it to the left side (as if you were opening a book).
- ⚠ Be careful not to rotate the back cover from the bottom, as you will break the plastic screw holes on top of the device.



### Step 3 — Top Cover



 
- Pull the top cover upwards gently from its housing.

### Step 4 — Trigger buttons




- The top cover will most likely come off during the repair, so might as well take it off now. Pull it upwards gently from its housing.

## Step 5

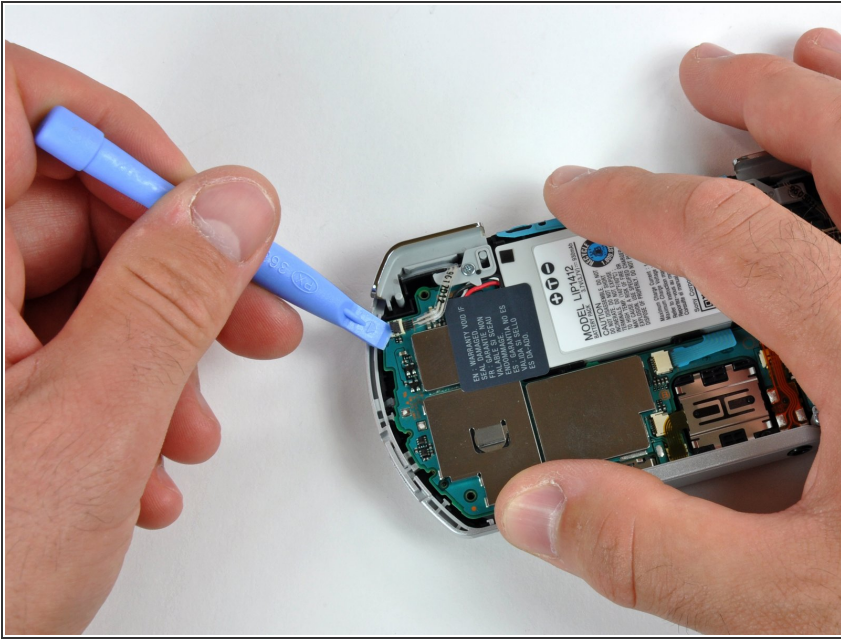

- ❗ The procedure is exactly the same for the left trigger button.
- Use a plastic opening tool to gently flip up the left trigger connector.

## Step 6

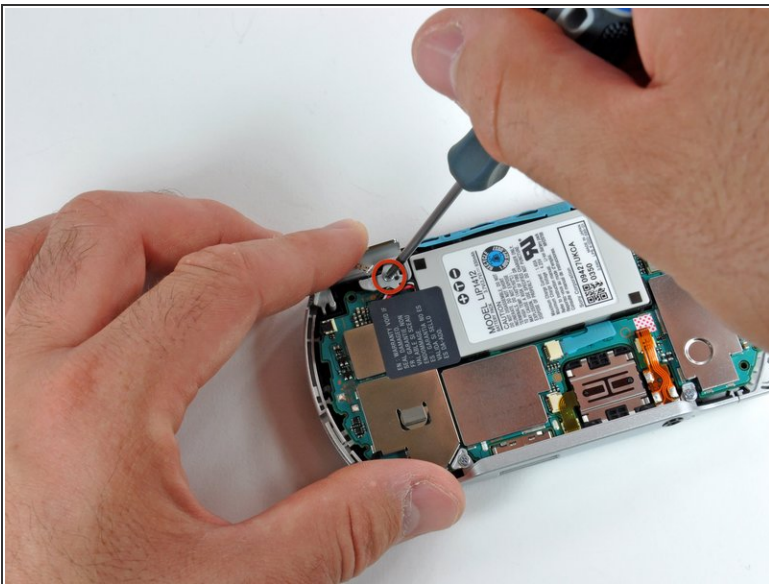 

- Unscrew the lone Phillips screw holding the trigger in place. Remove both trigger and retaining plate from the PSP Go.
- ☑ If necessary, repeat steps 2 and 3 to remove the right trigger button.

To reassemble your device, follow these instructions in reverse order.