



Sony VAIO VPCEE26FX RAM Replacement

This guide shows how to remove/replace the RAM...

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the RAM on the Sony VAIO VPCEE26FX laptop computer.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
-


Step 1 — Battery



⚠ Ensure that the laptop is powered off before disconnecting the battery.


- Flip the laptop over so the underside of the laptop is facing up.

Step 2

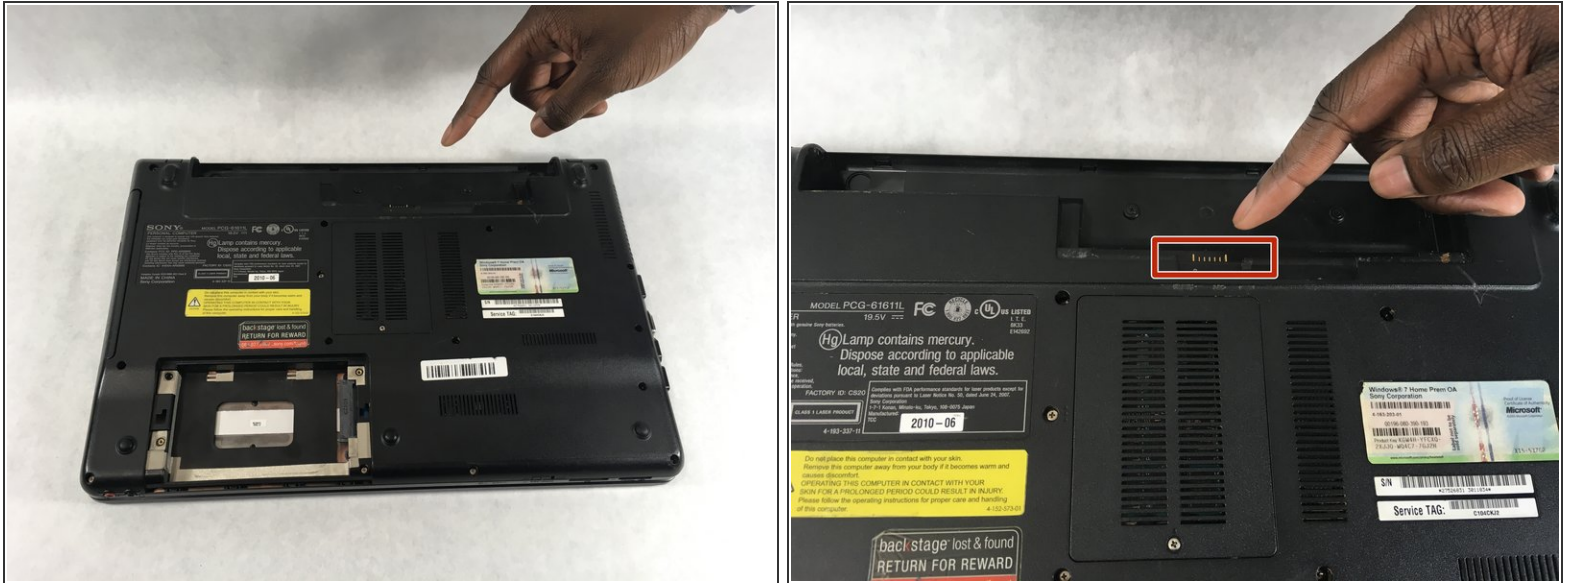

- Slide the two tabs towards each other until the battery disconnects slightly from its position.
 - Carefully lift the battery out of its position away from the laptop.
- i** The battery is not pictured here, since it is missing from this particular device.

Step 3 — RAM

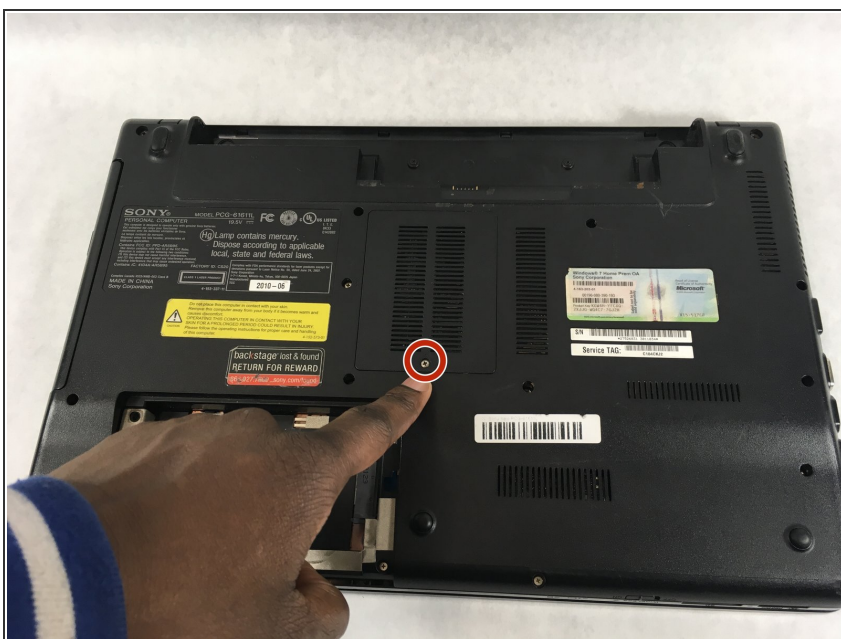



- Using a JIS #0 screwdriver, loosen the captive screw attached to the RAM cover.
- i** This screw will not come out all the way, but will remain attached to the cover instead.

Step 4




- Remove the cover which will reveal the two RAM sticks.

Step 5

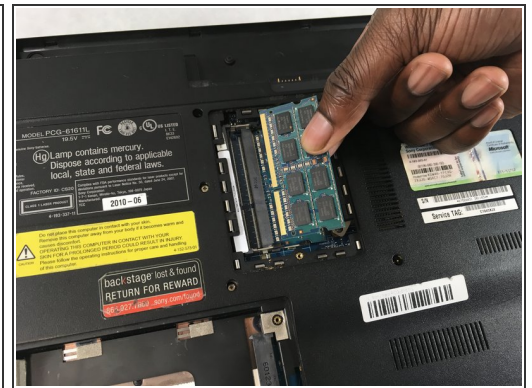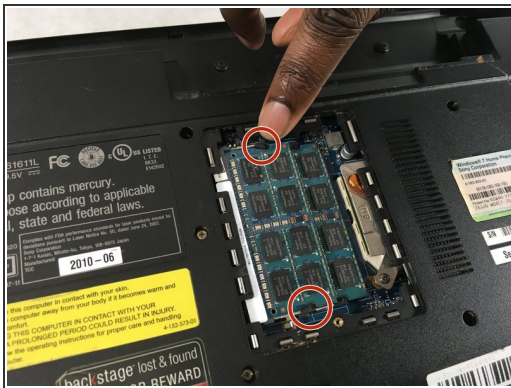

- Push the two tabs holding the RAM sticks in place, away from each other.
- The first RAM stick will pop up out of place. Remove it away from its position.

Step 6

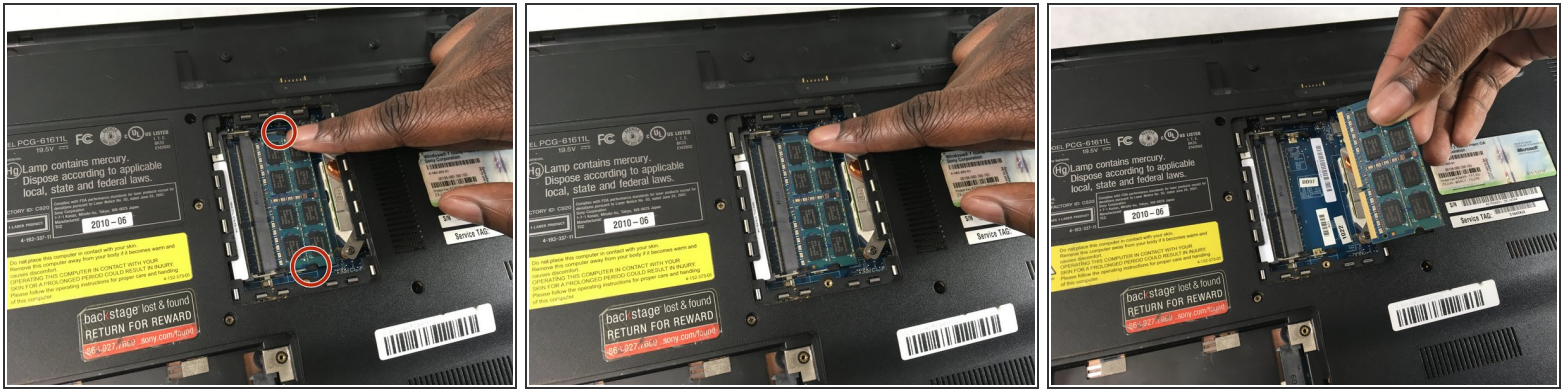

- Push the two tabs holding the second RAM stick in, away from each other.
- The second RAM stick will pop up out of place. Remove it away from its position.

To reassemble your device, follow these instructions in reverse order.