


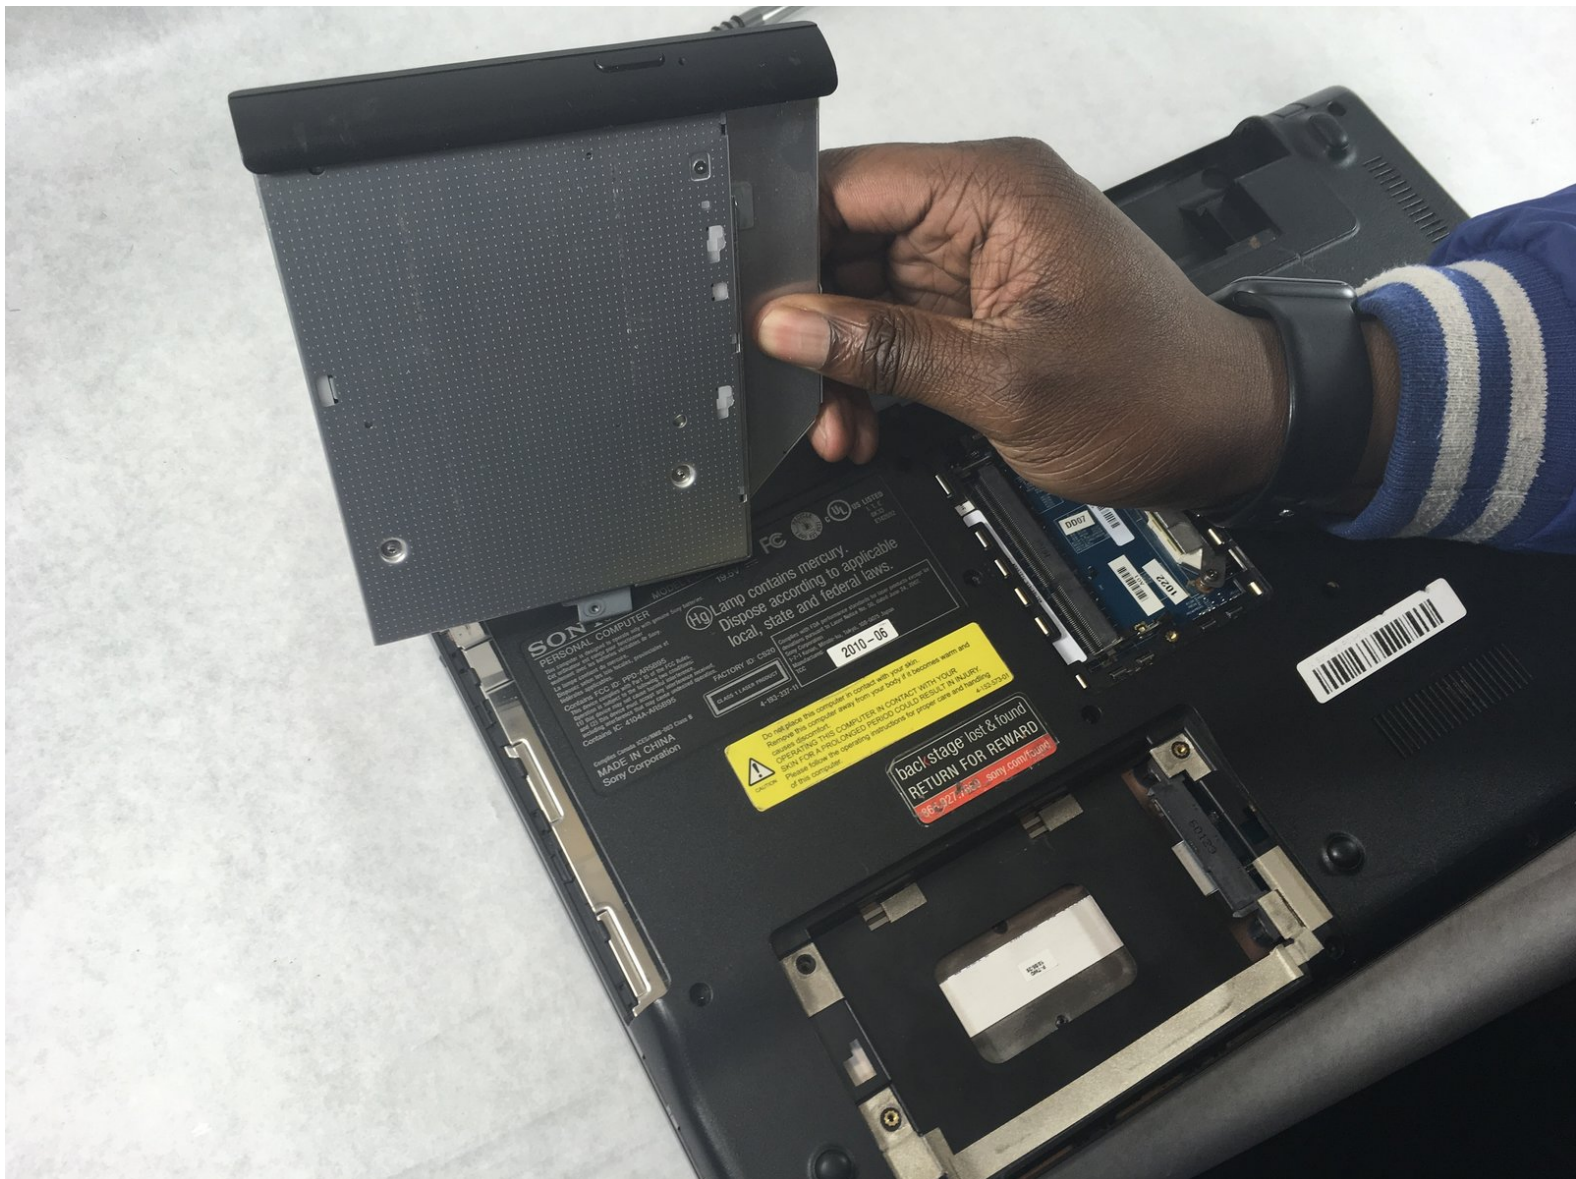

Sony VAIO VPCEE26FX Optical Drive Replacement

This guide shows how to remove/replace the...

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the CD-ROM/optical drive on the Sony VAIO VPCEE26FX laptop computer.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
-


Step 1 — Battery



⚠ Ensure that the laptop is powered off before disconnecting the battery.

- Flip the laptop over so the underside of the laptop is facing up.

Step 2

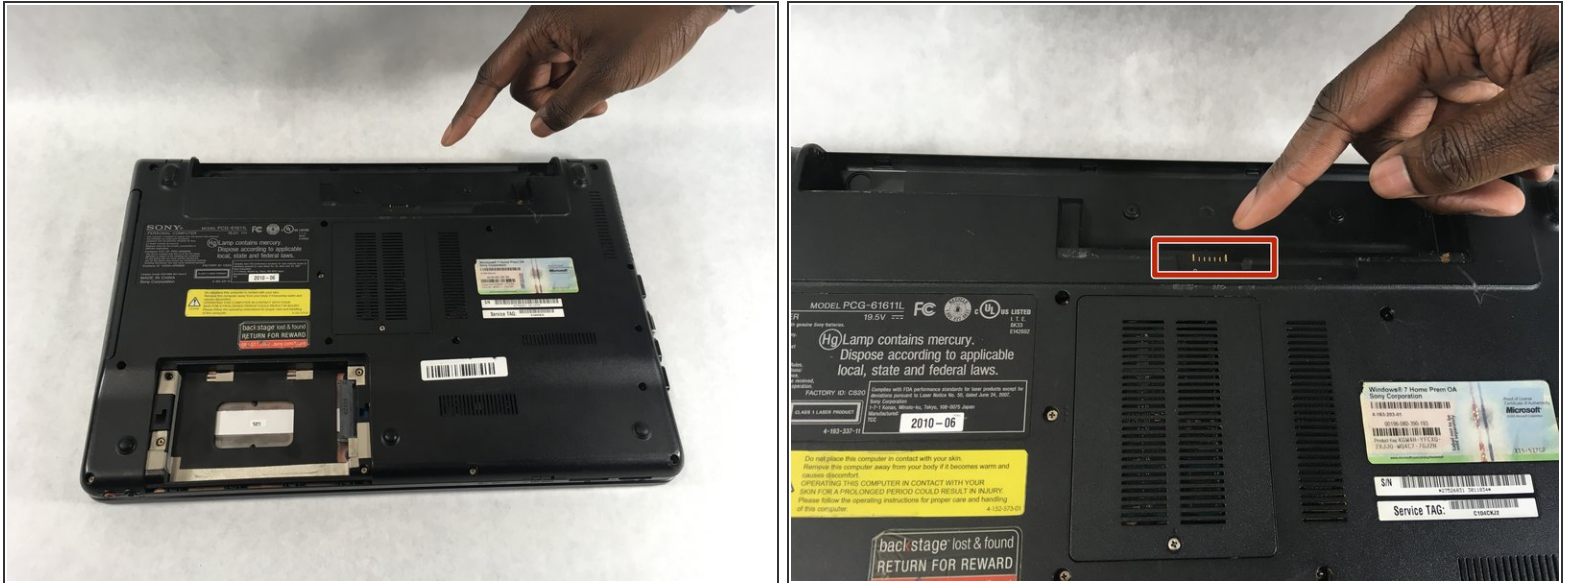


- Slide the two tabs towards each other until the battery disconnects slightly from its position.
- Carefully lift the battery out of its position away from the laptop.
- ❗ The battery is not pictured here, since it is missing from this particular device.

Step 3 — Optical Drive



- Use a JIS #0 screwdriver to remove the 4mm screw from its place.

Step 4

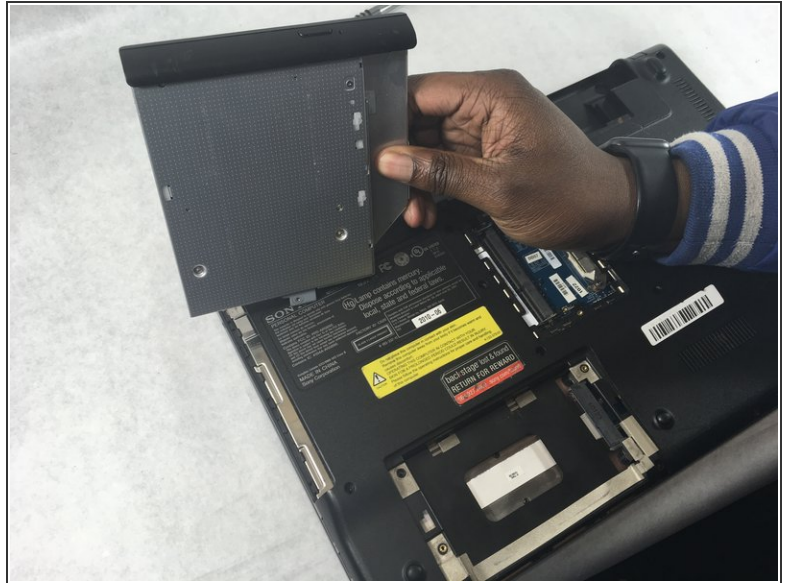

- Remove the optical drive gently away from its holder on the laptop.

To reassemble your device, follow these instructions in reverse order.