



# HP G71t-400 RAM Replacement

In this guide a step-by-step walk through of how to replace the RAM in your HP G71t-400 will be shown.

Written By: Nicholas Castro





## TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-

## Step 1 — RAM



- Lay the laptop down so the bottom is facing up.
- Push the slide button, circled in photo 1, to release the battery.
- Action in picture 2 shows the direction and release.
- Tilt the battery back in the direction it popped up in and remove the battery.
- This ensures there is no power in the system that could potentially short out any components.

## Step 2



- Remove the circled screws.
- Lift and remove the cover, exposing the RAM cards.



## Step 3



- Push in the silver tabs to release the RAM.
- When they pop up from the locked position the RAM may be removed.

To reassemble your device, follow these instructions in reverse order.