



Dewalt DCD778 Outer Casing Replacement

How to replace Dewalt DCD778 outer casing.

Written By: Brittany



INTRODUCTION

If you need to replace a part within the Dewalt DCD778 then you need to remove the outer shell of the drill. By following this guide you will know how to take apart the outer casing to access the internal components of the drill that you wish to replace.

TOOLS:

- [T15 Torx Screwdriver](#) (1)
-

Step 1 — Outer Casing



- Compress the button on front side of the battery and move the drill and battery away from each other.

Step 2




- Remove the battery from drill by sliding the battery outwards away from the drill.

Step 3



- Remove the eight 16 mm screws by using a Torx Security #15 screwdriver.

Step 4

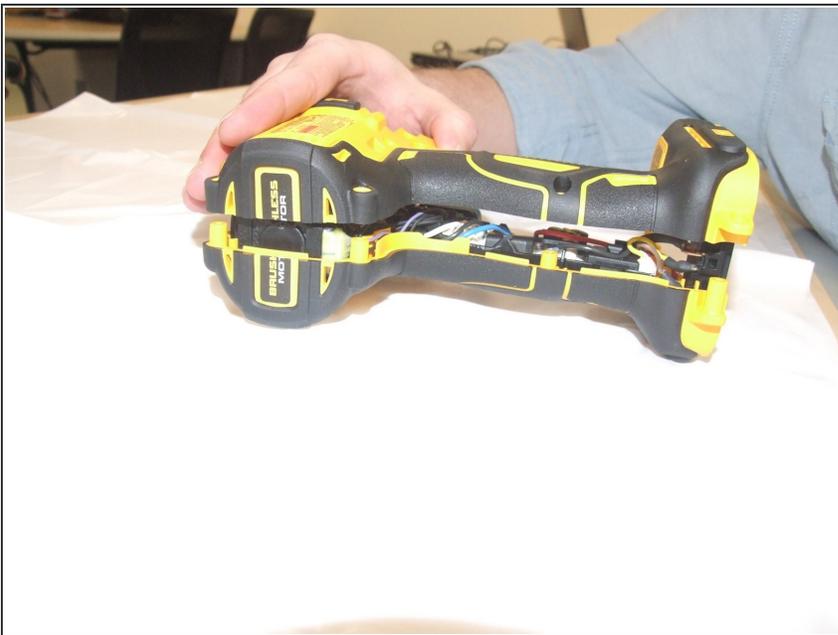

- Lay the drill on its side and gently lift the top half off it.

To reassemble your device, follow these instructions in reverse order.