




# Fujitsu Lifebook UH572 Battery/RAM/HDD Door replacement

Use this guide to access the combined battery, RAM and hard drive compartment in a Fujitsu Lifebook UH572.

Written By: Deib

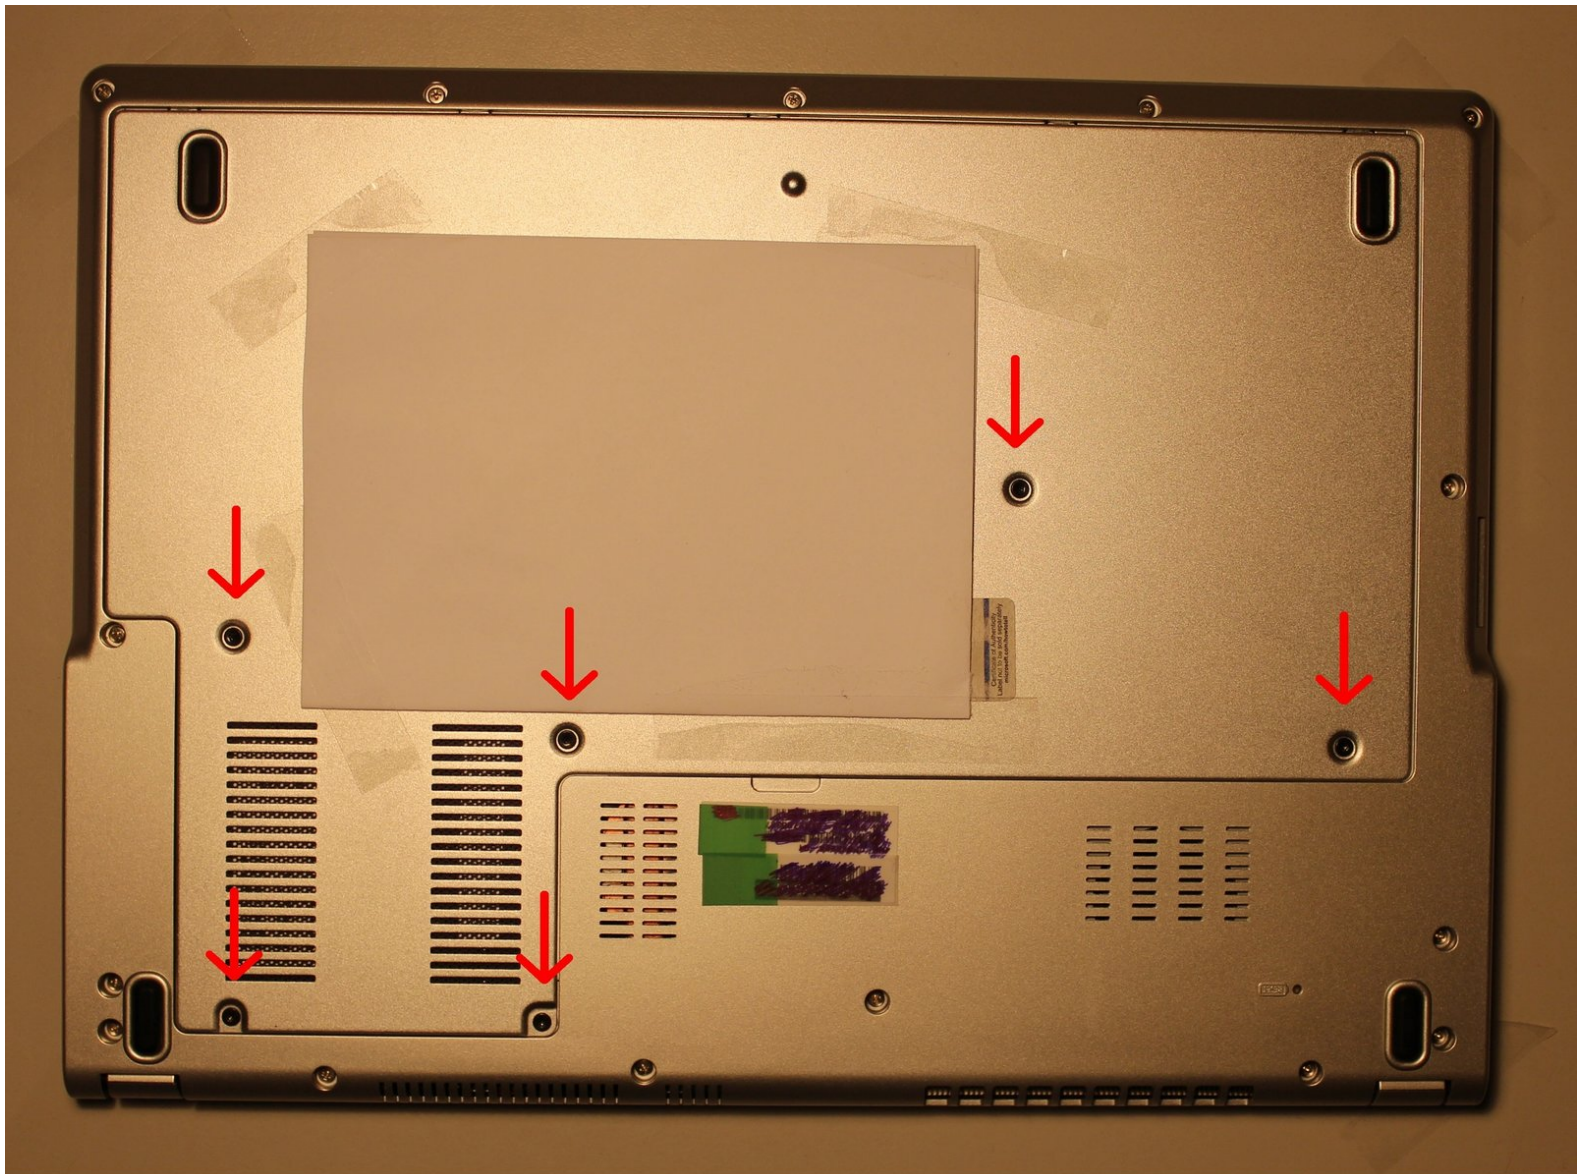

---

## INTRODUCTION




Use this guide to access the combined battery, RAM and hard drive compartment in a Fujitsu Lifebook UH572.

---

### TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery/RAM/HDD Door

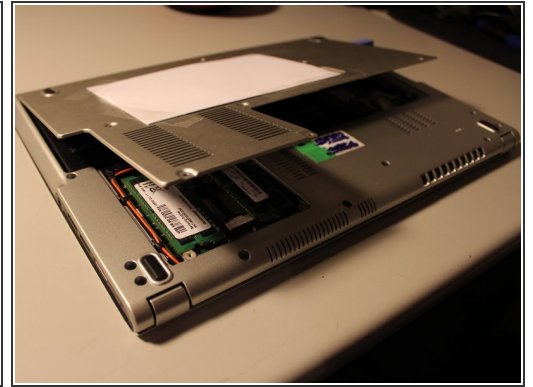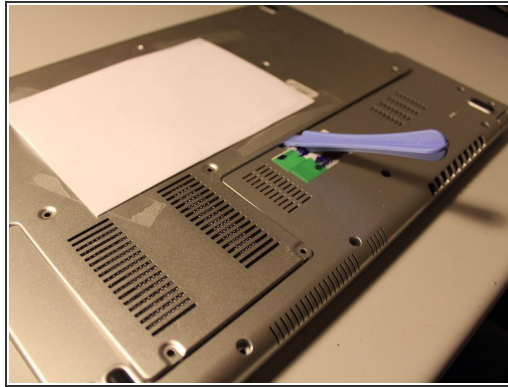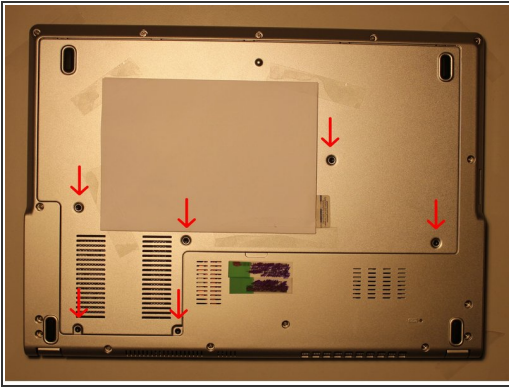

- Remove the 6 black screws
- To lift the cap use the opening tool.
  - There is a pit.

To reassemble your device, follow these instructions in reverse order. You have to press gently the cap in the reverse direction of the arrows, so the screws fit.