



LG K30 MicroSD/SIM Card Replacement

This guide explains the processes necessary to replace the MicroSD or SIM for the LG K30 cell phone.

Written By: Vivek Kathrotiya



INTRODUCTION

If your data is not saving properly and you have attempted to remount your SD card and the problem persists. Have you placed your SD card into a different device and the SD card is not being recognized in that device either? It may be time to change your SD card.

Use this guide to replace your MicroSD card or SIM card.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — MicroSD/SIM Card



- Use the flat end of a spudger to carefully remove MicroSD/SIM tray from the phone.

To reassemble your device, follow these instructions in reverse order.