



# Google Pixel 3 Battery Disconnect

Prerequisite guide only! Removes the charging coil and disconnects the battery for further disassembly.

Written By: Arthur Shi



---

## INTRODUCTION


Prerequisite guide only! This guide is part of an another procedure and is not meant to be used alone.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Remove the screws

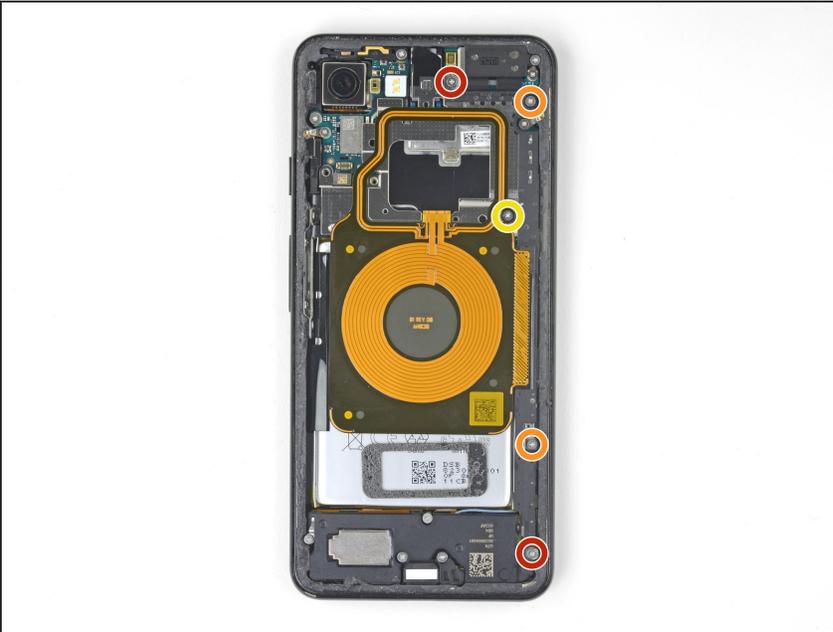


- Remove the five Phillips screws securing the wireless charging coil:
  - Two 1.9 mm screws
  - Two 4.2 mm screws
  - One 4.3 mm screw

## Step 2 — Remove the charging coil



- Lift up and remove the wireless charging coil.

### Step 3 — Disconnect the battery cable

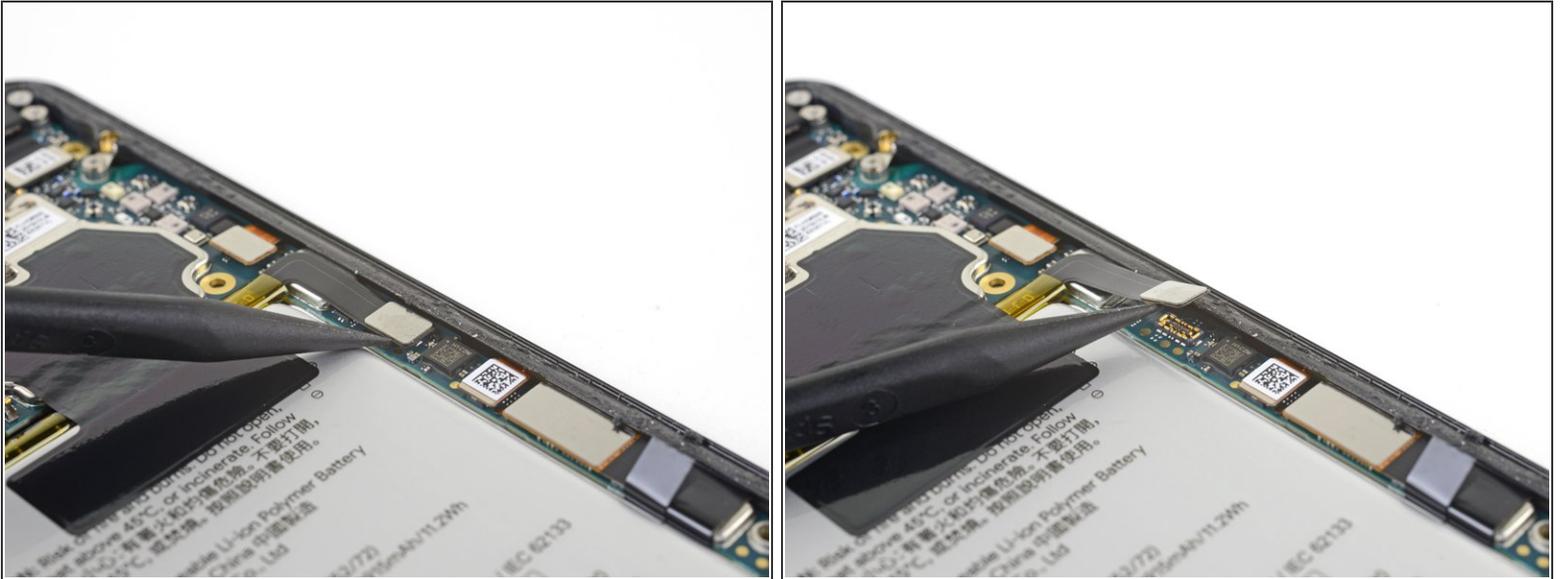

- Use the point of a spudger to pry up and disconnect the battery press connector from its socket near the right edge of the phone.

To reassemble your device, follow these instructions in reverse order.