



# Venturer CR20 Front Screen Replacement

Replace your front screen to bring back a clear display to that alarm clock.

Written By: Robert Myers



---

## INTRODUCTION

In this guide, you will learn how to remove and install the front screen of your alarm clock. The process is quick and easy, with a simple unscrewing followed by popping off the screen.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Front Screen



- On the bottom of the clock locate and unscrew the single 2mm Phillips screw from bottom of the clock.

## Step 2



- Using a moderate amount of force, position the screwdriver in the crack between the front screen and the main body of the clock (as shown) and push the screen away from the main body of the clock.

To reassemble your device, follow these instructions in reverse order.