



Kindle Fire HD 10 Camera Replacement

This guide will show how to access the rear camera in a 7th Generation Kindle Fire HD 10 by Amazon.

Written By: William Hess





INTRODUCTION

If your Kindle Fire HD 10 7th Generation camera is malfunctioning or damaged, use this guide to replace the camera. This guide gives instructions on how to access the rear camera. The camera allows you to take pictures or videos. While using your camera, if there are error messages, a black screen, or see physical damage to the lens, you may be unable to capture photos or videos. Use caution when removing tablet components. Before beginning, make sure to power off your device completely and disconnect from any external power source.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Camera

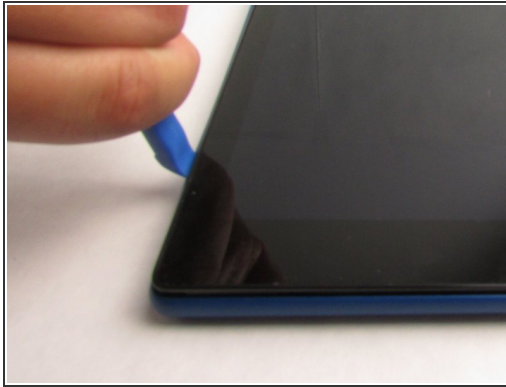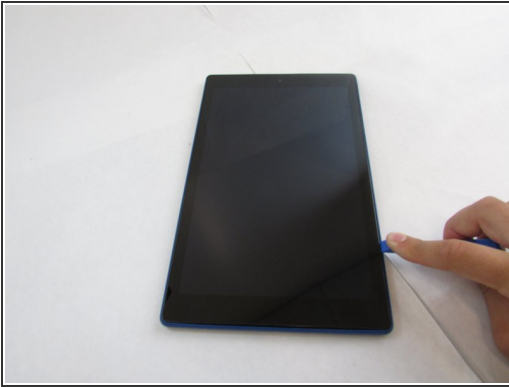


- Pry open the case using the iFixit opening tool.
- Make sure to go around the whole case before removing the whole case.

Step 2

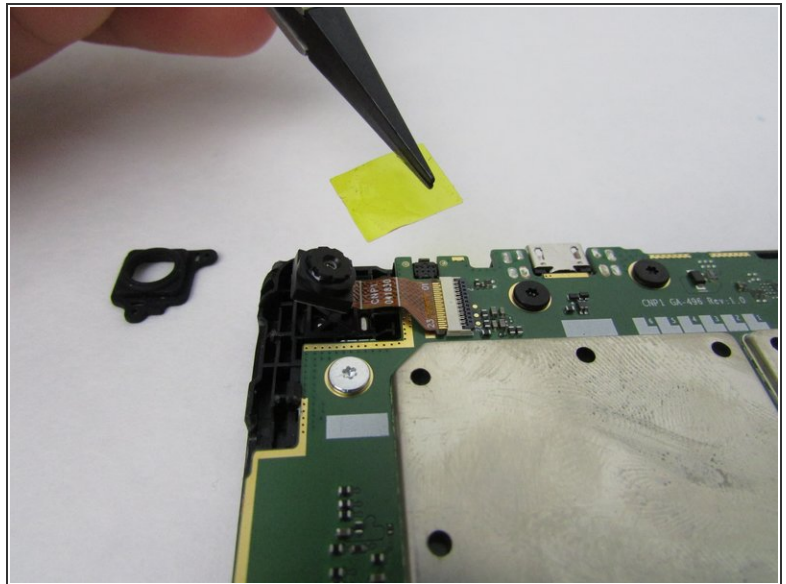


- Remove yellow tape covering the connector.

Step 3

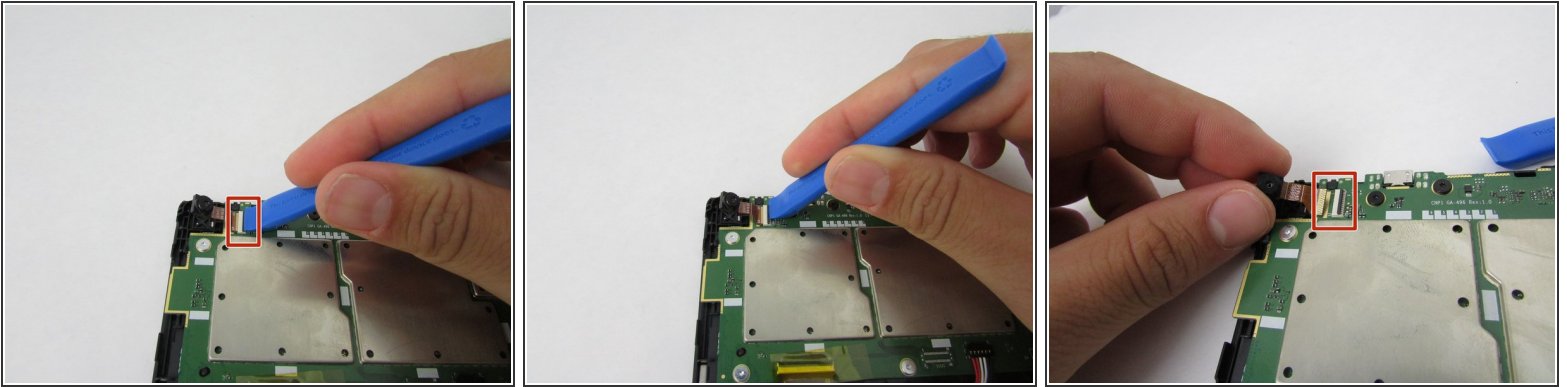


- Gently flip over the black latch with the iFixit opening tool. Disconnect the camera's connector to the circuit board.

Step 4

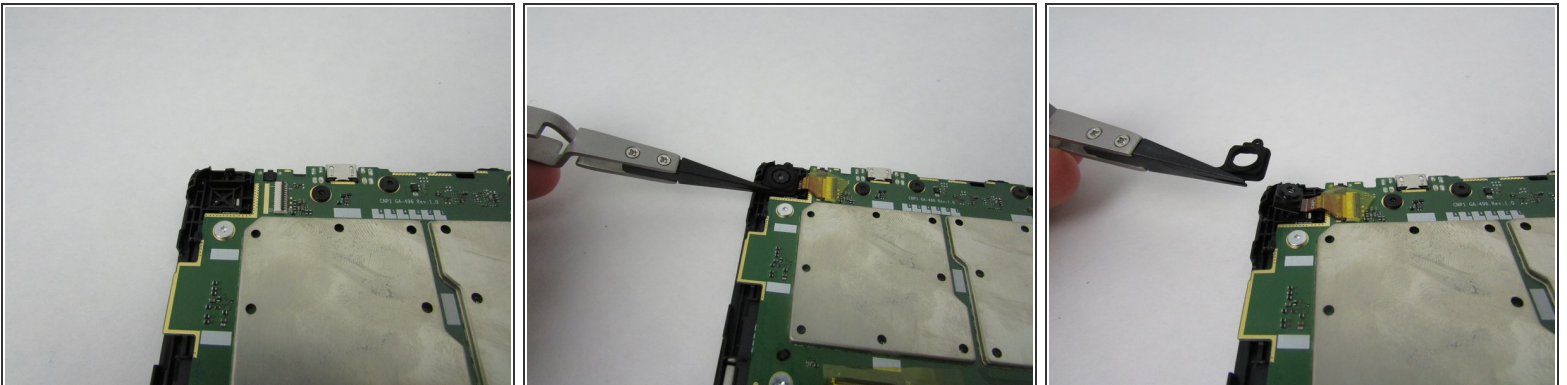

- Remove the rubber casing around the camera lens using a set of tweezers.

Step 5

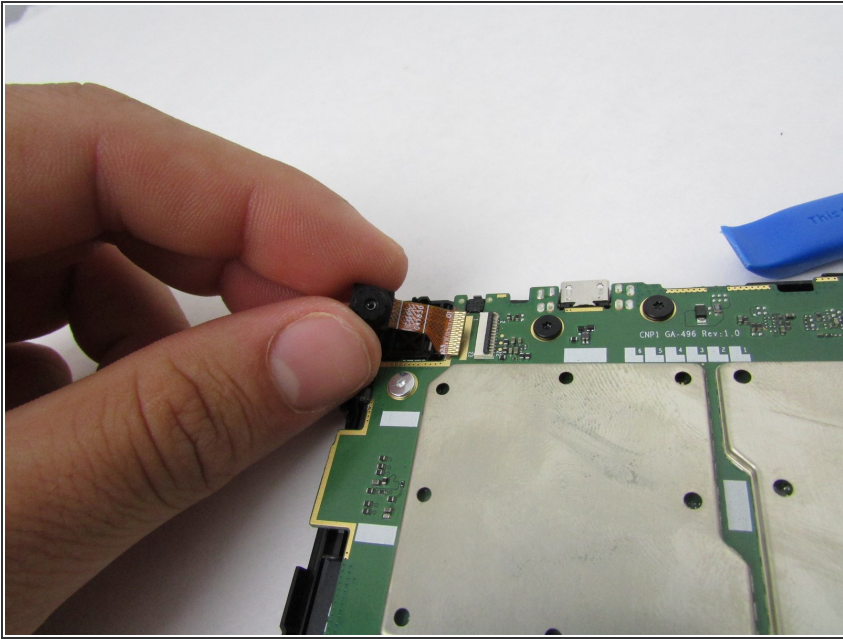

- Remove and pull off the camera lens.

To reassemble your device, follow these instructions in reverse order.