




Disassembling Nikon Coolpix 5600 Front of camera

Learn how to remove the front of Nikon Coolpix 5600 front of camera


Written By: Crista Riedy

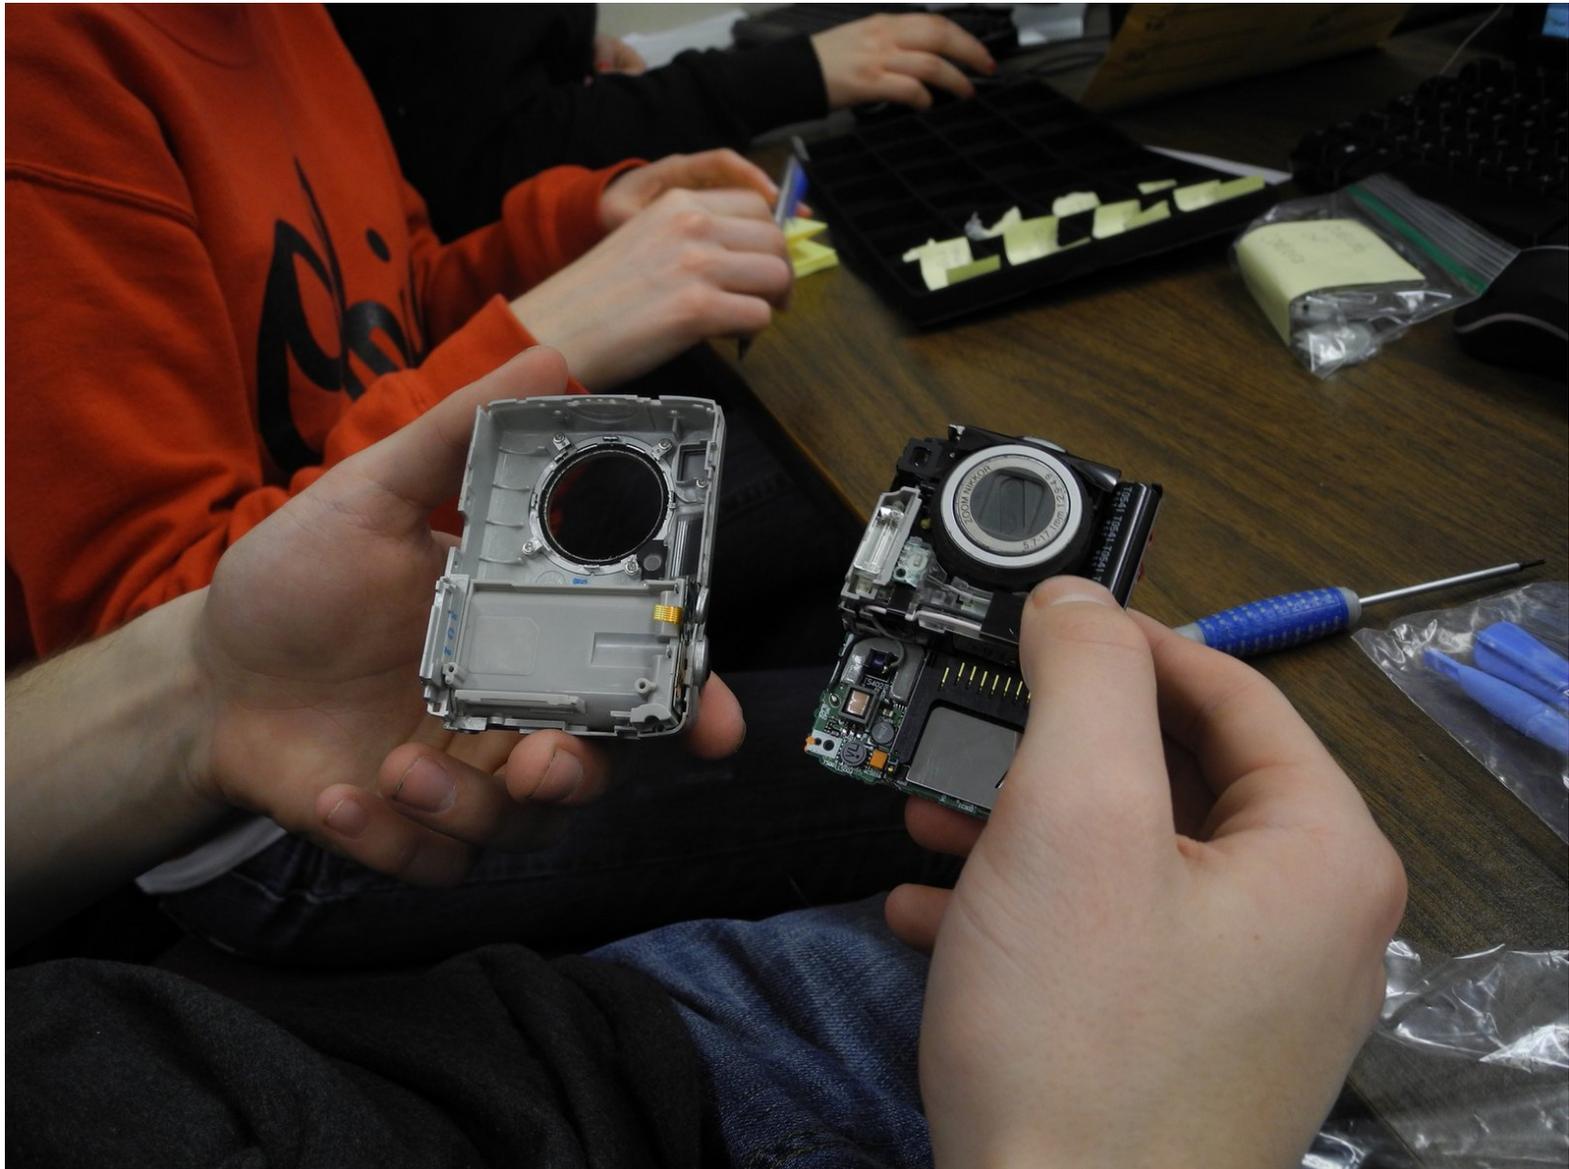

 **TOOLS:**


- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Remove front of camera

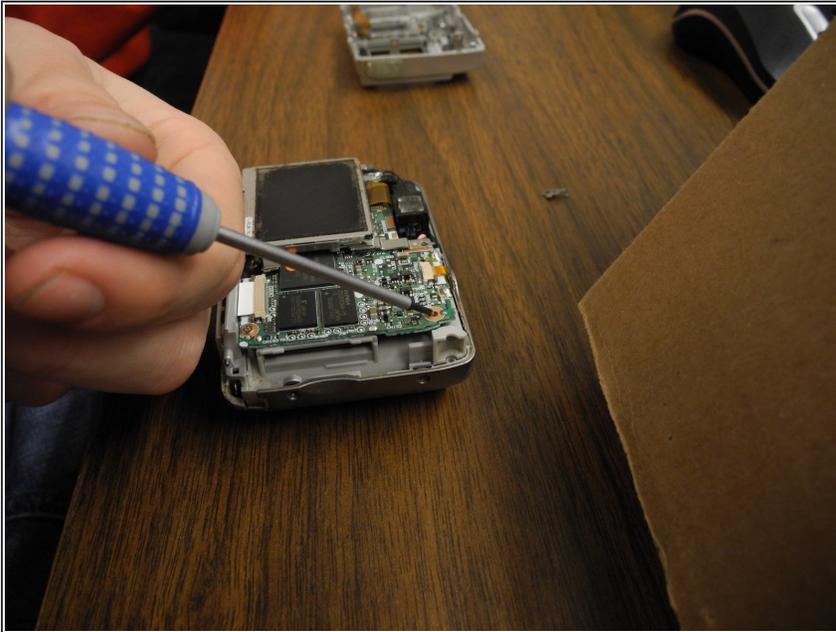

- Unscrew the top right corner screw

Step 2

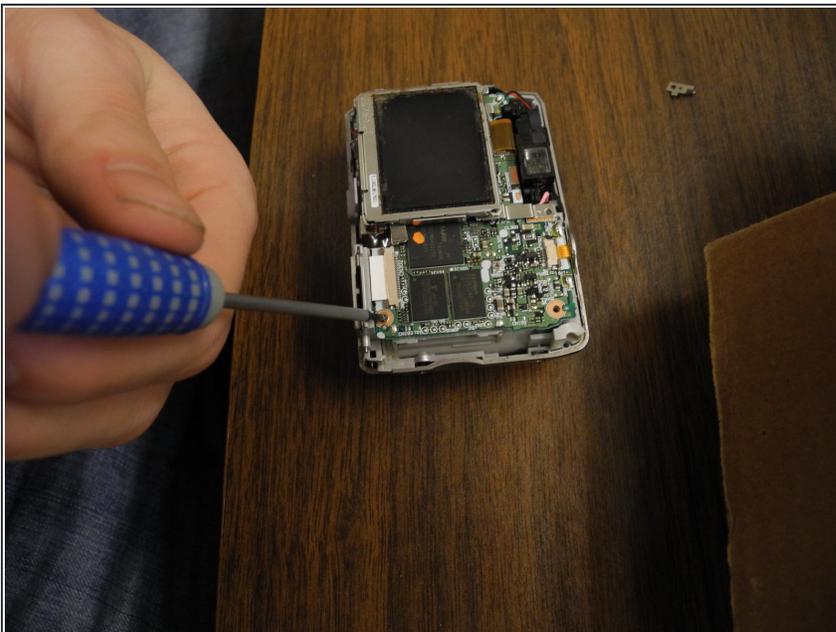


- Unscrew the bottom right corner screw.

Step 3



- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.

Step 4

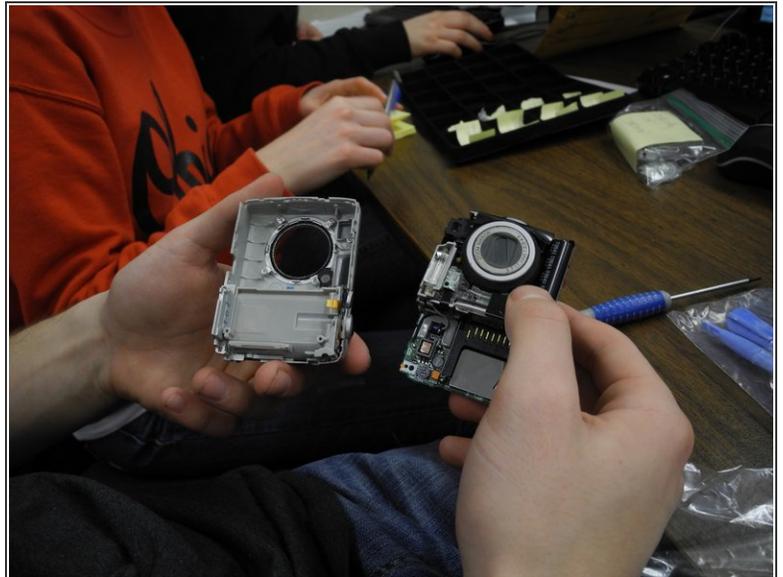

- Pull the front of the camera off of the mother board.

To reassemble your device, follow these instructions in reverse order.