



Amazon Echo Show 2nd Gen Sound foam Replacement

Removal of the outer case from the echo show device.

Written By: Schyler Sapinski



INTRODUCTION

This guide is to show how to replace a damaged or dirty sound foam case on the Echo Show 2nd gen device.

TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Sound foam



 Make sure the device is unplugged and powered off.

- Turn the two screw plugs counterclockwise with a metal spudger until they are 90 degrees from their original position.
- Pull each of the plugs out.

Step 2



- Use the metal spudger to pry and create space between the sound foam and the frame.
- Once you have sufficiently pried the foam from the frame on each side, detach the sound foam from the frame with your hands.

To reassemble your device, follow these instructions in reverse order.