



Acer TravelMate P653-V-6882 RAM Replacement

This guide will help you in replacing the RAM in your Acer TravelMate P653-V-6882.

Written By: Basel Kandil



INTRODUCTION

Sometimes the RAM in a device will slow down over time. If your Acer TravelMate P653-V-6882 is being exceptionally slow, you may need to replace the RAM. This will help your device function better and increase its ability to multi task.

Ensure that the device is fully powered off before following the steps below.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery Pack




- Turn the computer over so the base is facing up.
- Slide the battery lock to unlock position.

Step 2




- Slide the battery release latch to the right.
- ⓘ The battery pack will pop out.

Step 3

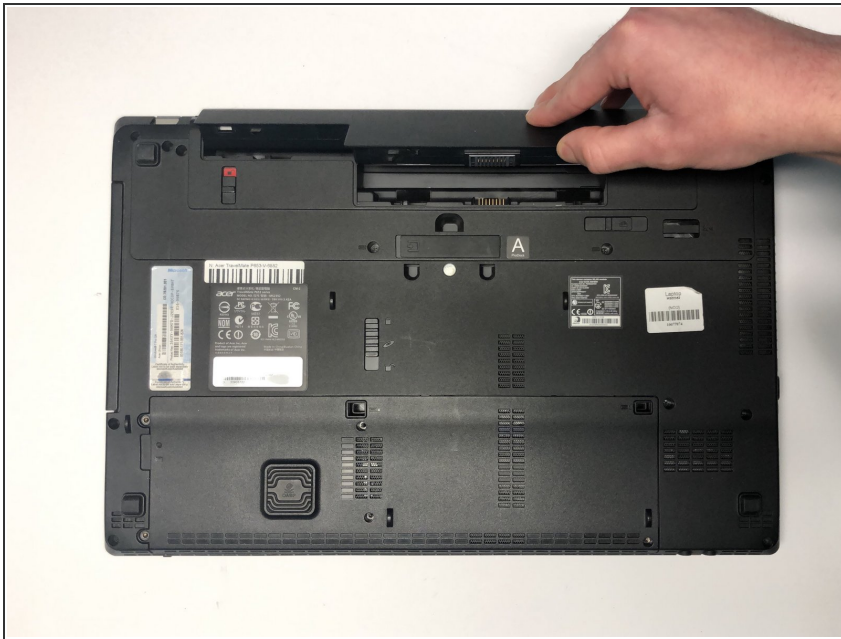

- Lift the battery up.
- Pull out the battery.

Step 4 — Base Door

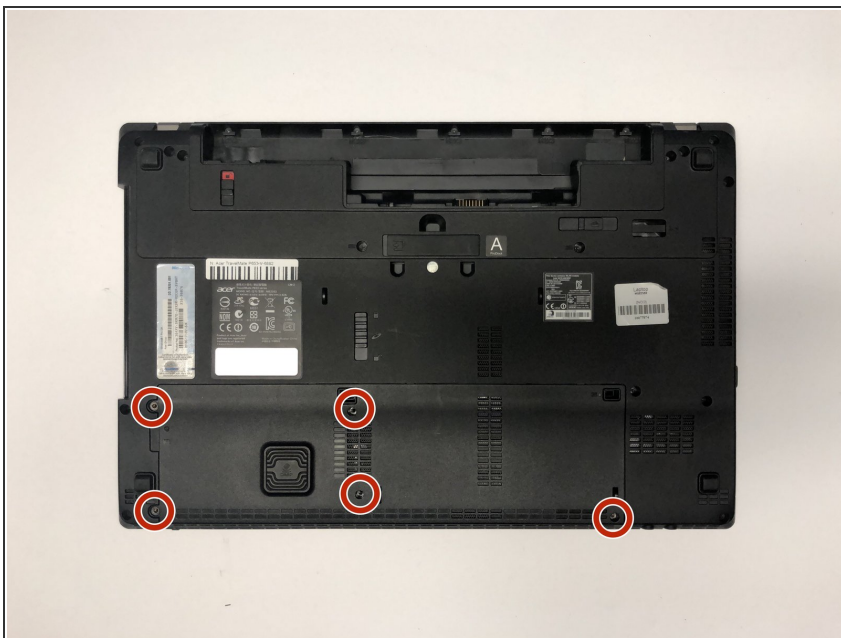

- Remove the five 7mm Phillips #1 screws.



Step 5



- Use the opening tool to separate base door from the bottom of the laptop.

⚠ Be careful not to bend or crack the plastic back cover.


Step 6

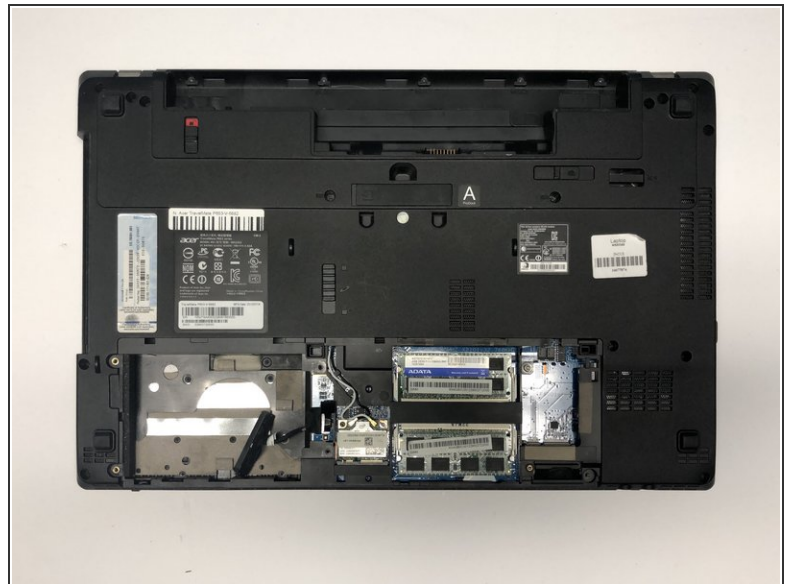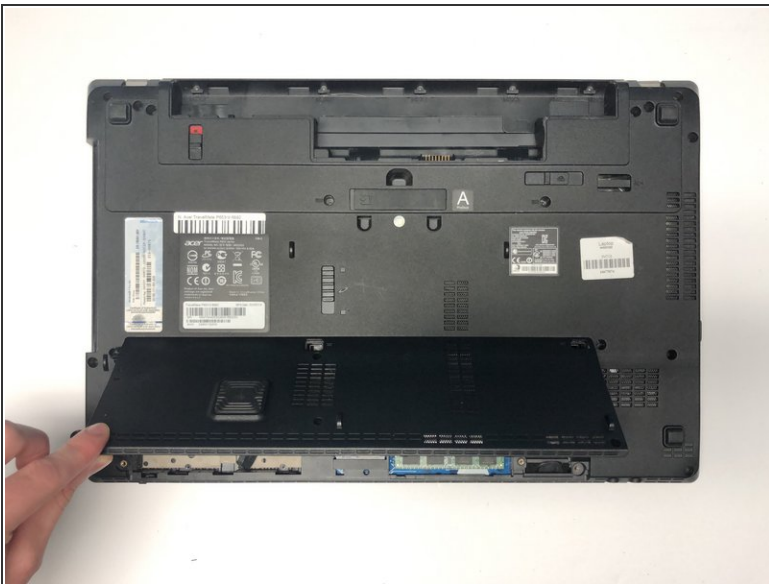

- Gently pry open the base door by pushing up.
- Pull out the base door.




⚠ Be careful not to bend or crack the plastic back cover.

Step 7 — RAM

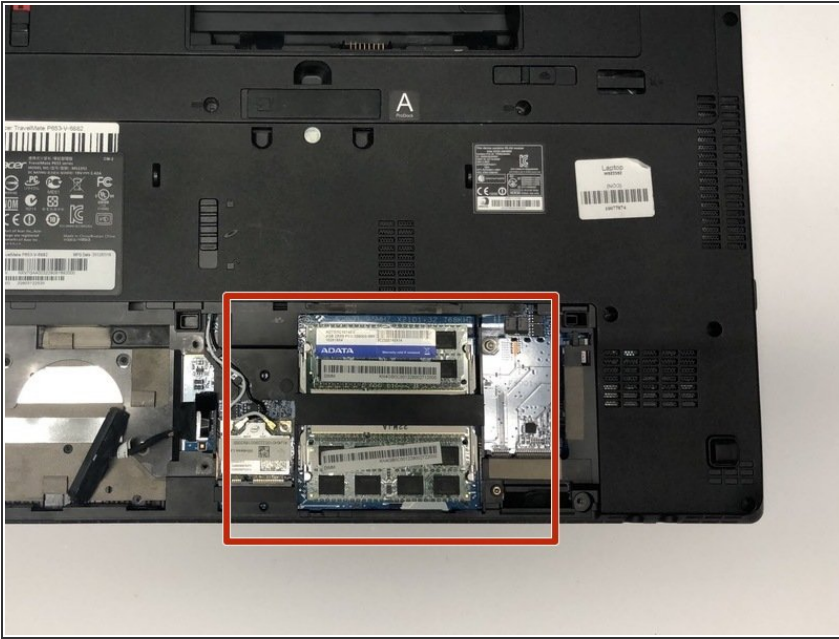

- Locate the two RAM sticks on the bottom of the laptop.

Step 8

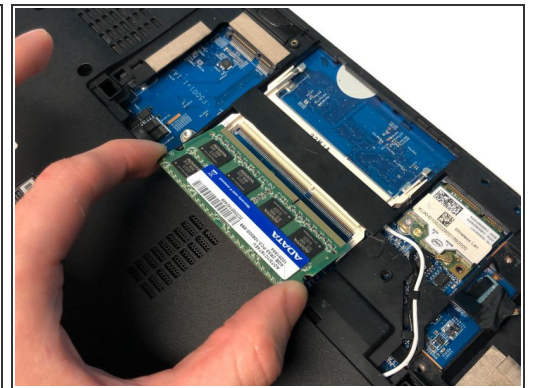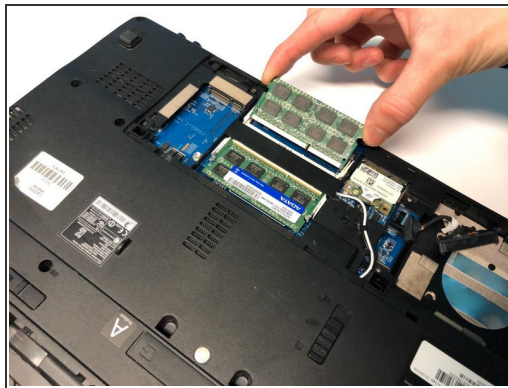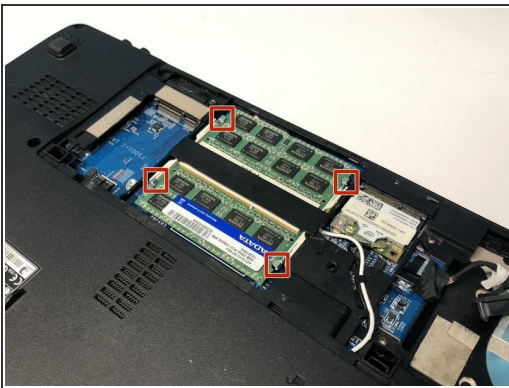

- Pinch the two metal pieces holding the RAM sticks in place outwards.
 - Holding the sides of the RAM, slide the RAM sticks out.
- ⚠ Be careful not to touch the gold connection pins on the RAM sticks, as this could damage the RAM

To reassemble your device, follow these instructions in reverse order.