



Dell Latitude E6530 Motherboard Replacement

This guide will walk users through replacing the Dell Latitude E6530 motherboard.

Written By: Skylar Kemper



INTRODUCTION

This guide will walk users through replacing the Dell Latitude E6530 motherboard. Refer to troubleshooting page before beginning guide to determine and clarify the problem.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Motherboard




- Open up the Dell Latitude E6530.

Step 2

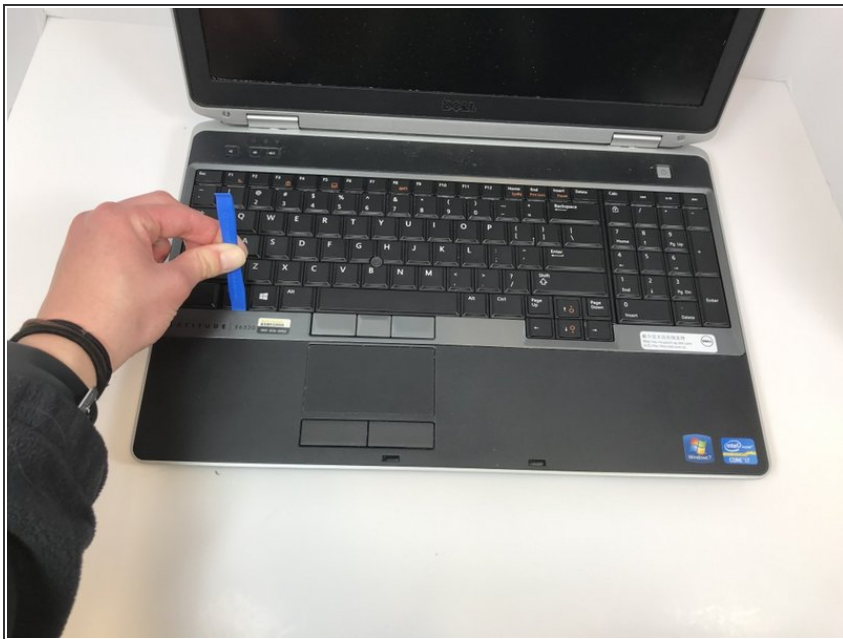


- Use the spludger to lift the grey casing off the Dell Latitude E6530 keyboard.

Step 3

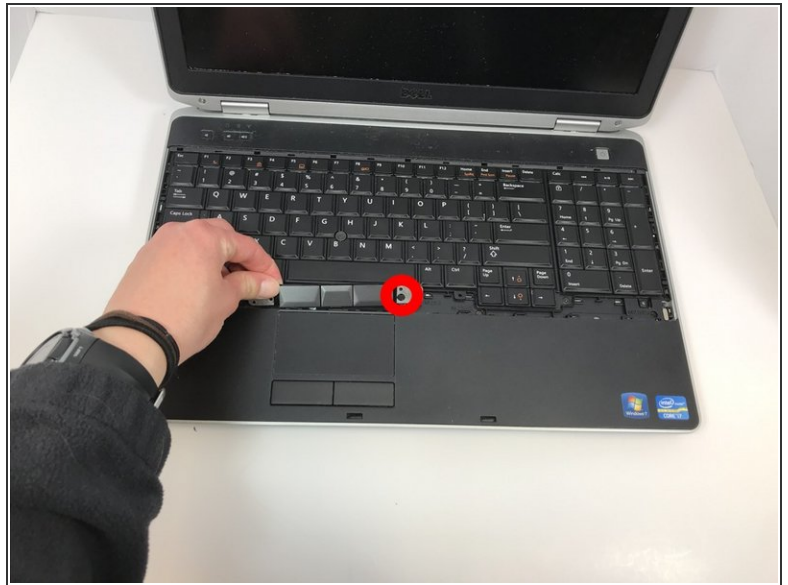


- Using a Phillips #1 Screwdriver, unscrew the button panel.
- Lift the button panel out of the Dell Latitude E6530.

Step 4

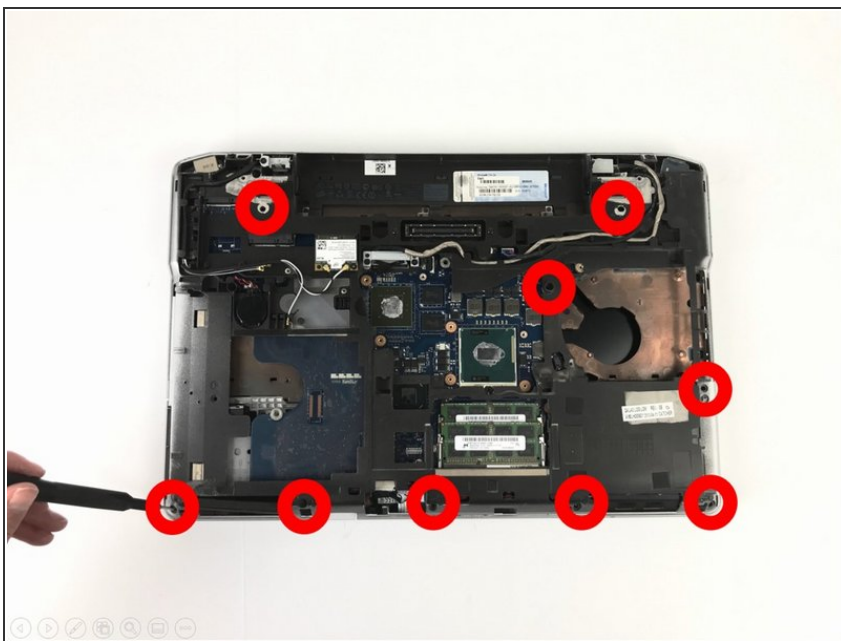

- Flip the computer onto its back.
- Remove the back panel.
- Using a 1mm Phillips Head Screwdriver, remove the screws indicated in the image.

Step 5

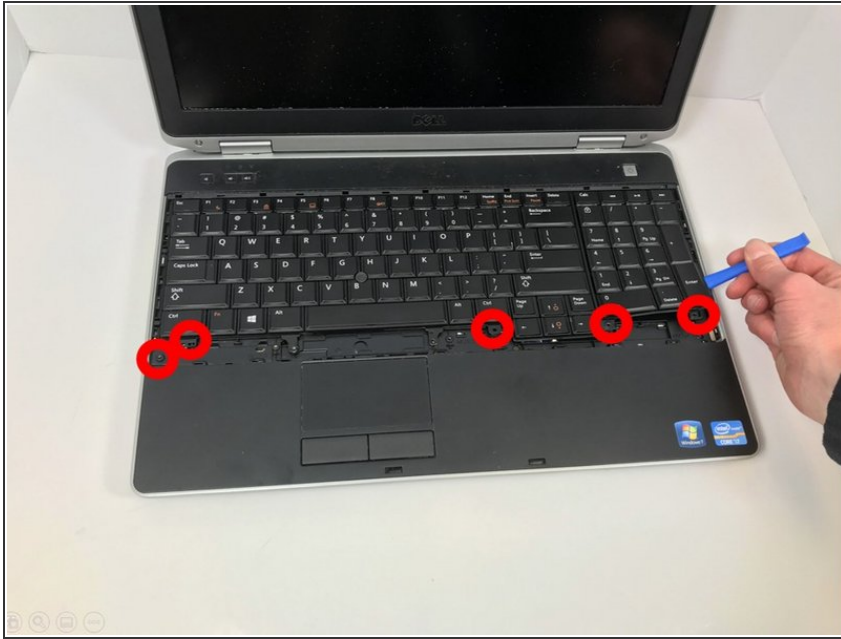

- Using a 1mm Philips Head Screwdriver, remove the screws indicated in the image.
- Use a spludger to remove the keyboard.

Step 6



- Lift off the final casing and remove the motherboard.

To reassemble your device, follow these instructions in reverse order. If problem persists refer to troubleshooting guide and additional links.

