

Ohmeda Engström Display Unit Screen Replacement

This guide will allow users to understand the steps in replacing the display unit screen in the Ohmeda Engström Ventilator.

Written By: ryan love

	On bal	iry					Leak Compensation On	Å 📒	. (200
	Trends Cursor II	D: D: Pros 1 Vert	easured D	lata 15-Jan-2014			Ppeak PEEPe 26 35 5 10 Documentary PeePe		-
	Previous Page View: Graphical I	Time Miles	p Tviexp RR mil Amin 404 15	PEEPe Fi02 cmH20 % 5 50	0 Row 40	F	10 Lesks		-
	Neasured 4 Settings 1	1227 6.1 1228 6.1 1229 6.1	404 15 400 15 403 15 404 15	5 50 5 50 5 50 5 50	5	-	5.9 15 3.0 TVexp ml	15 ⁵ 502 %	-
	Time Scale 12 mm Vent Calculations 11 Normal Screen	1231 60 1232 53 1233 55	381 15 397 15 396 15	5 50 5 50 5 50 5 50	-00 V	r v	394 200 Sporter MVeop Unin	50 4 RR hm	Take Seagabet
	Set duration displayed on each trend page.	1235 53 1236 53 1237 53	335 15 337 15 336 15	5 50 5 50 5 50			0.00 TVexp ml	RSBI Amin/1	
-	volume controlled ventilisti FiO2	n TV	Re	IE	PEEP	Pmax	Compl millomH20	Ram cmH2ONs	Sector Links
•	50	400	15	1:2	5	35	21	16	1
		-		-				1	

INTRODUCTION

Replacing the Display unit Screen is a useful skill when working with the Ohmeda Engström Ventilator. Although this is not frequently needed, the display unit will have to be replaced eventually. This guide is meant to make it easy for anyone to be able to perform this basic task.

For more information on replacing the LCD display, please refer to **page 9-23** (section 9.5.5) in the technical manual.

TOOLS:

• Phillips #0 Screwdriver (1)

Step 1 — Display Unit Screen



 Turn off display unit, the power is located on the top left

Step 2



- Place the Display Unit face down on an anti-static pad. Make sure that the release tabs are fully depressed.
- Loosen four screws (L) on each side of the display unit.
- Remove the rear enclosure and you will be able to see: the fan (26), the connector panel assembly (21), the encoder assembly (12), the battery (5), the speaker (20), and the gasket(28)

Step 3



- Next, unplug all five wires from the display unit screen. These wires are labeled A, B, C, D, E.
- Unscrew ten screws that are circled on the image.

Step 4



- Disconect the backlight harness (G)
- Slide Grommet (H) out of the mounting plate slot
- Remove four screws that support the mounting plate

Step 5



- Lift the the LCD display away from the mounting plate. Pull some of the display ribbon cable (I) to the top side of the plate. Flip the LCD over to the left of the assembly
- Disconnect the ribbon cable (J)
- When replacing the LCD, pull the excess ribbon cable toward the bottom side of the plate as you lower the LCD on to the plate

To reassemble your device, follow these instructions in reverse order.