



Barnes And Noble Nook Glowlight 3 Screen Replacement

Replacing the screen on nook glowlight 3

Written By: Noah Blaut




Step 1 — Screen




- This is the Nook Glowlight 3. It features an eink display with a resolution of 300 ppi. The display is also Touchscreen. It comes with 8GB of Storage and the Total User Available Memory is 6.5 GB. It is also wifi compatible

Step 2

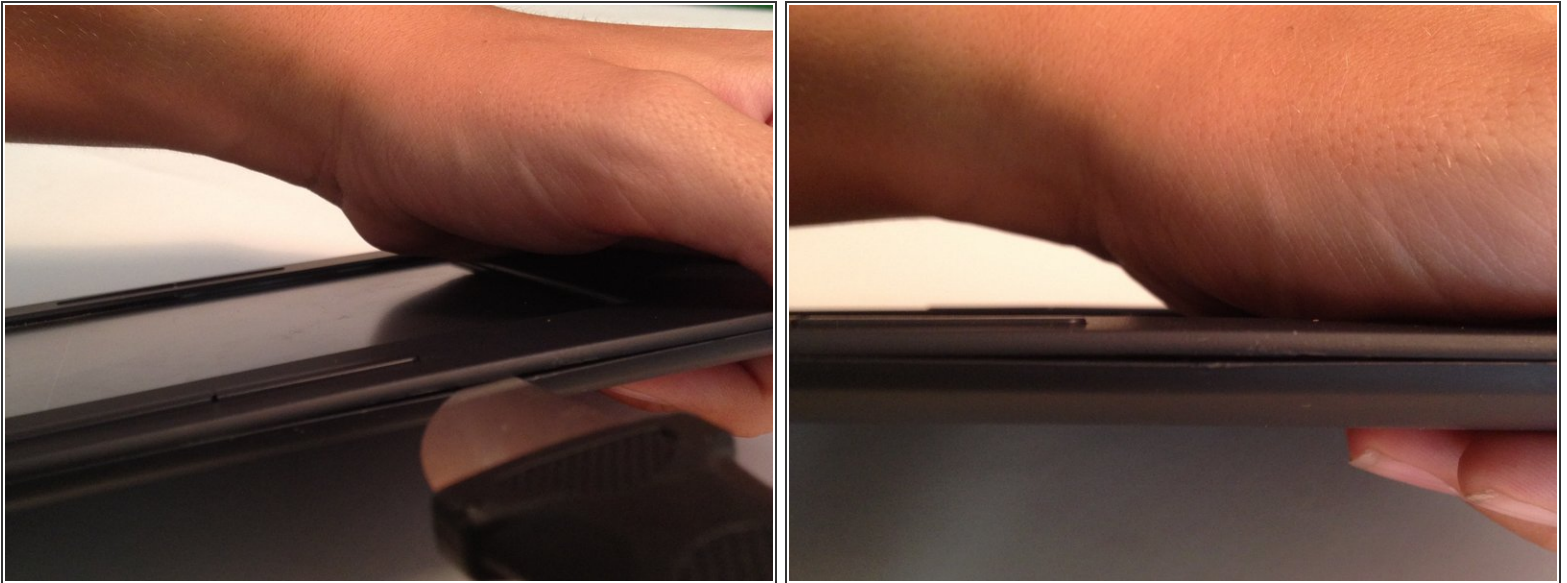

- First Grab Your Jimmy or any other thin wedge tool and slide it along the edge of the device where the two halves meet.
- Push firmly until the Jimmy gets wedged into the crack. Then rotate the Jimmy while sliding it down to separate the clips
- Do This all around the device until the device is able to be split into two halves.

Step 3

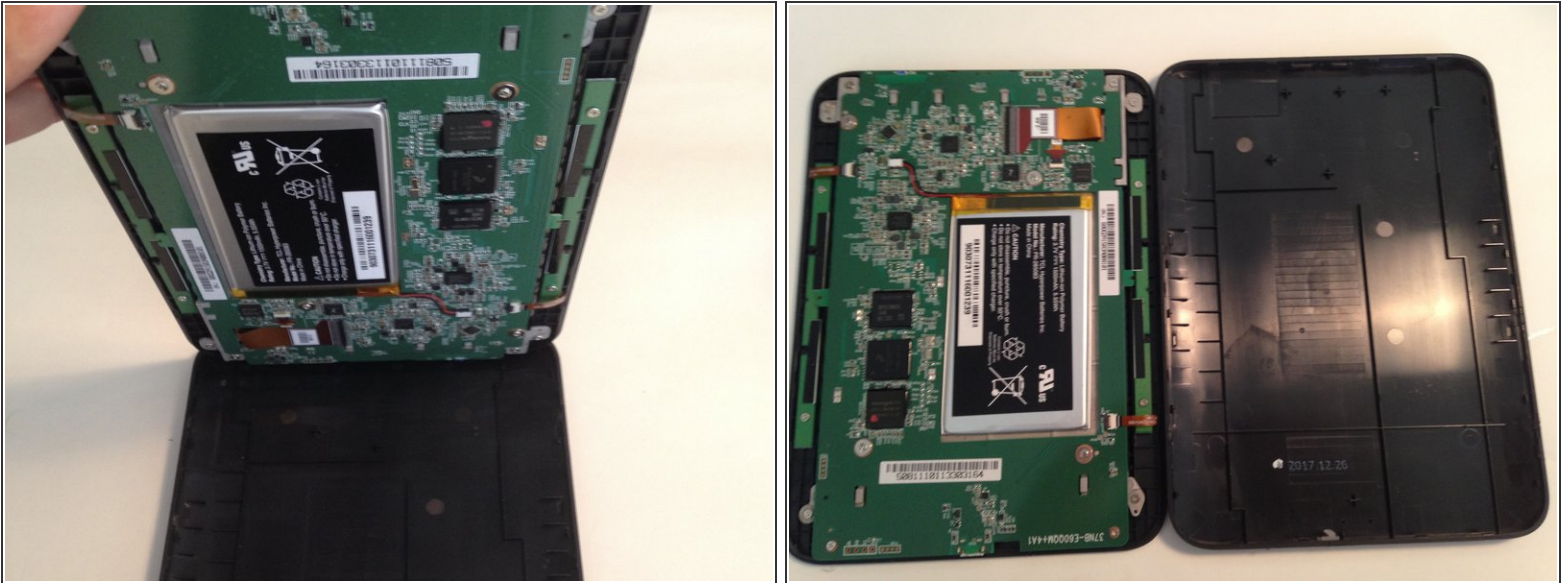




- When both of the halves are able to be separated move the back cover aside.
- (To Reassemble push down on the back cover)

Step 4



- Remove the screws marked in red

Step 5

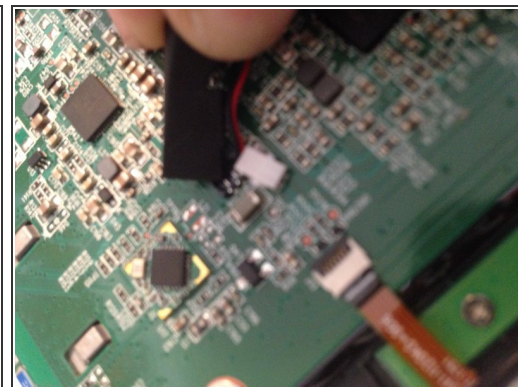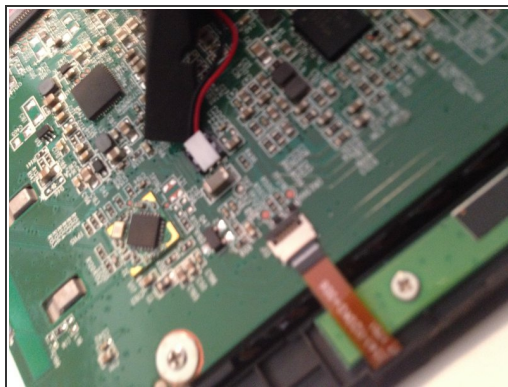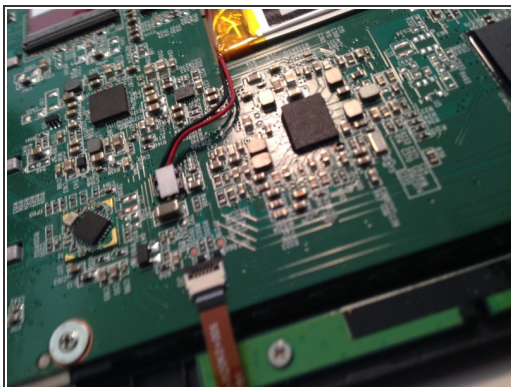


- Disconnect the battery with a flick of the spudger.

Step 6




- Tip: Before removing screws draw an outline of the device and place the screws where they are located on the device.

Step 7

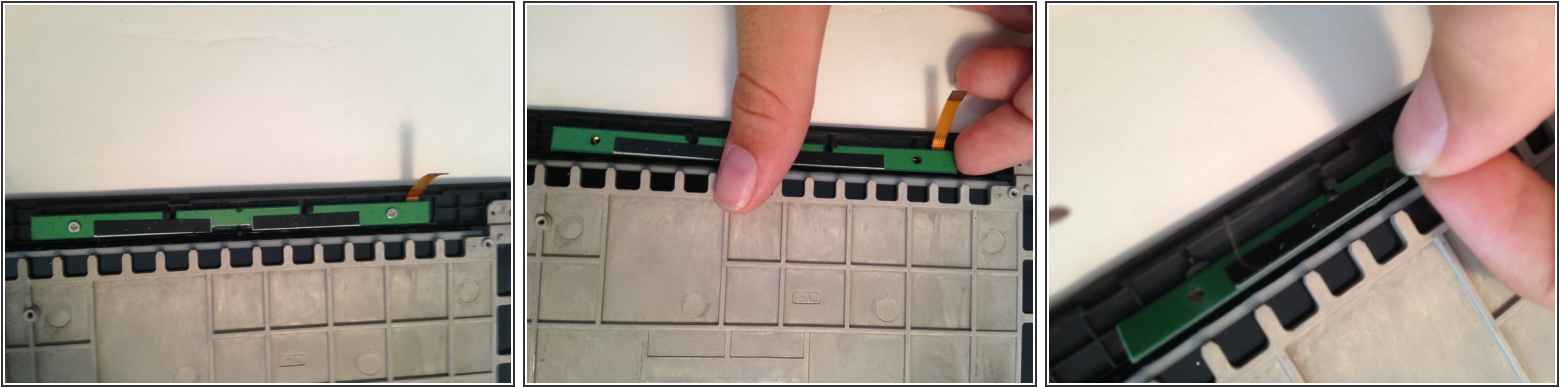



- On both sides, there are two straight and skinny button panels. These control the side up/down buttons. Please disconnect both of these ribbon cables.

Step 8

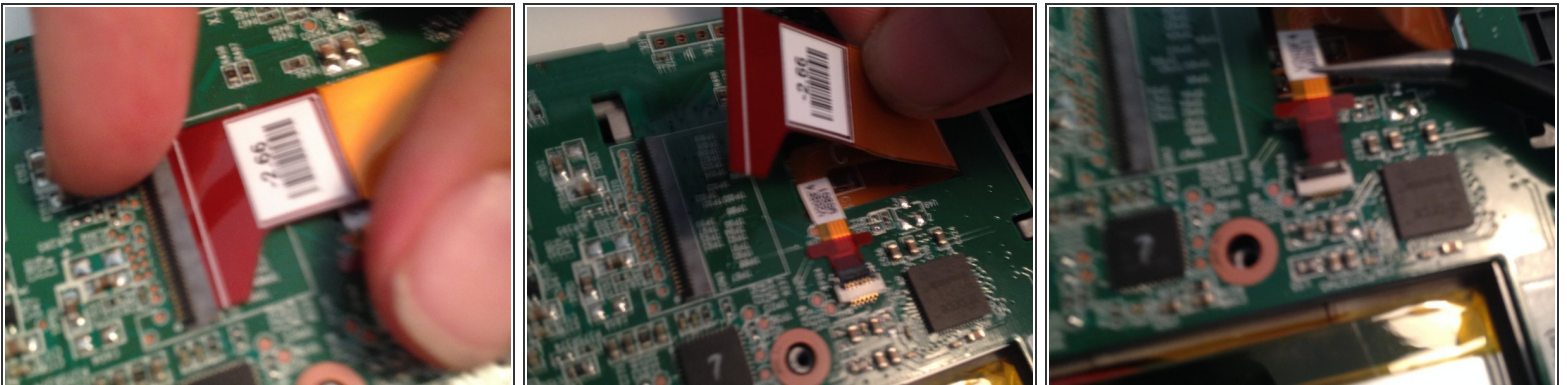


- Now disconnect the display ribbon cables. (one is hidden)

Step 9

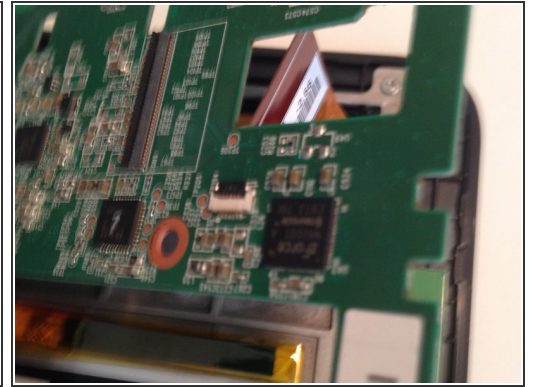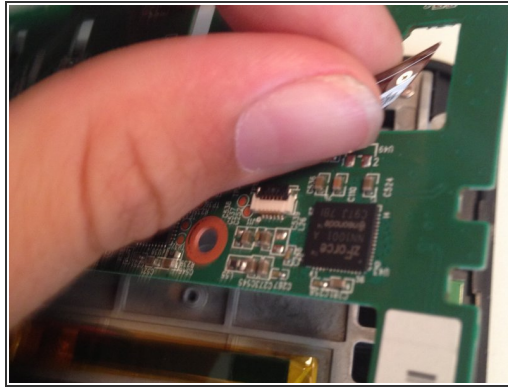

- Now lift the logic board

Step 10

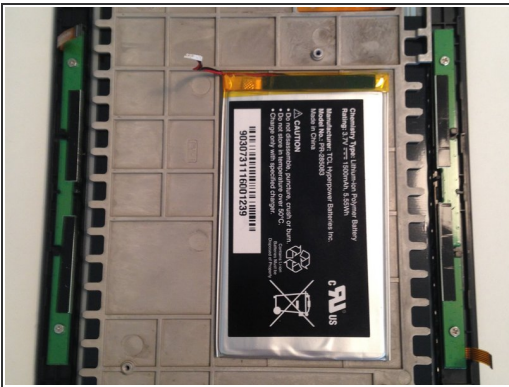

- Now remove the battery by sliding a spudger underneath the battery and breaking the adhesive.

To reassemble your device, follow these instructions in reverse order.