



How to Fix a Schlage Door Lock

Fix a Schlage door lock by simply changing its batteries.

Written By: Dorsa Akrami



INTRODUCTION

This guide will show you how to replace the batteries in a Schlage door lock. The main problem with these locks is their batteries. Sometimes, while trying to open the door, you see a red flashing light instead of a green one, which indicates that the batteries need to be replaced.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [AA Batteries](#) (4)

Step 1 — Battery



- Remove the two 3 mm Phillips #1 screws from the battery cover.

Step 2



- Remove the battery cover slowly.

Step 3



- Remove the batteries one by one from the interior assembly.

Step 4



- Install four AA batteries in the battery pack.

Step 5



- Reinstall the battery cover.

Step 6



- Use the Phillips #1 screwdriver to tighten the screws.