


# How to clean Nokia 3120

This guide shows how to properly clean and maintain the Nokia 3120.

Written By: Rashmili Vemula

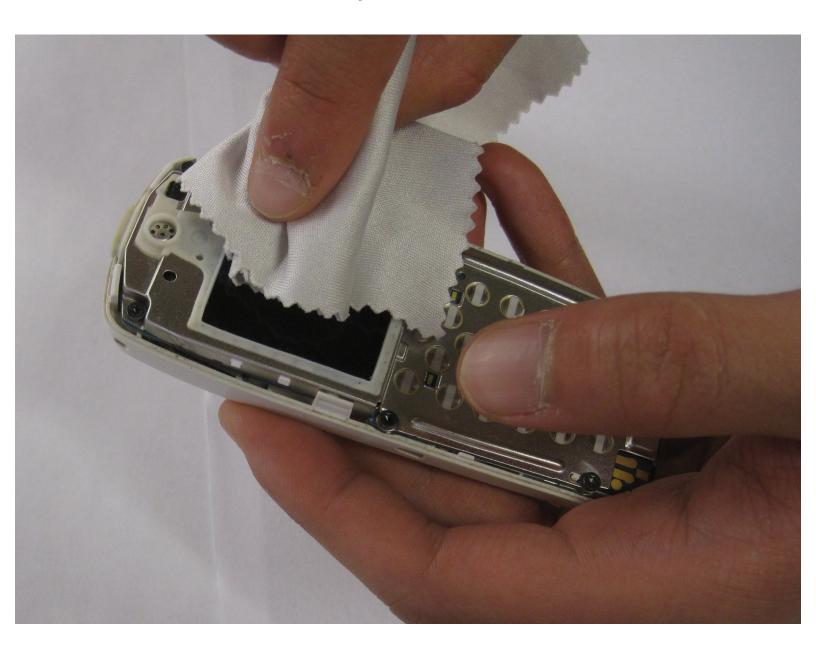

### **INTRODUCTION**

This guide shows how to properly clean and maintain the Nokia 3120. This guide disassembles the front cover of the Nokia 3120 and shows how to clean the face plate.



### Step 1 — Battery Installation








Remove the back cover plate of the phone. To do this press down the lock as you slide the cover toward the bottom of the phone.


### Step 2



 Once the back cover plate is removed, the battery should be exposed. Remove the battery by prying it out. This can be done with your finger-nail or a prying tool.

#### Step 3 — Face Plate

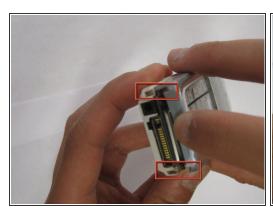


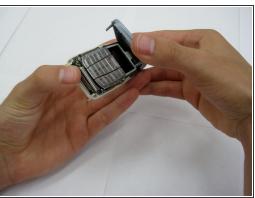



Using your fingernails or another tool, pry the front face plate out along its edges and corners.

### Step 4 — How to clean Nokia 3120

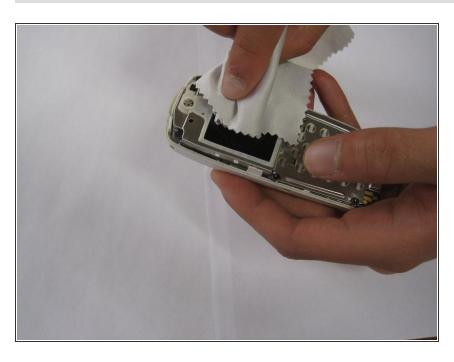

- If dirt has gotten inside the phone, both the lens and the case should be cleaned.
- Once the screen is exposed, spray cleaning solution onto a soft cloth and wipe the screen.
- Make sure to thoroughly dry the screen.

## Step 5



- Repeat the cleaning process on the clear plastic connected to the faceplate.
  - if the screen still appears dirty after a thorough cleaning, parts may have to be replaced. See the troubleshooting guide.

To reassemble your device, follow these instructions in reverse order.