



How to Unclog a Drain Hose

Use this guide to unclog a drain hose for your washing machine.

Written By: Mohammad Sameer



INTRODUCTION

Washing machines are essential for every individual, but sometimes they can have problems such as clogged drain which will cause the washing machine to drain slowly. This is due to leftover materials such as soap residue, dryer lint, grease, and dirt that come from your clothes. To fix this, you need to clean the drainage pipe manually. This can be done with the help of a tool such as a snake drain. With little time and effort, you can fix your clogged washing machine. This guide will provide steps needed to fix the problem and help gain an essential skill.

TOOLS:

- [Drain Snake](#) (1)
 - [Work Gloves](#) (1)
-

Step 1 — How to Unclog a Drain Hose



- Turn off the washing machine.

Step 2



- Adjust the washing machine to make enough space to walk in and clean the drain hose.

Step 3



- Wear proper safety gloves and remove the drain hose carefully.

Step 4



- Pour hot water to help in the process of cleaning the clogged drain.

Step 5



- Use a snake drain and rotate the handle to unclog all the debris.

Step 6



- carefully attach the drain hose back.

To reassemble your device, follow these instructions in reverse order.