


# Sony Clie PEG-NR70 Memory Module Replacement

This guide shows you how to disassemble the device in order to replace the memory module.

Written By: Daniel Soski

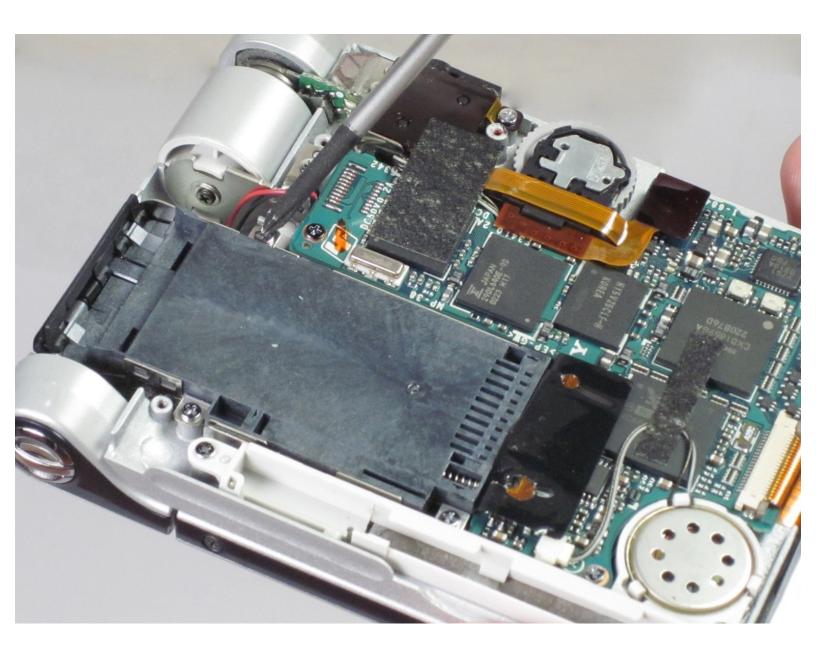

This document was generated on 2020-11-28 02:55:34 AM (MST).

Guide ID: 14442 - Draft: 2014-01-28

## **INTRODUCTION**

If your device is having trouble reading memory you probably need to replace the memory module. This guide will show you step-by-step how to install a new memory module.



# **TOOLS:**

Phillips #00 Screwdriver (1)

#### Step 1 — The Case




- Unscrew the 1.9mm screw located at the top of the device with a Phillips #00 screwdriver.
- it may be helpful to set up a piece of paper to keep track of where removed screws came from.

## Step 2



 Unscrew the 2.5mm screw located on the left side of the device with a Phillips #00 screwdriver.


#### Step 3

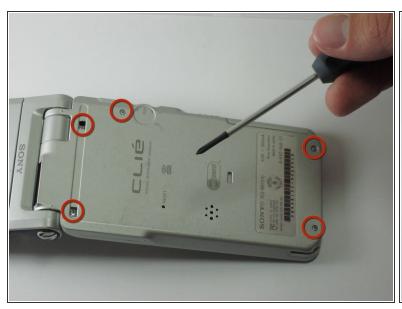




- Unscrew the five 2.5mm screws on the back panel with a Phillips #00 screwdriver.
- Remove the back panel by lifting it away with your hands.

## **Step 4** — **Memory Module**

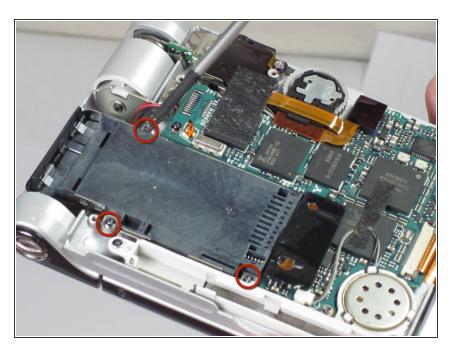

 Holding the memory module in place, unscrew the three 0.9mm screws with a Phillips #00 screwdriver.

## Step 5

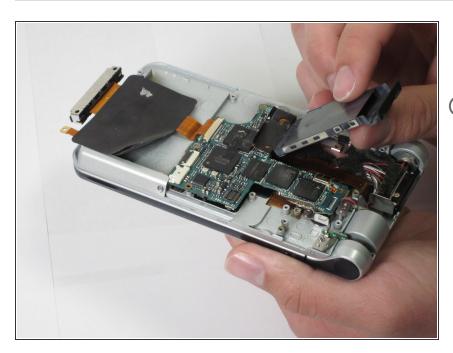

- Lightly grab the memory module and pull it upwards.
- (i) Make sure you grab the end closest to the edge of the device. You may have to wiggle the module a bit to get it to come free.

To reassemble your device, follow these instructions in reverse order.