



Eurobike X1 27.5 Inch Mountain Bike

Handlebar Replacement

How to replace the handlebar on the Eurobike X1 27.5 inch Mountain Bike.

Written By: Guled Omar



INTRODUCTION

If your Eurobike X1 Mountain Bike's handlebar is loose, damaged or in need of replacement, this guide will show you how to replace the handlebar.



TOOLS:

- [5mm allen wrench](#) (1)
 - [4mm Allen Wrench](#) (1)
-

Step 1 — Handlebar



- Use a 5mm Allen wrench to unscrew the brakes.

Step 2



- Unscrew the stem-bolts using a 4mm Allen wrench and remove the faceplate and handlebar from the stem (hold the handlebar as this step is done).

Step 3



- Clean the faceplate cover with a cloth.

Step 4



- Replace the faceplate with the bar on the stem, and screw down the bolts evenly using a 4mm Allen wrench.

Step 5



- Reinstall the handlebar controls (breaks & handle grips).