



Nikon Coolpix S630 Front Cover Replacement

This guide is for the removal of the Nikon Coolpix S630 front cover.

Written By: Aulivia Bouchaleun





TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery Compartment




- The battery compartment is located on the bottom of the camera.
- Place your thumb on the battery door.
- Slide the door away from the camera in the direction the arrow points to.

Step 2 — Battery

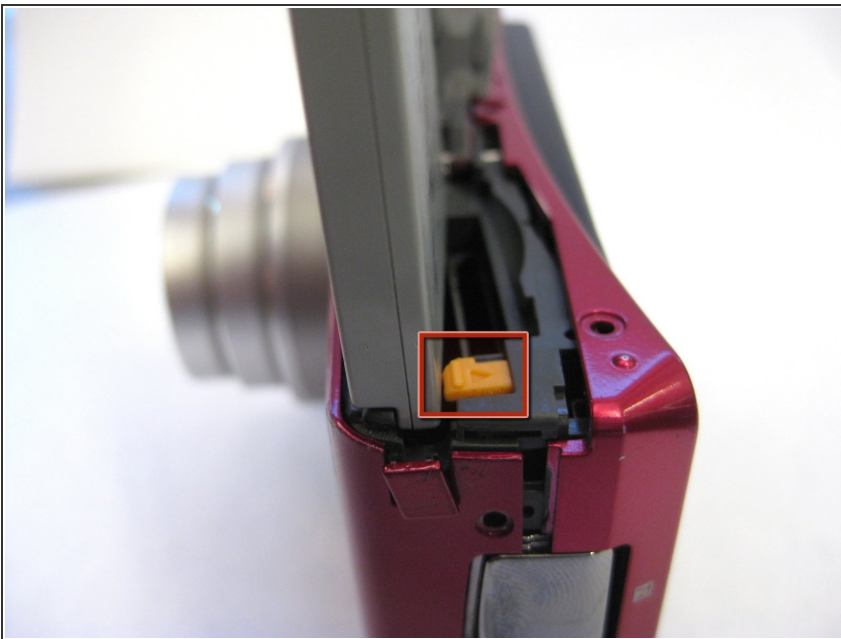

- Slide the yellow tab towards the back of the camera.
- The battery should pop out.
- Remove the battery.

Step 3 — Memory Card

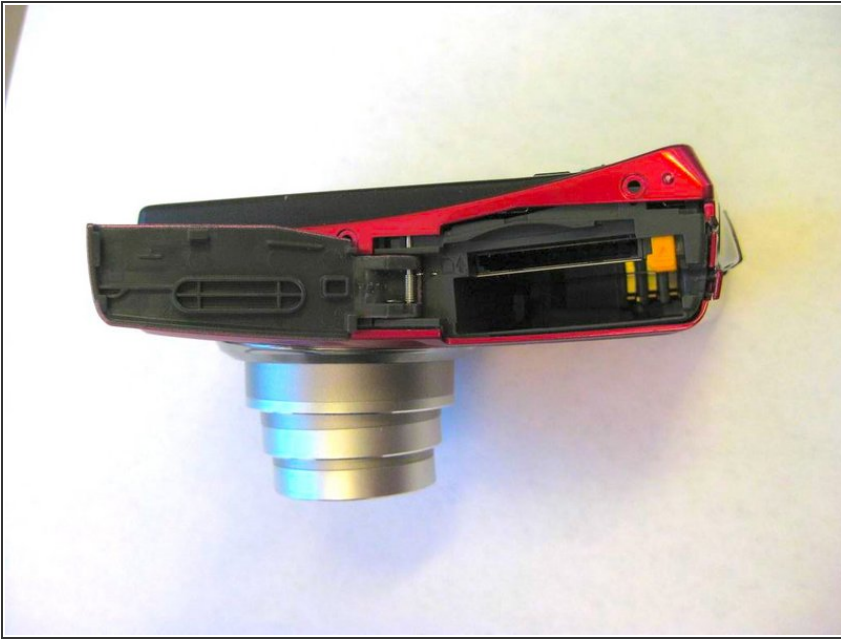


- Press the memory card down into the camera.
- The memory card should pop out.
- Remove the memory card.

Step 4 — Back Cover Removal





- Unscrew the two 3.5mm Phillips screws from the side with the AV outlet.
- Unscrew the 3.5mm Phillips screw from the opposite side of the camera.
- Unscrew the six 3.5mm Phillips screws from the bottom of the camera.

Step 5

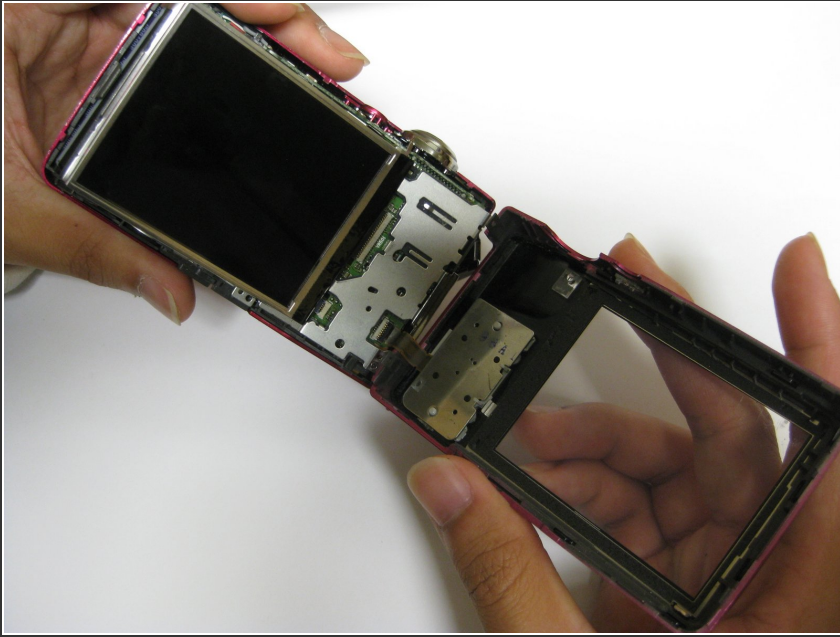

- Carefully remove the back casing from the camera.
- ⚠ Be mindful when removing the back casing as there is a ribbon that still connects the back casing to the motherboard.

Step 6 — Detaching Ribbon

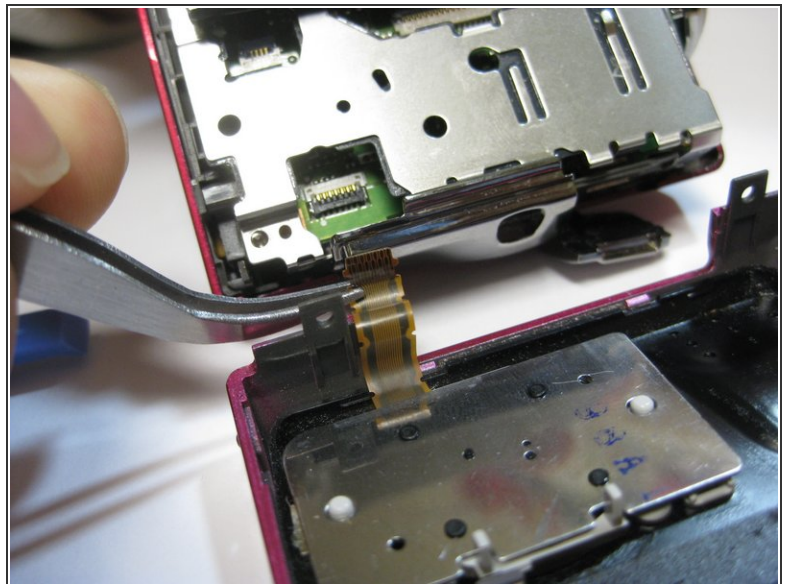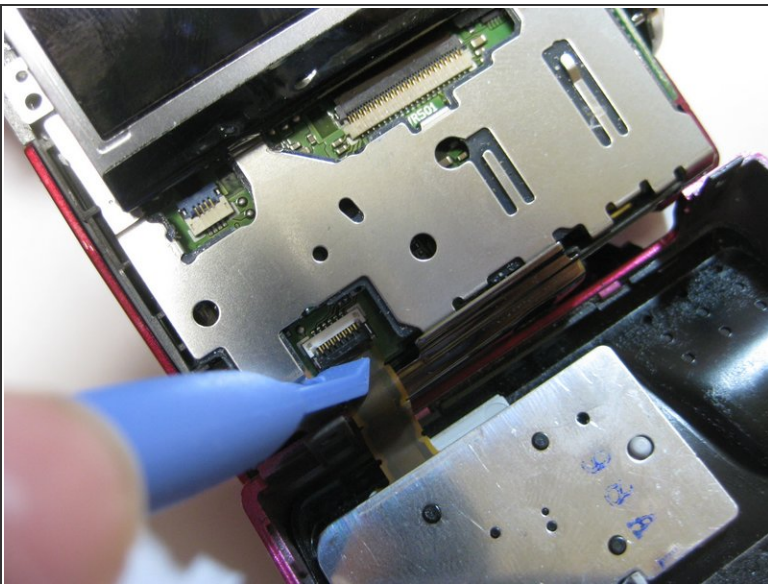

- Place the plastic opening tool underneath the ribbon tab as shown. Gently lift the tab up.
- Gently pull the ribbon from the logic board with tweezers.
- With the ribbon disconnected, the back casing should now be detached from the rest of the camera.

Step 7 — Front Cover



- Locate a small, rectangular flap above the battery cover door.
- Push the small, rectangular flap back through the hole.

Step 8



- Using the plastic opening tool, gently pry open the front cover. Gently remove the front cover.
- ★ Make sure to hold the camera down when removing the front cover.

To reassemble your device, follow these instructions in reverse order.