



# Vivotek FD8169 Dome Cover Replacement

This guide explains how to remove and replace the dome cover of the Vivotek FD8169 camera in case it's cracked or distorting the image.

Written By: Makena Wolfe





## TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Dome Cover



- Loosen the outside screw.

## Step 2



- Press down on the side button, and lift up the top dome.

To reassemble your device, follow these instructions in reverse order.