

Vivotek FD8169 LED Replacement

The LED lights on your Vivotek FD8169 camera will allow you to capture video at night. Replacing them if they are dim is encouraged.

Written By: Makena Wolfe



FTOOLS:

• Essential Electronics Toolkit (1)

Step 1 — Dome Cover



• Loosen the outside screw.

Step 2



 Press down on the side button, and lift up the top dome.

Step 3 — LED



Unscrew screws.

Step 4



• Lift panel straight off.

To reassemble your device, follow these instructions in reverse order.