




# Nest Cam Outdoor S Battery Replacement

How to replace the battery in a Nest Cam Outdoor S security camera.

Written By: Phelix Gaudette

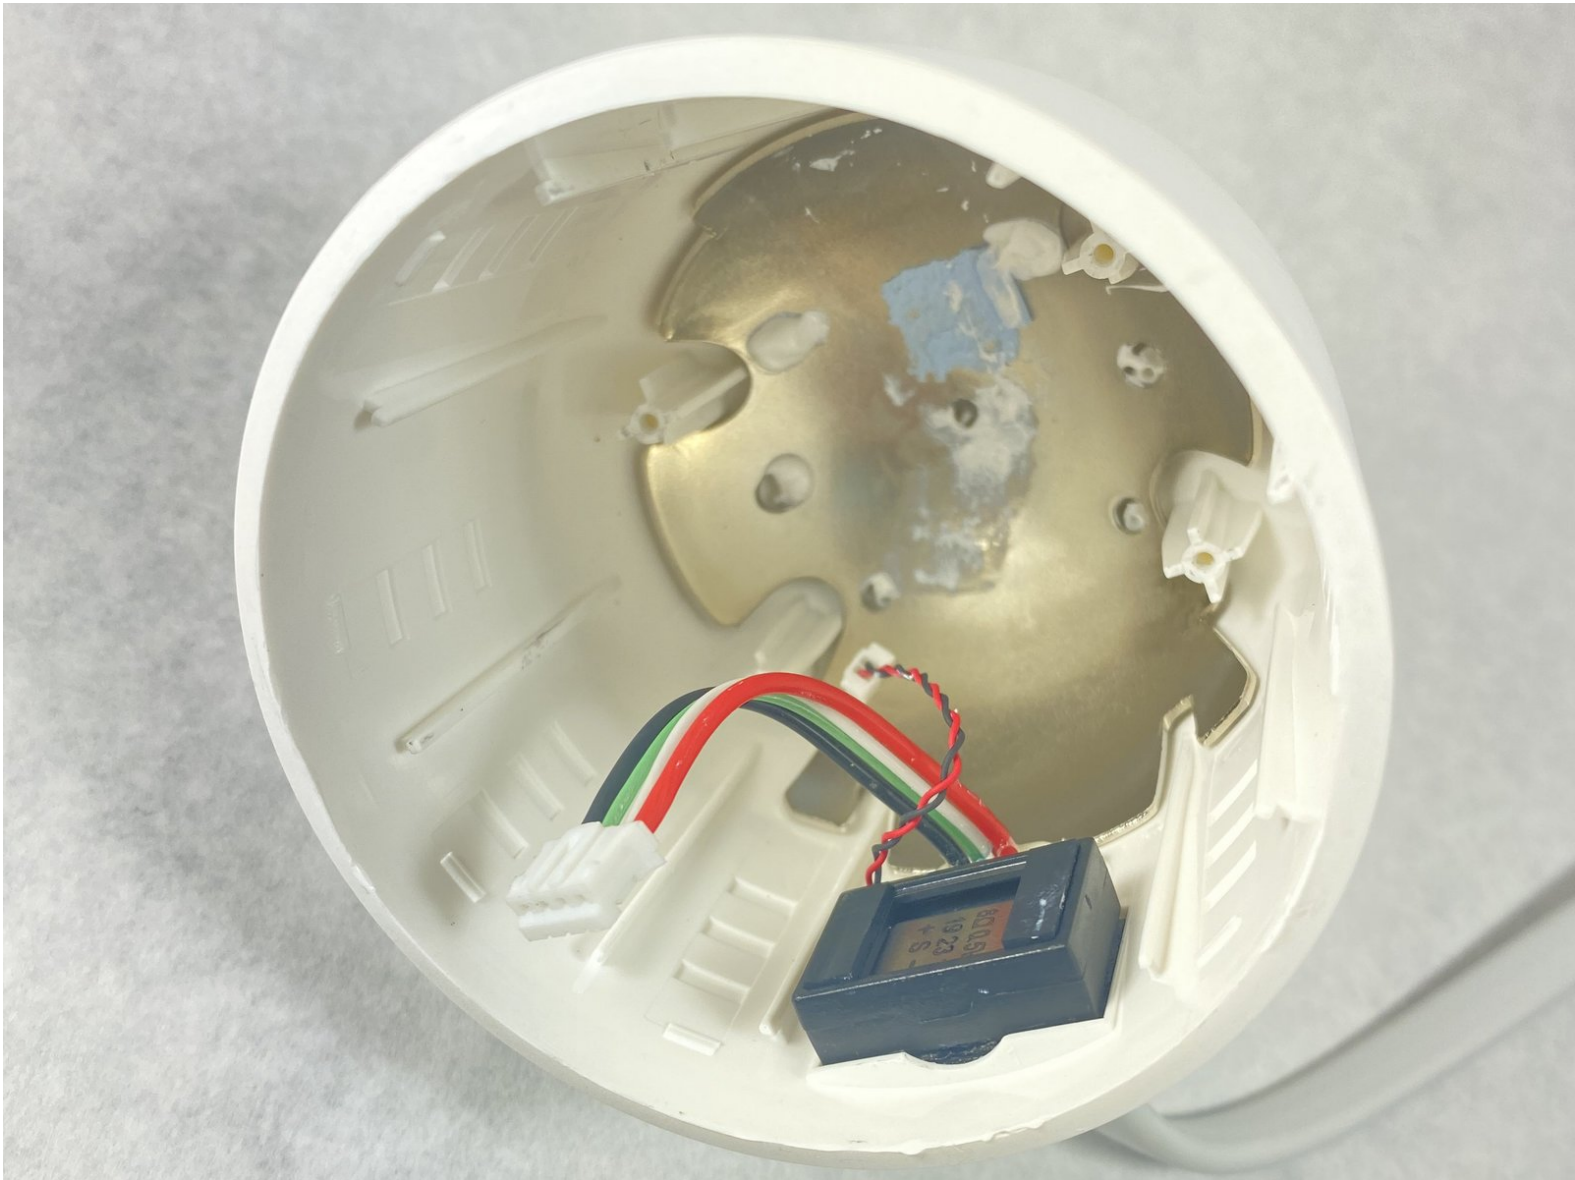






## TOOLS:

- [Essential Electronics Toolkit](#) (1)
-



## Step 1 — Plastic Camera Cover

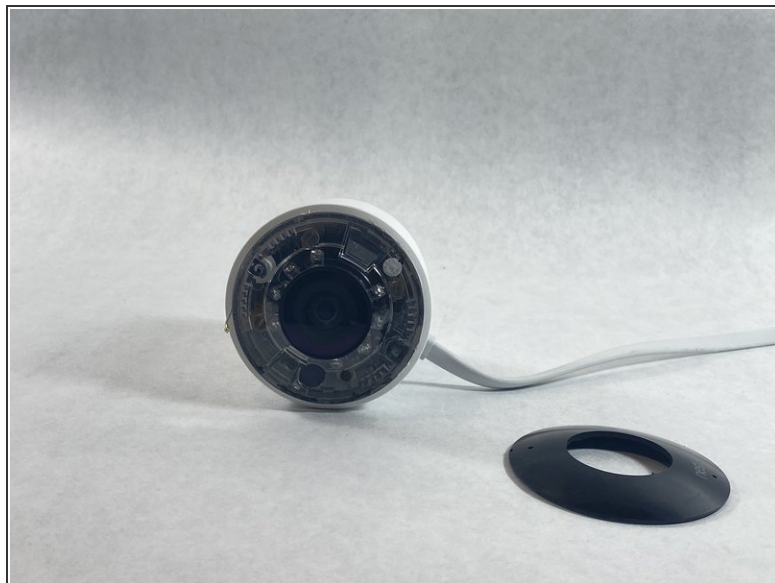

- Wedge a spudger between the black front panel and the white outer shell.
- Slide the spudger around the edge of the panel to pop it off.


## Step 2



- Remove the four small screws from the plastic camera cover.





### Step 3

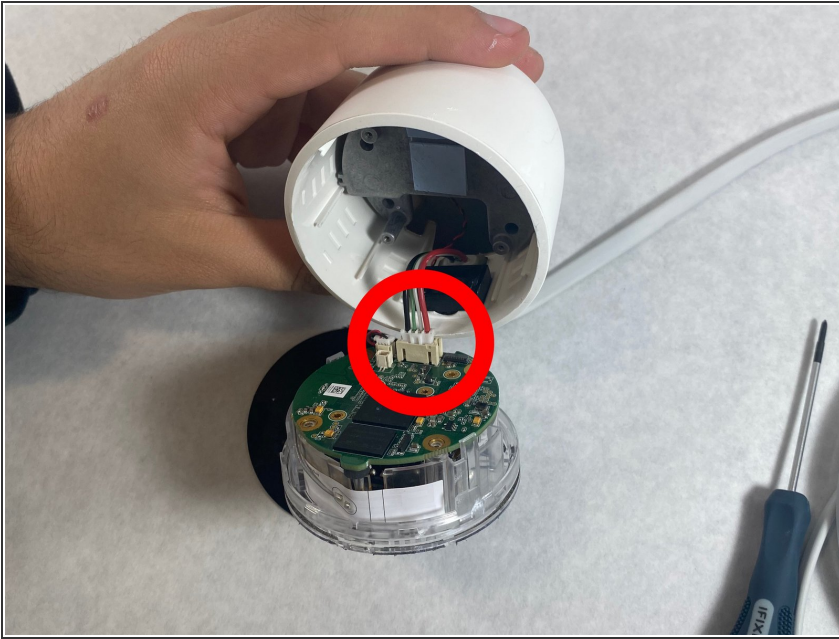

- Disconnect the microphone cable to separate the motherboard from the main camera unit.


### Step 4

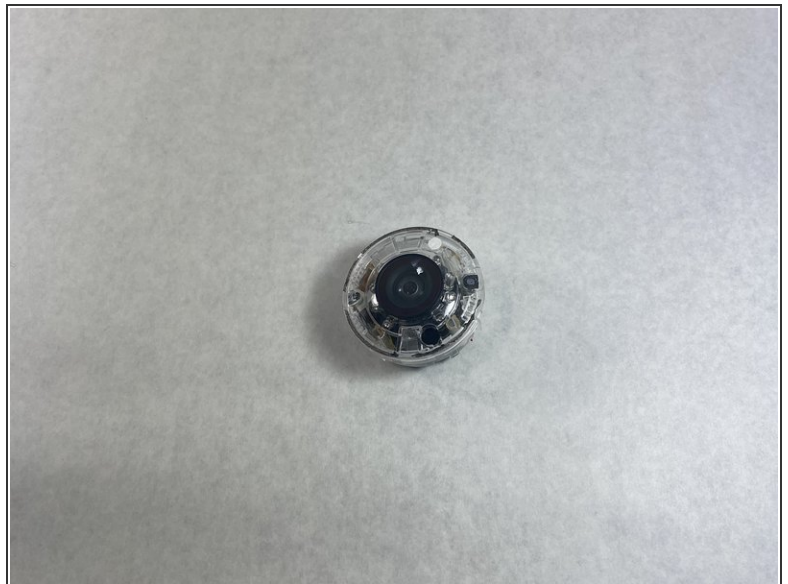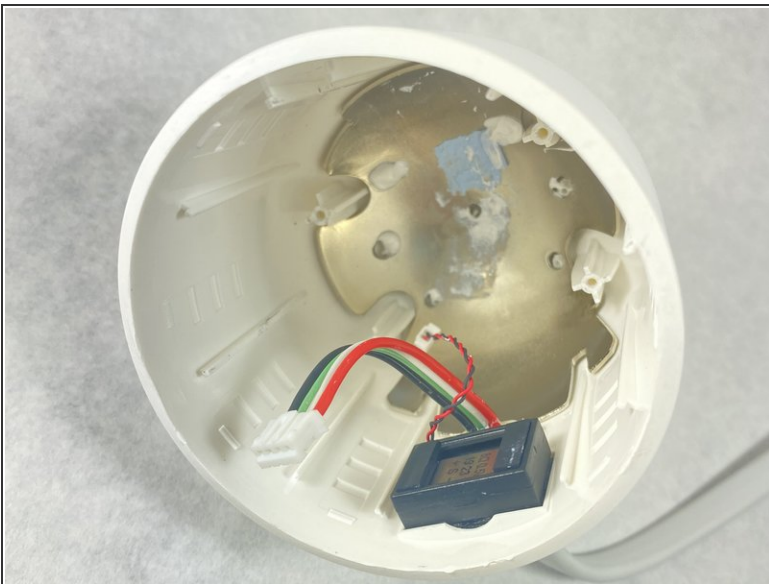

- Remove the plastic camera cover from the device.



## Step 5 — Battery

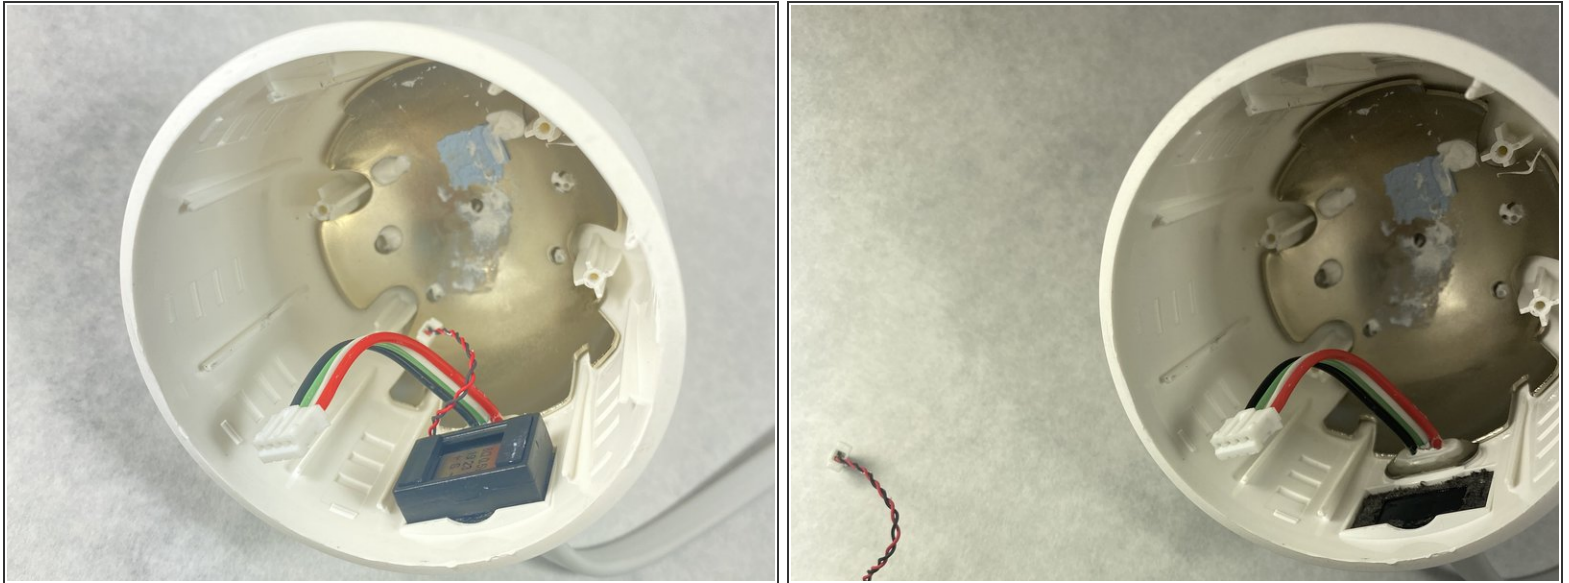

- Wedge a nylon spudger between the white outer shell and the battery.
  - Slowly pull the battery away from the plastic camera cover.
- i** The battery is only held on with glue.

To reassemble your device, follow these instructions in reverse order.