



Nest Cam Outdoor S Plastic Camera Cover Replacement

How to replace the plastic camera cover in a Nest Cam Outdoor S.

Written By: Phelix Gaudette






TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Plastic Camera Cover

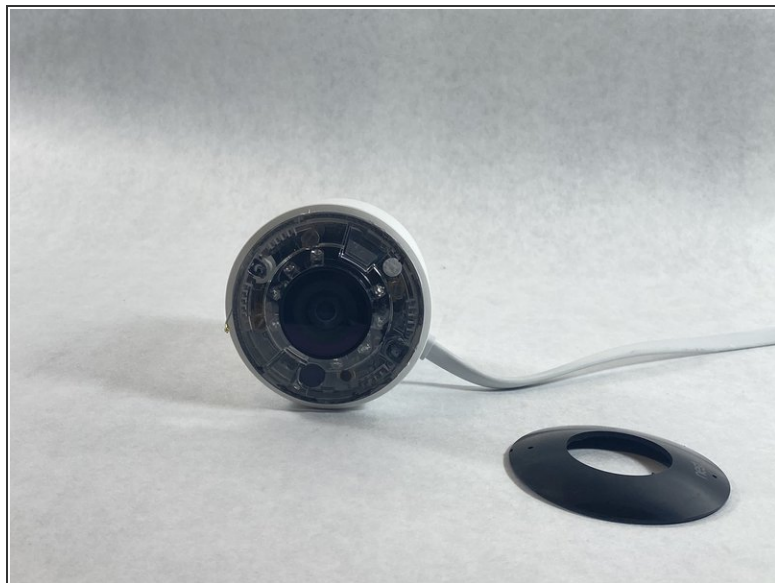


- Wedge a spudger between the black front panel and the white outer shell.
- Slide the spudger around the edge of the panel to pop it off.

Step 2





- Remove the four small screws from the plastic camera cover.

Step 3

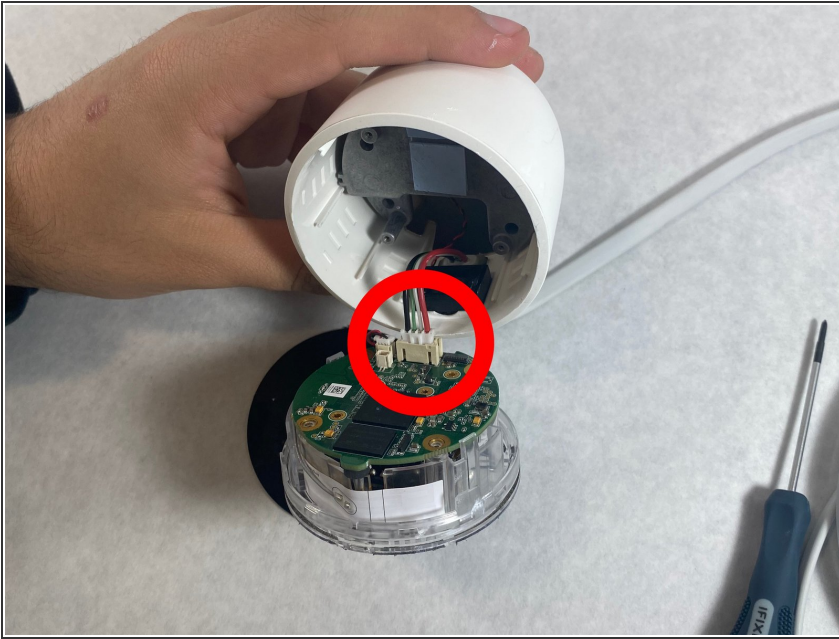

- Disconnect the microphone cable to separate the motherboard from the main camera unit.

Step 4

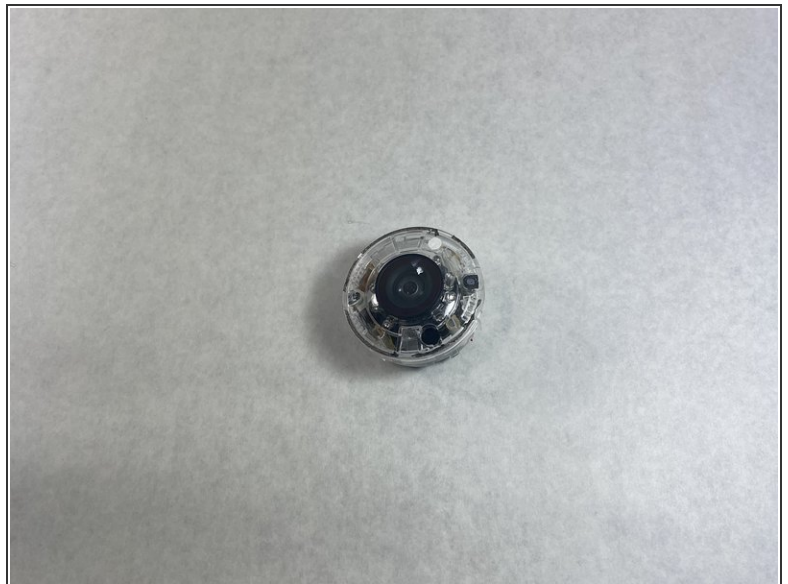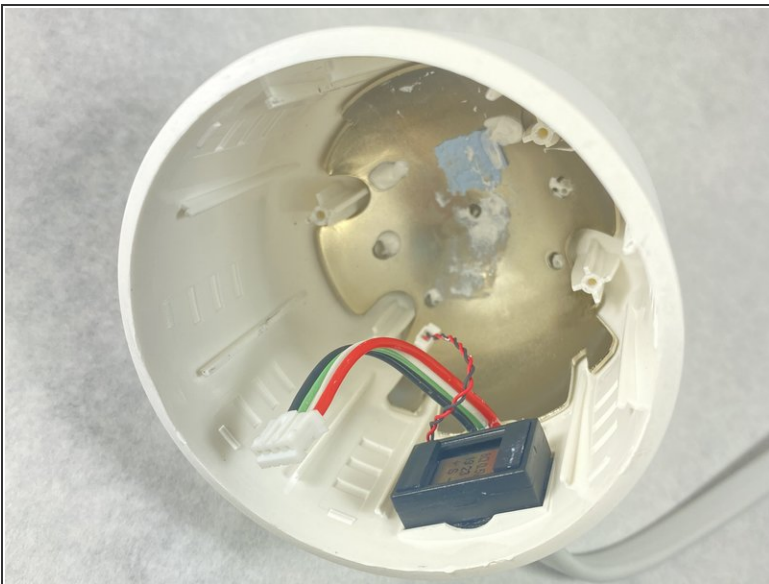

- Remove the plastic camera cover from the device.

To reassemble your device, follow these instructions in reverse order.