



Opening Procedure

Prerequisite-only guide for opening PlayStation game console for service or repair.

Written By: Craig Lloyd



INTRODUCTION

Prerequisite-only guide to open a PlayStation (SCPH-1001) game console, allowing access to internal components for repair or replacement.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Open the Console



⚠ Before you begin, make sure the console is turned off and unplugged.

- Turn the console upside down and remove the five 15.8 mm-long Phillips #1 screws.

Step 2



- While holding the top and bottom halves of the console together, flip the console back over. Lift the top cover straight up to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-25 02:03:03 PM (MST).

